



AdvancedDigital Inc

NOVUS - H.264 HD/SD Standalone Encoder

User Manual

Version 3.01

Copyright

© 2003-2013 AdvancedDigital Inc. All rights reserved.

Contents of this publication may not be reproduced in any form without the written permission of AdvancedDigital Inc.

Notice

The material in this manual is furnished for informational use only, and it is subject to change without notice. It must not be construed as a commitment by AdvancedDigital. AdvancedDigital assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

Trademarks

- DashBoard Control System™ is a trademark of Ross Video Limited.
- openGear™ is a trademark of Ross Video Limited.
- Apple® Mac OS®, Leopard®, and Snow Leopard™ are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.
- Microsoft®, Internet Explorer®, and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and/or other countries.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- All other product names and any registered and unregistered trademarks mentioned in this guide are used for identification purposes only and remain the exclusive property of their respective owners

Environmental Information

The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment. To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, AdvancedDigital encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

Company Address

AdvancedDigital Inc

80 Finch Ave East, suite 5
North York, ON, M2N 4R3
Canada
Telephone +1 416 848 0715

E-mail (Technical Support):

support@advanceddigital.ca

E-mail (General Information):

sales@advanceddigital.ca

Website:

<http://www.advanceddigital.ca>

Contents

Copyright	2
Notice	2
Trademarks	2
Environmental Information.....	2
Company Address	3
Contents	4
Safety Instructions for the NOVUS Appliance.....	6
Electrostatic Discharge (ESD) and ESD Protection	6
Safety Notice and Warnings	6
FCC Notice	6
Other Certifications.....	6
CE Mark Warning.....	7
Installation Safety Notes	7
Introduction.....	9
Product Overview	10
NOVUS Indicators and Switches.....	12
Back Panel	12
Front Panel Indicators	13
Front Panel Default Switch.....	14
NOVUS Operation and Management	16
Product Tab.....	18
Network Tab	19
Network Configuration Tab.....	19
Network Configuration Interfaces Tab	19
Network Configuration DNS Tab.....	21
Network Statistics Tab.....	21
Network Statistics Interface Tab.....	21
Network Statistics DNS Tab.....	22
Encoder 1, Encoder 2 Tabs	23
Encoder Configuration Tab.....	24
Encoder Basic Configuration Tab.....	25
Basic Tab – General Configuration	25
Basic Tab – Video Configuration	26
Basic Tab – Audio Configuration	28
Basic Tab – Secondary Audio Support.....	30
Encoder Advanced Configuration Tab	32
Advanced Tab – Video Parameters.....	33
Advanced Tab – VBI/Ancillary Data Insertion	34
Advanced Tab – Audio Parameters	36
Advanced Tab – Secondary Audio Parameters	38
Advanced Tab – Mux Parameters.....	39
Encoder Connections Tab.....	42
ASI/IP Streaming.....	43
HTTP Live Streaming.....	44

Direct HTTP Streaming	48
RTMP	49
The Apply/Cancel Buttons.....	52
Encoder Statistics Tab.....	53
ASI Outputs Tab	61
ASI Ports: Configuration Tab	61
ASI Ports: Statistics Tab	63
IP Outputs Tab	64
IP Outputs: Configuration Tab.....	64
Active IP Outputs Table.....	70
Managing Unicast MAC Addresses.....	71
IP Outputs: Statistics Tab.....	72
Connections Tab	73
Connections Configuration Tab	73
Source Selection.....	73
Destination Selection	74
Source Selection in the Output Ports	75
The Established Connections Table.....	76
Connection Statistics Tab	77
MPTS Configuration Tab	78
MPTS Configuration Parameters	79
MPTS PID/Program Allocation.....	79
MPTS Statistics Tab	80
Admin Tab	81
Admin General Tab.....	81
Admin Firmware Tab.....	82
Admin Config Files Tab	84
User-Saved Configurations	85
Pre-defined Templates	85
Clear Current Configuration Button	86
Admin Test Packet Generator Tab.....	86
Admin License Keys Tab.....	88
Admin Event Log Tab	90
Control Tab	94
Control Port Configuration Tab	94
Control Port Statistics Tab	95
SNMP Configuration Tab	96
SNMP Statistics Tab	97
Playing Video on a Web Page	98
Web Pages Served by the NOVUS	99
Multicast Streaming.....	101
HTTP Live Streaming.....	102
Direct HTTP Streaming	103
Using a Firewall between the NOVUS and the Internet.....	104
Web Browser Support.....	104

Safety Instructions for the NOVUS Appliance

The AdvancedDigital NOVUS appliance is turned off by using the power switch. Power may still be present in the appliance. To ensure that the appliance is completely shut down, unplug its power cord from its power source.

The AdvancedDigital NOVUS appliance ships with all required components installed. There is no need to open the chassis to add or remove components. Please contact AdvancedDigital regarding any malfunction or failure of the AdvancedDigital appliance.

Electrostatic Discharge (ESD) and ESD Protection

Static electricity can damage boards, and other components. Before connecting or disconnecting any device to the AdvancedDigital NOVUS appliance, we recommend you discharge static electricity by first touching a metal part of a grounded PC.



CAUTION: To reduce the risk of electric shock, do not open chassis; do not defeat or remove the ground pin of the power cord; connect only to a properly grounded ac power outlet. No user-serviceable parts inside. Refer servicing to qualified service personnel.

Safety Notice and Warnings

FCC Notice

This device complies with Subpart B of Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

No Telecommunications Network Voltage (TNV)-connected PCBs shall be installed.

Other Certifications

This class A digital apparatus complies with Canadian ICES-003, Issue 4.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

This device complies with EN 55022 standards.

This device complies with EN 61000-3-2 standards.

This device complies with EN 61000-4-2 standards.

This device complies with CISPR 22 Edition 6.

This device complies with AS/NZS CISPR 22.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Installation Safety Notes

- Do not place the AdvancedDigital NOVUS appliance underneath heavy loads or in an unstable position.
- Do not expose the AdvancedDigital NOVUS appliance under direct sunlight, high humidity or wet conditions.
- Do not use or expose the AdvancedDigital NOVUS appliance around magnetic fields as magnetic interference may affect the performance of the device.
- Do not block the air vents to this device or impede the airflow in any way.



Important Safety Information! Please note the following:

1. The AdvancedDigital NOVUS is intended for indoor use only.
2. In case of emergency, disconnect the power cords.
3. If power cords are not provided:
 - In the United States, use standard computer power cords (as specified below).
 - In Europe, for 230 volt operation, use a cord set marked "HAR" and consisting of a min 3 core H05VVF3G075 cord that has a minimum 0.75 square mm diameter conductors, provided with an IEC 320 receptacle and a male plug for the country of installation, rated 6A, 250V.
4. Do not block the equipment vents.

READ THE FOLLOWING SAFETY INFORMATION THOROUGHLY BEFORE INSTALLING THIS ADVANCEDDIGITAL PRODUCT. FAILURE TO FOLLOW THIS SAFETY INFORMATION MAY LEAD TO PERSONAL INJURY OR DAMAGE TO THE EQUIPMENT.

Power Supply

- This unit must be grounded.
- The unit must be connected to a grounded outlet to comply with product safety standards.
- The grounded socket-outlet shall be installed near the equipment and shall be easily accessible.
- Do not connect the power supply unit to an AC outlet without a ground connection.
- All power cords must be disconnected before servicing.

Power Cords

The plug on the power supply cords is considered to be the equipment disconnect device and must be approved for the country where it is used.

For USA and Canada:

- The cord set must be UL-approved and CSA-certified.
- The attachment plug must be an earth-grounding type with a NEMA 5-15P (15A 125V) plug and a EN60320/IEC320 receptacle.

Introduction

This manual covers the following products:

- The NOVUS-1E - H.264 SD/HD single-channel encoder
- The NOVUS-2E - H.264 SD/HD dual-channel encoder

Both products have the same set of features, and the same user interface. Unless specifically indicated, all features and controls described in this manual apply to both products.

The NOVUS-1E and the NOVUS-2E have the following features:

- Video Inputs: support for composite, SD-SDI, HD-SDI, and 3G-SDI.
- Audio Inputs: support for unbalanced analog audio, and SDI embedded digital audio.
- Outputs: 2 ASI ports and 2 Ethernet ports, supporting 100 Mb/s and 1 Gb/s operation.
- Replication: each encoded stream can be replicated on both ASI ports and 4 times on each Ethernet port.
- Support for UDP/RTP on Ethernet.
- Support for SMPTE 2022 FEC on Ethernet.
- Support for HTTP Direct Streaming and HTTP Live Streaming (HLS).
- Support for RTMP streaming (compatible with Adobe Flash players): RTMP, RTMPS, RTMPE, RTMPT, RTMPTE, RTMPTS
- Closed-Captioning support (both EIA-608 and EIA-708 captions).
- AFD extraction and insertion support.
- Audio Encoding support: MPEG-1 Layer II and AAC-LC¹.
- Support for pre-compressed Dolby AC-3 pass-through embedded in SDI inputs.
- Support for secondary audio (for NOVUS-1E requires option OPT-2AUD).
- Multiplexing support: each output can be configured to carry either encoder as a Single Program Transport Stream (SPTS), or both encoders as a Multi Program Transport Stream (MPTS).
- Two additional Ethernet ports for control and management.

Typical application scenarios for the NOVUS are:

- Contribution and Distribution.
- Professional Broadcasting
- Video Distribution over IP backbones.
- IPTV headends.
- Monitoring.
- High-Quality OTT generation

¹ Other formats, such as Dolby, may be offered in the future.

Product Overview

The NOVUS supports up to two H.264 SD/HD encoders. The encoded transport stream can be routed and replicated to Ethernet and ASI outputs. Both SPTS and MPTS outputs are supported.

The following inputs are available:

- Software-configurable Composite or SDI video inputs
- SDI video inputs support SD-SDI, HD-SDI and 3G-SDI
- Analog unbalanced audio stereo inputs
- SDI embedded audio support
- Two internal test packet generators (which can be used to generate ASI or IP test streams)

The following outputs are available:

- Two ASI outputs
- Two Ethernet outputs, supporting full-duplex 100 Mb/s and 1 Gb/s operation

In general terms, configuring the NOVUS includes the following steps:


Step 1: Configure the encoders.

Step 2: Configure the outputs (ASI or IP).

Step 3: Make connections between inputs and outputs.

The connections between inputs and outputs can be made as part of the input or output configuration steps. The NOVUS supports many-to-many connections.

The overall architecture is depicted below.

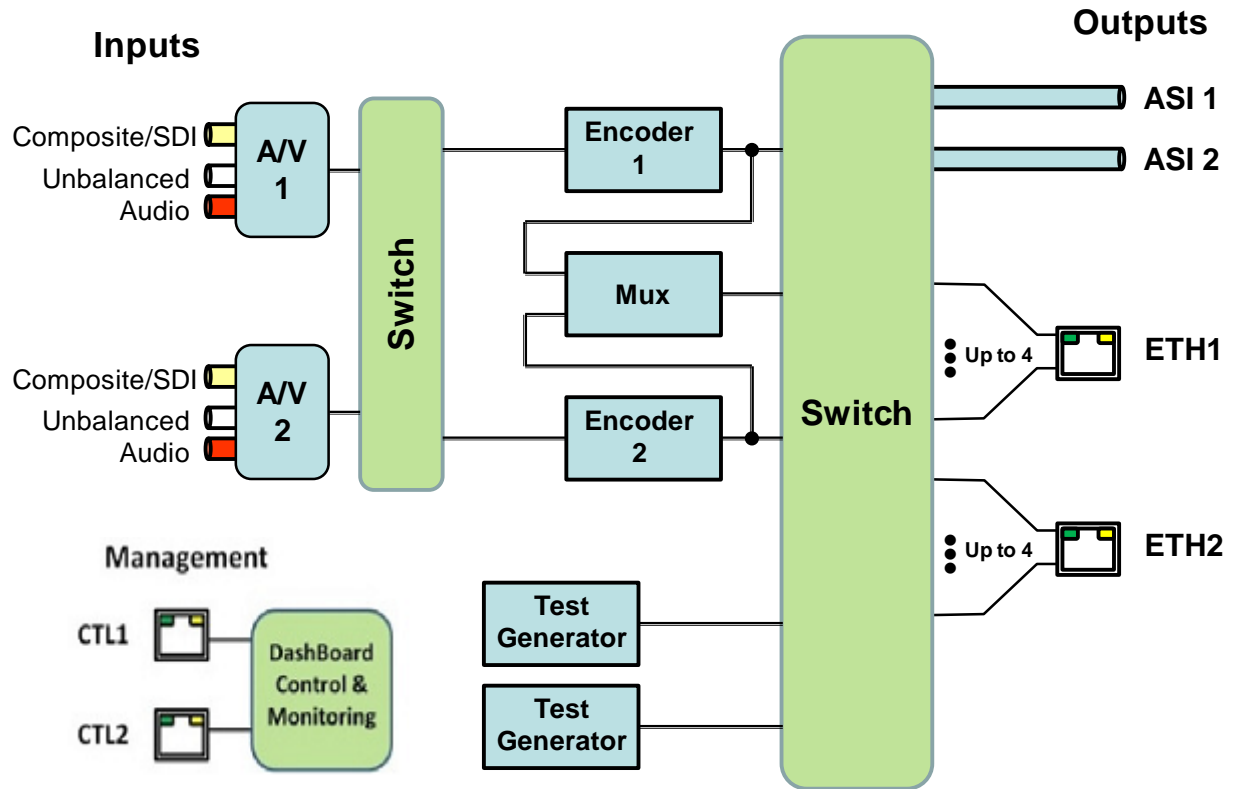

For the remainder of this manual, we will use the term *port* for a physical input/output port (such as ASI or Ethernet), and *stream* for a transport stream present in the port. ASI ports support only one stream, while Ethernet ports support multiple streams.


NOVUS Indicators and Switches

The NOVUS can be used as a desktop encoder, or in a 19" rack-mount tray that holds up to three units:



Back Panel

The NOVUS back panel is depicted below. It includes two software-configurable Composite/SDI video inputs on standard BNC connectors, two ASI output ports on standard BNC connectors, four unbalanced analog audio inputs on standard RCA connectors, two streaming 100/1000 Mb/s Ethernet ports on standard RJ-45 connectors, and two control 10/100/1000 Mb/s Ethernet ports on standard RJ-45 connectors.

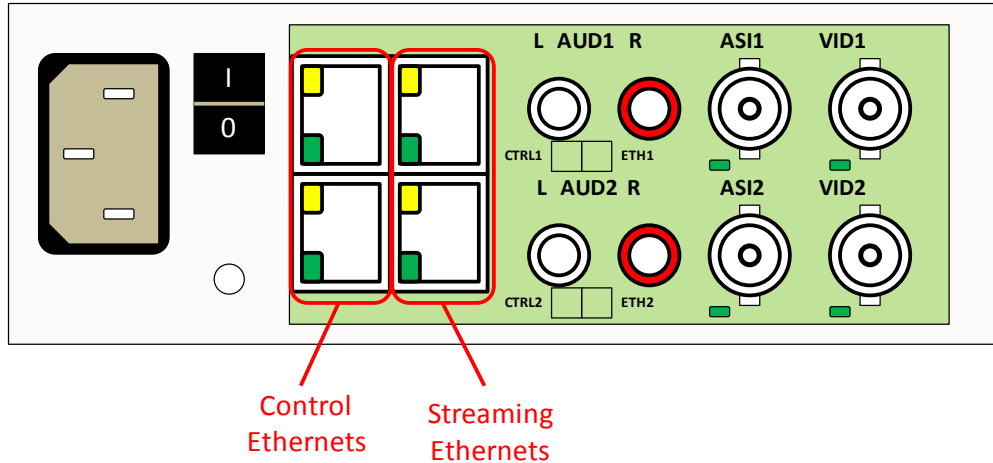

Each of the video inputs has a green indicator LED, with the following states:

- **LED off:** no video signal detected, or input not configured.
- **LED flashing:** video input locked to the video signal.
 - **LED flashing about once per second:** input video is SD.
 - **LED flashing about twice per second:** input video is HD-SDI.
 - **LED flashing about 4 times per second:** input video is 3G-SDI (1080p60).

Each of the ASI output ports has a green indicator LED, with the following states:


- **LED off:** ASI output port is disabled.
- **LED flashing:** ASI output port is configured and enabled.

Each of the Gigabit Ethernet ports has two indicator LEDs, with the following states:

- **Green LED:**
 - **Off:** No link
 - **On:** Link
- **Yellow LED:**
 - **Off:** No activity (transmit and/or receive)
 - **Flashing:** Port is currently transmitting and/or receiving

Front Panel Indicators

A similar set of indicators exist in the front panel of the unit. The layout is depicted below.

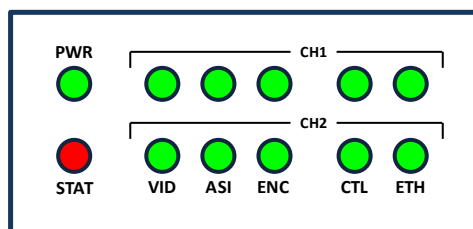

The front panel LED indicators are as follows:

- **STAT:** indicates the overall status of the unit.
 - **Green:** no active alarm
 - **Red:** at least one critical alarm present

When powering up the unit, this LED will be red until the encoder starts operation. At that point, it will turn green if there is no active alarm or stay red if there is at least one alarm.
- **PWR:** indicates that the power is OK.
 - **Green:** power OK
 - **Off:** no power or insufficient voltage
- **CH1/CH2 VID:** these behave exactly the same as the corresponding back panel video input indicators.
- **CH1/CH2 ASI:** these behave exactly the same as the corresponding back panel ASI output indicators.
- **CH1/CH2 ENC:** these LEDs flash if the corresponding encoder is running, with output available for routing to ASI, UDP or RTP. They will not flash if the encoder is stopped (either by explicit configuration or by lack of input) or if it is in one of the Web streaming modes (HTTP Live Streaming or Direct HTTP Streaming).
- **CH1/CH2 ETH and CTL:** these indicate the status of the corresponding Ethernet connection.
 - **Off:** no link
 - **On:** link OK, no activity
 - **Blinking:** link OK, port is transmitting and/or receiving packets

Front Panel Default Switch

The front panel has a recessed switch that can be used to restore the unit to its defaults. Use a pen or a small screwdriver to press this switch.

If the switch is pressed during normal operation, the control port IP address, mask and gateway are restored to the following factory default settings:

- IP Address: 192.168.1.30
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.1.1

The **STAT** front panel indicator will change colors for about 3 seconds to acknowledge the change. Note that this operation **does not** disturb the encoding function or the streaming Ethernet ports (i.e., it is not service-affecting).

If you press and hold this switch when the unit is powered off, and then power up the unit while holding the switch, the following actions will be performed:

-
- The control IP address, mask and gateway are reset to the factory defaults as described above.
 - The unit configuration is cleared.
 - The unit reverts to the factory-installed firmware.

As before, the **STAT** LED will temporarily change color to acknowledge the command. When it changes color, you can release the switch. You can use this feature in the unlikely event of a corrupted firmware upgrade or a corrupted configuration.

NOVUS Operation and Management

The NOVUS is configured using the free Dashboard™ application, which is available for Windows, Apple OS X, and Linux. Dashboard can be downloaded from this link:

<http://www.opengear.tv/?p=94>²

The NOVUS user interface is depicted below. It is divided into a statistics panel on the left, and a configuration panel on the right. Each panel has multiple tabs, corresponding to the various functions in the NOVUS. Note that the **Card State** alarm indicator is also reflected in the green/red **Status** LED in the front of the NOVUS. The Status LED will be green when Card State is green or yellow, and will be red when Card State is red.

The following tabs are available:

- **Product:** this tab provides general information on the NOVUS, including firmware version, uptime, temperatures, and other parameters. It appears only on the Statistics panel.
- **Network:** this tab is used to configure the IP addresses and network information for the Ethernet ports. The statistics side of the panel includes some additional information such as link state.
- **Encoder 1, Encoder 2:** these tabs are used to configure the two encoder channels.
- **ASI Outputs:** this tab is used to configure/monitor the ASI ports.
- **IP Outputs:** this tab is used to configure/monitor the IP Output ports. The configuration panel provides the facilities to create manage and delete ports; the statistics panel includes transmission status information.
- **Connections:** this tab is used to configure/monitor connections. The configuration panel provides facilities to create edit and delete connections; the statistics panel provides a table where the status of all the connections in the unit can be inspected at a glance.
- **Admin:** this tab is used for general administrative functions, such as firmware upgrades, licensing, logs, and configuration management. The Test Packet Generator configuration is also found under this tab.
- **Control:** this tab is used to configure/monitor the control ports and the SNMP functions of the device.

² Please note that DashBoard versions 4.0 and 4.1 have GUI performance problems with the NOVUS. We recommend either version 3.0 or 5.0 or higher with the NOVUS. Contact AdvancedDigital if you need a copy of DashBoard 5.0.

Slot 0: NOVUS

Card state: Encoder 1 Status Stopped

Connection: ONLINE

Admin

Control

IP Outputs

Connections

Encoder 2

ASI Outputs

Product

Network

Encoder 1

Build Date

Jun 4 2012 11:24:24

Supplier

AdvancedDigital Inc.

Product

NOVUS

Software Rev

1.0.1

Serial Number

ac83f0001168

Hardware Version

3

Rear Module

OK

Card Uptime

16 minutes

Ambient Temp

29.63

Internal Temp

46.00

MDP Core Temp

51.00

IP Outputs

Connections

Admin

Control

Network

Encoder 1

Encoder 2

ASI Outputs

Ethernet 1 Configuration

Alarm on Link Loss

☒ Yes ☐ No

IP Address

192.168.0.31

Subnet Mask

255.255.255.0

Default Gateway

192.168.0.1

Interface Speed

Auto-Negotiate

Interface Settings

Apply

Cancel

Ethernet 2 Configuration

Alarm on Link Loss

☐ Yes ☒ No

IP Address

10.10.10.112

Subnet Mask

255.255.255.0

Default Gateway

0.0.0.0

Interface Speed

Auto-Negotiate

Interface Settings

Apply

Cancel

Refresh

Upload

Reboot

Close

Statistics Panel

Configuration Panel



Product Tab

The Product Tab contains basic information about the NOVUS.

The screenshot shows a web interface with a dark grey background and yellow text. At the top, there are several tabs: 'Admin', 'Control', 'IP Outputs', 'Connections', 'Encoder 2', 'ASI Outputs', 'Product' (which is highlighted), 'Network', and 'Encoder 1'. Below the tabs, there is a list of system information fields, each with a label on the left and a value in a yellow box on the right. The fields are: Build Date (Jun 4 2012 11:24:24), Supplier (AdvancedDigital Inc.), Product (NOVUS), Software Rev (1.0.1), Serial Number (ac83f0001168), Hardware Version (3), Rear Module (indicated by a green circle and the text 'OK'), Card Uptime (16 minutes), Ambient Temp (29.63), Internal Temp (46.00), and MDP Core Temp (51.00).

Field	Value
Build Date	Jun 4 2012 11:24:24
Supplier	AdvancedDigital Inc.
Product	NOVUS
Software Rev	1.0.1
Serial Number	ac83f0001168
Hardware Version	3
Rear Module	OK
Card Uptime	16 minutes
Ambient Temp	29.63
Internal Temp	46.00
MDP Core Temp	51.00

The following information is available:

- **Build Date:** Date the firmware image was built.
- **Supplier:** AdvancedDigital Inc.
- **Product:** NOVUS.
- **Software revision:** This indicates the firmware revision currently running. The format is Major Version • Minor Version • Build Number.
- **Serial Number:** This is the serial number of this particular NOVUS.
- **Hardware Version:** This indicates the board version number. All board versions are functionally equivalent.
- **Rear Module:** This indicates the status of the Rear I/O Module. It can have one of the following states:
 -  **OK:** The encoding board is installed. This indicator will be always green.
 -  **Not Installed:** The encoding board is not installed.

- **Card Uptime:** Indicates how long the encoder has been running since it was last rebooted.
- **Ambient Temperature:** Temperature, in degrees centigrade, of the air intake of the NOVUS (measured at the front edge of the NOVUS).
- **Internal Temperature:** Temperature, in degrees centigrade, at the back of the NOVUS.
- **MDP Core Temperature:** Temperature, in degrees centigrade, of the core MediaStorm processing element.

The NOVUS is designed to operate in environments with up to 40°C ambient. There is typically a 5°C temperature raise from the external ambient to the “Ambient Temperature” measured by the NOVUS. If that measurement is at 45°C or higher, action must be taken to cool down the ambient temperature.

 
Network Tab

The Network Tab allows for configuration/monitoring of the two streaming Ethernet ports, and optional configuration of DNS servers.

Network Configuration Tab

The Network Configuration Tab is further divided into the following tabs:

- The **Interfaces** tab is used to set the individual parameters for each of the streaming Ethernet ports.
- The **DNS** tab is used to optionally configure DNS servers.



Configuration Tabs

Network Configuration Interfaces Tab



This tab allows the configuration of the individual streaming ports.

 A screenshot of a configuration window titled "Ethernet 1 Configuration". It contains several settings:

- Alarm on Link Loss:** Two radio buttons, "Yes" (selected) and "No".
- IP Address:** A text box containing "10.10.9.116".
- Subnet Mask:** A text box containing "255.255.255.0".
- Default Gateway:** A text box containing "0.0.0.0".
- Interface Speed:** A dropdown menu showing "Auto-Negotiate" with a downward arrow.
- Interface Settings:** Two buttons, "Apply" and "Cancel".

The following parameters can be configured:

- **Alarm on Link Loss:** If set to Yes, the NOVUS will raise an alarm if this Ethernet interface loses link. The Card State indicator in Dashboard™ and the front Status LED will both be red. If set to No, the NOVUS will still report loss of link in the Statistics page but no alarm will be raised. AdvancedDigital recommends turning on the alarm for ports that are in use; only turn it off if you do not plan to connect that port to a network.
- **IP Address:** Enter the desired IP address for this Ethernet port.
- **Subnet Mask:** Enter the desired subnet mask for this Ethernet port.
- **Default Gateway:** Enter the desired default gateway for this Ethernet port, or 0.0.0.0 if no gateway is available.
- **Interface Settings:** If you make any changes to the IP Address, Subnet Mask and/or Default Encoder fields, the **Apply** and **Cancel** buttons become active. The changes only take effect when you press the **Apply** button. Pressing the **Cancel** button reverts the fields back to their original values. Note that the NOVUS will check the consistency of the data entered and will reject invalid combinations (i.e., combinations where the gateway is outside the interface subnet). Once the **Apply** button is pressed, a status message appears just below the **Cancel** button, as follows:

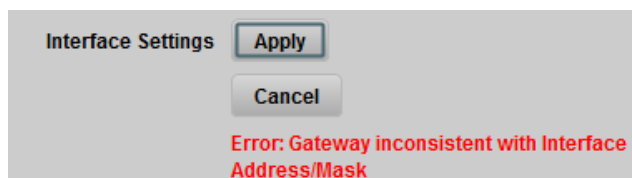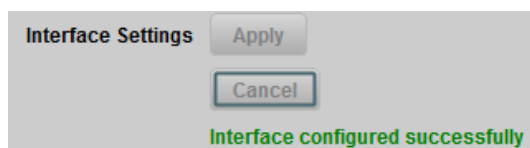


- **Interface speed:** Configures the speed of the interface. The NOVUS streaming Ethernet interfaces only support two modes: 100 Mb/s Full-Duplex and 1 Gb/s Full-Duplex³.
 - **Auto-Negotiate:** The Ethernet port will auto-negotiate the speed.
 - **100 Mb/s Full-Duplex:** Force the port to 100Mb/s Full-Duplex mode. Note that the port will still perform auto-negotiation, but it will only advertise this mode.
 - **1Gb/s Full-Duplex:** restrict the operation to 1Gb/s Full-Duplex mode. Note that the port will still perform auto-negotiation, but it will only advertise this mode.

³AdvancedDigital has disabled support for 10 Mb/s and Half-Duplex modes, as these are unsuitable for MPEG transport over IP applications. Moreover, any modern switch supports at least 100 Mb/s Full-Duplex.

Network Configuration DNS Tab

The DNS tab allows manual configuration of up to two DNS servers. They do not need to be in the same subnetwork as the streaming ports, as long as at least one default gateway is configured. DNS is only used in conjunction with the RTMP output functionality. If you are not using RTMP, there is no need to configure DNS servers.

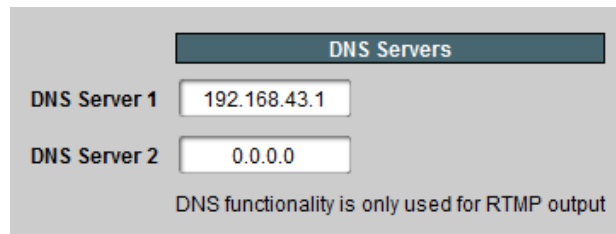

The screenshot shows a configuration window titled "DNS Servers". It contains two input fields: "DNS Server 1" with the value "192.168.43.1" and "DNS Server 2" with the value "0.0.0.0". Below these fields, a note states: "DNS functionality is only used for RTMP output".

DNS server configuration takes effect immediately, as soon as the information is entered.


It is also possible to configure DNS in the Control Tab. DNS Servers configured in the Control Tab have priority over servers configured here.

Network Statistics Tab

The Network Statistics Tab is subdivided into the same tabs as the Network Configuration Tab, namely Interfaces and DNS.

Network Statistics Interface Tab

The Interface Tab reports the current IP configuration of each Ethernet port, as well as their link state and running status.

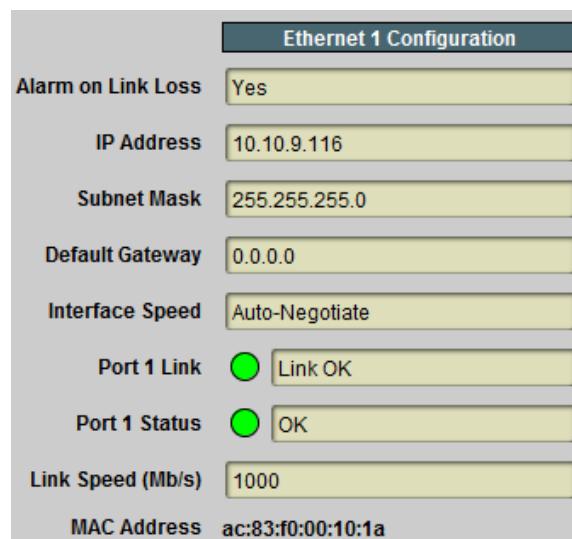

The screenshot shows a configuration window titled "Ethernet 1 Configuration". It contains several fields and status indicators:

- Alarm on Link Loss:** Yes
- IP Address:** 10.10.9.116
- Subnet Mask:** 255.255.255.0
- Default Gateway:** 0.0.0.0
- Interface Speed:** Auto-Negotiate
- Port 1 Link:** Indicated by a green circle and the text "Link OK".
- Port 1 Status:** Indicated by a green circle and the text "OK".
- Link Speed (Mb/s):** 1000
- MAC Address:** ac:83:f0:00:10:1a

The following parameters are reported in the Network Statistics tab:

- **Alarm on Link Loss:** Reports the current setting of this parameter.
- **IP Address:** Reports the current IP Address for the port.
- **Subnet Mask:** Reports the current Subnet Mask for the port.
- **Default Gateway:** Reports the current Default Gateway for the port.
- **Interface Speed:** Reports the current setting for this parameter.
- **Port 1/2 Link:** This indicator has the following states:
 - **Link OK:** The port has established link with the switch.
 - **No Link:** The port does not currently have link. If Alarm on Link Loss is set to Yes, the Dashboard™ Card State will be red and the Status LED in the front of the NOVUS will also be red. If Alarm on Link Loss is set to No, this indicator will still be red, but the alarm will not propagate.
- **Port 1/2 Status:** This indicator is the port overrun status. It has the following states:
 - **OK:** The port is operating normally.
 - **TX Overflow:** In the current configuration, the IP outputs are attempting to transmit more than the port capacity (i.e., the overall output data for this port exceeds the interface speed of 100 Mb/s or 1 Gb/s). The Dashboard™ Card State will be red and the Status LED in the front of the NOVUS will also be red. In this case, reduce the output bit rate (either by reducing the encoder bit rates or by removing output ports). **If this indicator is red, data is being dropped.**
- **Link Speed (Mb/s):** This parameter reports the actual speed negotiated with the switch for the port. If the port has no link, the value reported here is zero.
- **MAC Address:** This reports the MAC address of the Ethernet port.

Network Statistics DNS Tab

The Network Statistics DNS Tab reports the current DNS configuration.

DNS Servers	
DNS Server 1	192.168.43.1
DNS Server 2	0.0.0.0


DNS functionality is only used for RTMP output

Encoder 1, Encoder 2 Tabs


The Encoder 1/Encoder 2 Tabs are used to configure/monitor the individual encoder channels. The parameters in these two tabs are exactly the same.

The NOVUS can be configured with one or two encoder channels (at the time the NOVUS is ordered). It is possible to upgrade a single channel NOVUS encoder to dual-channel by ordering an additional encoder daughtercard from AdvancedDigital.

If an encoder channel is not installed (Encoder 2), both its configuration and statistics windows will indicate that, as depicted below, and no configuration controls will be available.

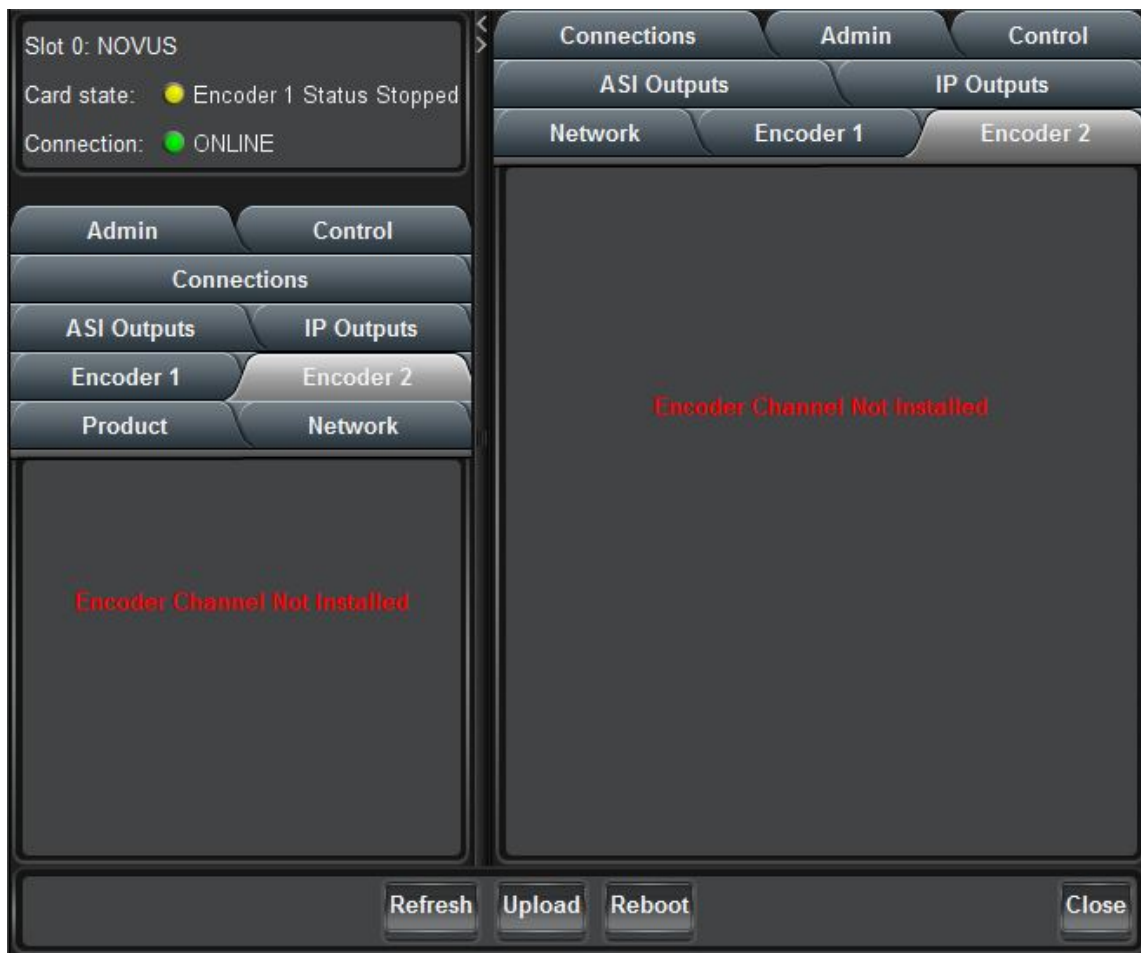

If an encoder channel is installed (Encoder 1) both its configuration and statistics windows will show controlled parameters, as depicted below.

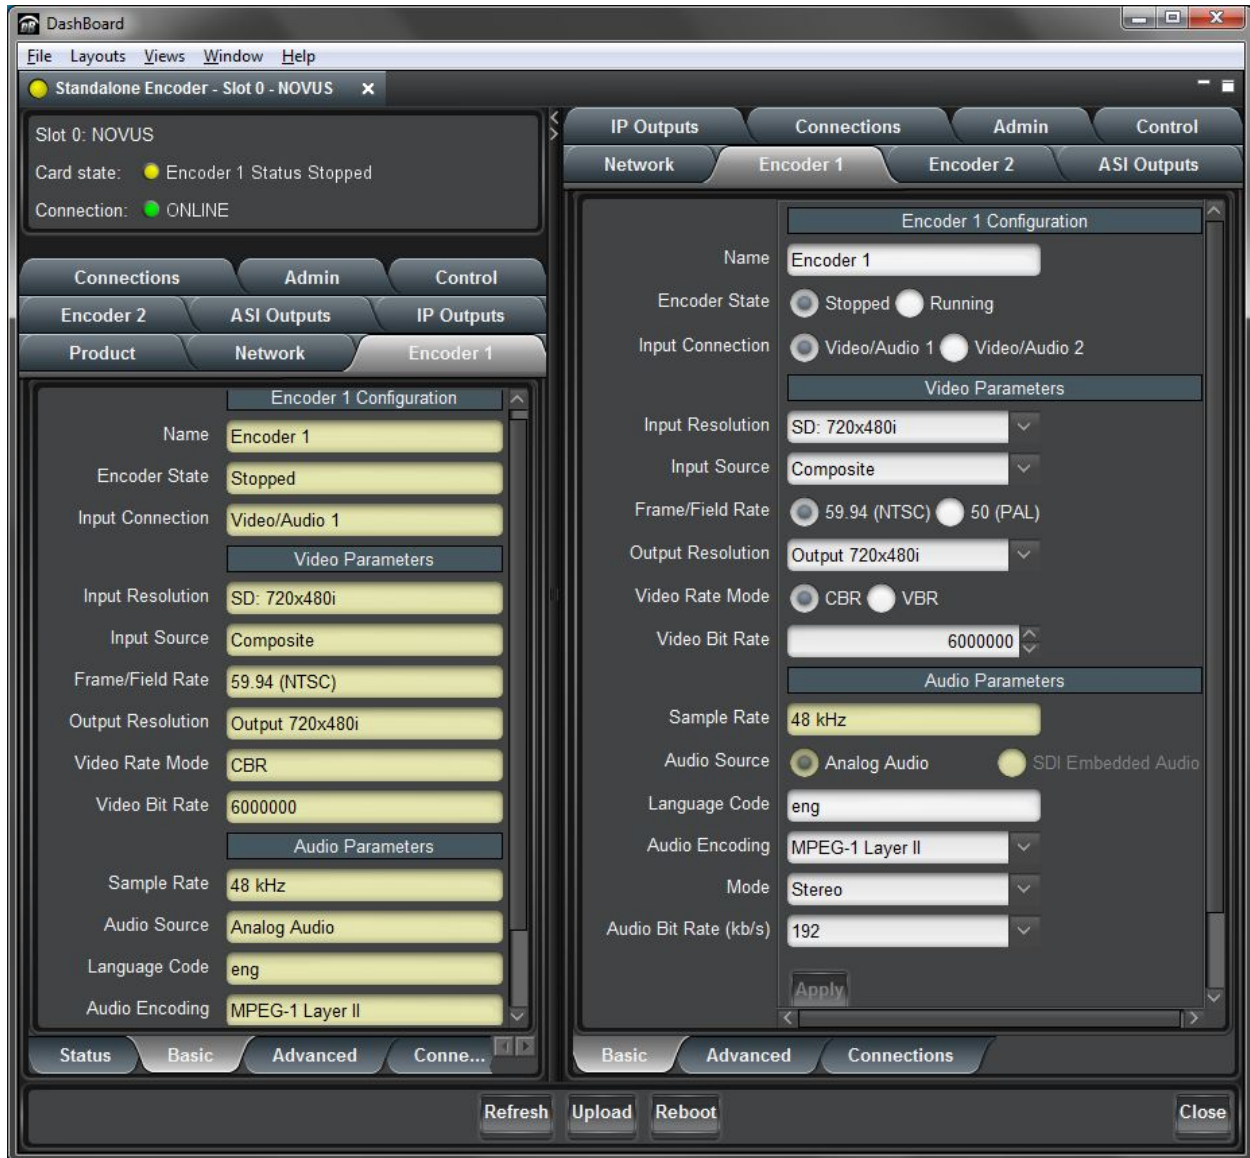

Encoder Configuration Tab

The Encoder Configuration Tab is further divided into the following 3 tabs:

- **Basic Tab:** contains the more important configuration parameters, which all users are likely to change.
- **Advanced Tab:** contains the advanced configuration parameters, which do not necessarily need to be changed.

-
- **Connections Tab:** allows the creation of connections between this encoder and the ASI and IP output ports.



Configuration Tabs

In general, the encoder user interface will change as a function of the parameter selections made, to remove illegal parameter combinations.

Selections made in any of the encoder configuration screens do not take effect until the **Apply** button is pressed. If you wish to discard the changes made to the user interface, press the **Cancel** button. The **Apply/Cancel** buttons are present in all the tabs and will be grayed out until changes are made. At any given point in time, the currently running encoder configuration can be inspected in the Encoder Statistics Tab, described later in this document.

Encoder Basic Configuration Tab

The Encoder Basic Configuration Tab, shown below, is divided into three general areas:

- **General Configuration:** generic configuration parameters.
- **Video Configuration:** parameters related to video encoding.
- **Audio Configuration:** parameters related to audio encoding.

Note that the basic configuration tab may look different from what is depicted below, as the parameters may change (or appear/disappear in the GUI) based on the device's configuration and the parameter choices made.

Basic Tab – General Configuration

- **Name:** All NOVUS encoders and outputs can be assigned a user-defined name. This name is used to identify the encoder later when making connections. Use any descriptive name suitable for your application, or accept the default.
- **Encoder State:** This control allows you to start/stop an encoder. This control needs to be set to **Running** for normal operation.
- **Input Connection:** This control selects which of the two rear I/O panel inputs is to be connected to this encoder. The NOVUS can run both encoders from the same input. The default is to run Encoder 1 from Video/Audio 1 and Encoder 2 from Video/Audio 2, but all combinations are allowed. Note that the parameters presented in the Video Configuration section may change if this selection changes (for example, if you switch the encoder from a Composite input to an SDI input).

The image shows a software window titled "Encoder 1 Configuration" with three main sections: General Configuration, Video Configuration, and Audio Configuration. Each section is highlighted with a red rounded rectangle. The General Configuration section includes fields for Name (Encoder 1), Encoder State (Stopped/Running), and Input Connection (Video/Audio 1/Video/Audio 2). The Video Configuration section includes Input Resolution (SD: 720x480i), Input Source (Composite), Frame/Field Rate (59.94 (NTSC)/50 (PAL)), Output Resolution (Output 720x480i), Video Rate Mode (CBR/VBR), and Video Bit Rate (2000000). The Audio Configuration section includes Sample Rate (48 kHz), Secondary Audio (Disabled/Enabled), Audio Source (Analog Audio/SDI Embedded Audio), Language Code (eng), Audio Encoding (MPEG-1 Layer II), Mode (Stereo), and Audio Bit Rate (192). At the bottom, there are Apply and Cancel buttons, which are also highlighted with a red rounded rectangle.

Encoder 1 Configuration

General Configuration

Name: Encoder 1

Encoder State: ☐ Stopped ☒ Running

Input Connection: ☒ Video/Audio 1 ☐ Video/Audio 2

Video Configuration

Input Resolution: SD: 720x480i

Input Source: Composite

Frame/Field Rate: ☒ 59.94 (NTSC) ☐ 50 (PAL)

Output Resolution: Output 720x480i

Video Rate Mode: ☒ CBR ☐ VBR

Video Bit Rate: 2000000

Audio Configuration

Sample Rate: 48 kHz

Secondary Audio: ☒ Disabled ☐ Enabled

Audio Source: ☒ Analog Audio ☐ SDI Embedded Audio

Language Code: eng

Audio Encoding: MPEG-1 Layer II

Mode: Stereo

Audio Bit Rate (kb/s): 192

Apply/Cancel Configuration Changes


Apply Cancel

Basic Tab – Video Configuration

- **Input Resolution:** Select the resolution of the input video signal. The following four choices are available:
 - SD: 720×480i (this will be presented as 720×576i if **Field/Frame Rate** is set to **PAL**).
 - HD: 1280×720p
 - HD: 1920×1080i
 - HD: 1920×1080p
- **Input Source:** Select the input source type. This control is available only if the **Input Resolution** is set to SD. In this case, the options will be **Composite** or **SD-SDI**. If **Input Resolution** is set to any of the HD values, this control will not be selectable, and


will show the appropriate type of input (HD-SDI for 1280×720p and 1920×1080i, and 3G-SDI for 1920×1080p).

- **Field/Frame Rate:** Select to match your source. For all input resolutions the supported options always include 59.94 (for NTSC-based systems) and 50 (for PAL-based systems)⁴. Some resolutions have support for additional frame rates as follows:
 - If you select the 1920×1080i or 1280×720p resolution, this field will also include an option for a field rate of 60, used by some cameras:

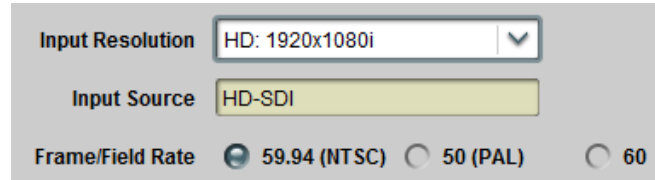

The screenshot shows a configuration panel with three sections. The first section, 'Input Resolution', has a dropdown menu set to 'HD: 1920x1080i'. The second section, 'Input Source', has a dropdown menu set to 'HD-SDI'. The third section, 'Frame/Field Rate', has three radio button options: '59.94 (NTSC)' (which is selected), '50 (PAL)', and '60'.

- If you select the 1920×1080p resolution, this field will also include an option for a frame rate of 23.98 (Film):

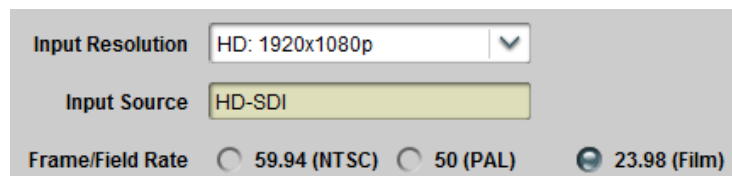

The screenshot shows a configuration panel with three sections. The first section, 'Input Resolution', has a dropdown menu set to 'HD: 1920x1080p'. The second section, 'Input Source', has a dropdown menu set to 'HD-SDI'. The third section, 'Frame/Field Rate', has three radio button options: '59.94 (NTSC)', '50 (PAL)', and '23.98 (Film)' (which is selected).

- **Output Resolution:** Select the desired output resolution. The values in this drop-down list are a function of the **Input Resolution** and the **Frame/Field Rate**. Also, please note that some resolutions require additional licensing for the encoder. The following resolutions are offered:
 - Same as the input (no scaling)
 - ¾ scaling from the input
 - Low resolutions: 480×270, 320×240, and 320×180, progressive, at half and quarter frame rates (not available for 1080p inputs)
 - HD inputs can be scaled (and re-interlaced if necessary) to SD resolution (not available for 1080p inputs)
 - HD 1080i inputs can be scaled to ¼ resolution (960×540)
 - SD inputs can be horizontally cropped to 704 pixels or horizontally scaled to 640 pixels
- **Video Rate Mode:** This controls whether the video elementary stream is CBR or VBR. The video bit rate setting varies according to this selection, as shown below.

⁴ AdvancedDigital may offer support for other standard frame rates, such as 30, 60, 24, etc. Please contact us if you require one of these rates.

Video Rate Mode ☒ CBR ☐ VBR

Video Bit Rate

Video Rate Mode ☐ CBR ☒ VBR

Peak Video Rate

Average Video Rate

- **Video Bit Rate:** This field is shown only if the encoder is set to **CBR** mode, and determines the video elementary stream bit rate, expressed in bits/second. Note that the bit rate resolution is 1000 bits/second.
- **Peak Video Bit Rate, Average Video Bit Rate:** These two fields are shown only if the encoder is set to **VBR** mode, and determine the desired average and acceptable peak bit rates for the video elementary stream. The peak video bit rate must be between 1.5 and 2 times the average bit rate; the user interface will enforce these limits automatically (i.e., it will update either the average or peak to be consistent with the value being entered). For both of these parameters, the resolution is 1000 bits/sec.

Basic Tab – Audio Configuration

- **Audio Source:** This parameter selects the audio source. The options are **Analog Audio**, directing the encoder will to use the analog right/left audio channels connected to the selected rear I/O panel, and **SDI Embedded Audio**, directing the encoder to extract embedded audio from the SDI input. If the video **Input Source** (see Basic Tab – Video Configuration) is set to **Composite**, this parameter is grayed out and forced to **Analog Audio**. It will be selectable only if the video input source is one of the SDI variations. When **SDI Embedded Audio** is selected, additional configuration options become available, as shown below.

Audio Source ☐ Analog Audio ☒ SDI Embedded Audio

Group

Channels

- **Group, Channels:** SDI embedded audio is typically divided into four groups (denoted by Group 1 to Group 4); each group has four mono channels (2 stereo pairs), denoted by Channels 1-2 and 3-4. These controls allow the selection of the desired group and channel pair. In the large majority of the cases, the first stereo pair is in Group 1, Channels 1-2, the second stereo pair is in Group 1, Channels 3-4, and so on. The **Group** selection has one additional choice, labeled **Custom DID**. This allows the encoder to use a non-standard embedded audio DID (this quite uncommon). If **Custom DID** is selected, a new configuration option becomes available, where the DID can be entered:

- **Group DID:** Enter the desired Group DID, in hexadecimal. Note that the entry will be immediately validated and rejected if invalid. As a reference, the table below contains the standard DIDs built into the system for Groups 1 to 4.

Group	SD-SDI DID	HD-SDI DID
Group 1	0x2FF	0x2E7
Group 2	0x1FD	0x1E6
Group 3	0x1FB	0x1E5
Group 4	0x2F9	0x2E4

- **Language Code:** This parameter represents the 3-letter ISO 639-2 language code for the audio, to be placed in the audio language descriptor in the PMT. For a complete list of the language codes, see this URL:

http://www.loc.gov/standards/iso639-2/php/code_list.php


If the Output Protocol in the Encoder Connections Tab is set to RTMP, this field will not be displayed as RTMP does not use the transport stream container.

- **Audio Encoding:** This parameter selects the audio encoding algorithm. The available choices depend on the **Audio Source** selection. For **Analog Audio**, the choices are **MPEG-1 Layer II** and **AAC-LC**⁵. For **SDI Embedded Audio**, the **Dolby Passthrough** option is offered in addition to the previous choices. Note that AAC-LC requires additional licensing. The two variants for this control are depicted below.

⁵ Other formats, such as Dolby, may be offered in the future.

If the Output Protocol in the Encoder Connections Tab is set to RTMP, this field is forced to AAC-LC and becomes not editable. The reason is that the RTMP protocol has no support for MPEG-1 Layer II audio at 48 kHz sampling. It also has no support for Dolby.

- **Mode:** The available choices for this parameter depend on the **Audio Encoding** selection, as follows:
 - **MPEG-1 Layer II:** the available modes are **Stereo** or **Single Channel**. If you select **Single Channel** (Mono), only the audio connected to the Left input will be encoded.
 - **AAC-LC:** the available modes are **Stereo**, **Mono**, or **Dual Mono**. If you select **Mono**, only the audio connected to the Left input will be encoded.
 - **Dolby Passthrough:** This parameter is not displayed.
- **Audio Bit Rate:** The format of this parameter is a function of the **Audio Encoding** setting. For MPEG-1 Layer II, this parameter is a drop-down list of valid discrete bit rates; the values in the list are also a function of the **Mode** Setting. For AAC-LC, the range is 112 to 512 kb/s for Stereo and Dual Mono, and 56 to 256 kb/s for Mono. This parameter is not displayed for Dolby Passthrough as the NOVUS will automatically detect the incoming audio bit rate.
- **Peak Audio Bit Rate:** This parameter is only displayed for AAC-LC. It must be set at least 1 kb/s higher than the **Audio Bit Rate**. The maximum value is 288 kb/s for Mono, and 576 kb/s for Stereo and Dual Mono.

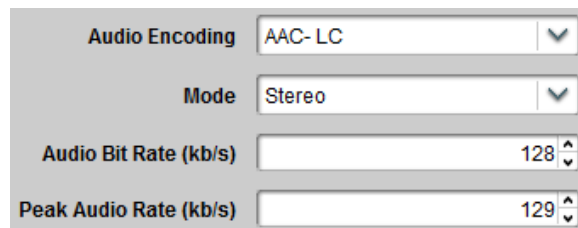


A screenshot of a software interface showing audio encoding settings. It includes a dropdown menu for 'Audio Encoding' set to 'AAC-LC', a dropdown menu for 'Mode' set to 'Stereo', a numeric input field for 'Audio Bit Rate (kb/s)' set to 128, and a numeric input field for 'Peak Audio Rate (kb/s)' set to 129.

- **Sample Rate:** This field is for information purposes only. The NOVUS only supports 48 kHz audio sample rate.

Basic Tab – Secondary Audio Support

A single-channel NOVUS-1E with the option OPT-2AUD and a dual-channel NOVUS-2E can be configured to offer secondary audio support (i.e., a second audio PID in the same program). If this function is available, it will be available in the audio section of Encoder 1, as indicated below:

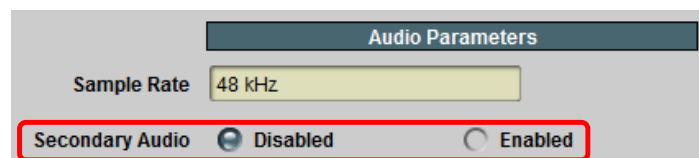

A screenshot of a software interface titled 'Audio Parameters'. It shows a 'Sample Rate' field set to '48 kHz'. Below it, there is a section for 'Secondary Audio' with two radio buttons: 'Disabled' (which is selected) and 'Enabled'. This entire 'Secondary Audio' section is highlighted with a red rectangular box.

Secondary audio support is only available if the Output Protocol in the Encoder Connections Tab is set to ASI/IP Streaming.

When **Secondary Audio** is set to **Enabled**, the Encoder 1 Audio Configuration section will change as indicated below:

The screenshot displays the 'Encoder 1 Audio Configuration' interface. It is divided into two main sections: 'Audio Channel 1' and 'Audio Channel 2'.
Audio Channel 1:
- **Audio Source:** Two radio buttons are present. 'Analog Audio 1' is unselected, and 'SDI Embedded Audio' is selected.
- **Group:** A dropdown menu showing 'Group 1'.
- **Channels:** A dropdown menu showing 'Channels 1-2'.
- **Language Code:** A text input field containing 'eng'.
- **Audio Encoding:** A dropdown menu showing 'MPEG-1 Layer II'.
- **Mode:** A dropdown menu showing 'Stereo'.
- **Audio Bit Rate (kb/s):** A dropdown menu showing '192'.
Audio Channel 2:
- **Audio Source:** Two radio buttons are present. 'Analog Audio 2' is selected, and 'SDI Embedded Audio' is unselected.
- **Language Code:** A text input field containing 'eng'.
- **Audio Encoding:** A dropdown menu showing 'AAC- LC'.
- **Mode:** A dropdown menu showing 'Stereo'.
- **Audio Bit Rate (kb/s):** A numeric input field with a value of '128' and up/down arrows.
- **Peak Audio Rate (kb/s):** A numeric input field with a value of '129' and up/down arrows.

The individual controls work in the same manner as discussed before. Each audio channel can be independently configured. As before, the SDI Embedded Audio option will only be available if the Encoder 1 input selection is one of the SDI variants. The only input restriction is that, when using Analog Audio, the signal connected to Video/Audio 1 will be the first audio channel, and the signal connected to Video/Audio 2 will be the second audio channel.

Support for secondary audio requires that both encoder channels in the NOVUS be tied together. When the **Secondary Audio** control depicted above is set to **Enabled**, Encoder 2 will be slaved to Encoder 1. Its Basic Configuration Tab in this mode is depicted below:

The image shows a software window titled "Encoder 2 Configuration". It contains several sections:

- Encoder 2 Configuration** (Header):
 - Name: Encoder 2
- Encoder State** (Radio buttons):
 - Stopped
 - Running (selected)
- Input Connection** (Radio buttons):
 - Video/Audio 1
 - Video/Audio 2 (selected)
- Video Parameters** (Header):
 - Input Resolution: HD: 1920x1080i (dropdown)
 - Input Source: HD-SDI (dropdown)
 - Frame/Field Rate: 59.94 (NTSC) (selected), 50 (PAL)
 - Output Resolution: Output 1920x1080i (dropdown)
 - Video Rate Mode: CBR (selected), VBR
 - Video Bit Rate: 6000000 (spinner)
- Audio Parameters** (Header):
 - Include Audio Ch1: ☐
 - Include Audio Ch2: ☐

Red annotations on the right side of the window:

- Controls Slaved to Encoder 1**: Points to the Encoder State and Input Connection controls.
- Controls Shared with Encoder 1**: Points to the Input Resolution, Input Source, and Frame/Field Rate controls.
- Encoder 2 Audio Insertion Controls**: Points to the Include Audio Ch1 and Include Audio Ch2 checkboxes.

The operation is as follows:

- The **Encoder State** and **Input Selection** controls are slaved to the corresponding controls in Encoder 1. They will reflect the state of their Encoder 1 counterparts.
- The **Input Resolution**, **Input Source** and **Field/Frame Rate** controls are shared with Encoder 1, and apply to whatever input port is selected. Changes here will be mirrored in the corresponding parameters for Encoder 1.
- Encoder 2 can optionally share one or both audio channels from Encoder 1. This is accomplished by checking **Include Audio Ch1/2** boxes in the Audio Insertion Controls displayed above.


Encoder Advanced Configuration Tab

The appearance of the Encoder Advanced Configuration Tab is a function of the choices made in the Encoder Basic Configuration Tab. It is divided into four major areas:

- **Video Parameters:** these are advanced controls related to the encoding of the video.
- **Closed Captioning:** controls related to Closed-Captioning insertion. This section is not shown if **Field/Frame Rate** in the Basic Tab – Video Configuration is set to **PAL**.
- **Audio Parameters:** these are advanced controls related to the audio subsystem.
- **Mux Parameters:** these are advanced controls related to audio/video multiplexing and (P)SI tables.


Advanced Tab – Video Parameters

The Video Parameters section is shown below:

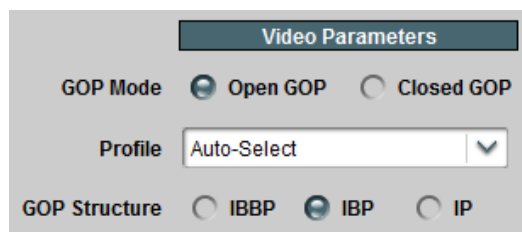


- **GOP Mode:** Select between **Open GOP** and **Closed GOP**. The normal setting is Open GOP. Closed GOP is used for some storage applications; there is a very small negative impact in video quality if Closed GOP is selected.
- **Profile:** This control has four options:
 - **Auto-Select:** With this setting, the encoder will signal High Profile for HD and Main Profile for SD.
 - **High Profile:** With this setting, the encoder will always signal High Profile.
 - **Main Profile:** With this setting, the encoder will always signal Main Profile.
 - **Baseline Profile:** This setting will cause the encoder to go to Baseline Profile. There will be a small loss of encoding quality. The **GOP Structure** control will not be selectable in Baseline Profile.
- **GOP Structure:** Select between **IBBP**, **IBP** and **IP**. Selecting **IBBP** gives the best video quality, but some low-end decoders require **IP**. If **Profile** is set to Baseline Profile, this control will not be selectable and will be forced to **IP**.

Note that if the **Output Resolution** setting in the Basic Tab – Video Configuration is set to one of the low resolutions (480×270, 320×240, or 320×180), the **Profile** and **GOP Structure** controls will not be selectable; this section will appear as follows:

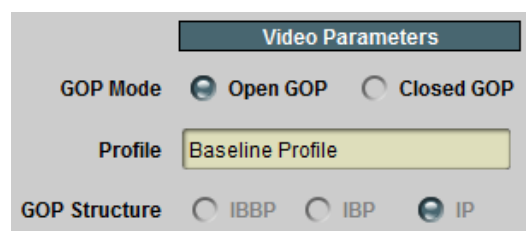

Also note that if the **Input Resolution** setting in the Basic Tab – Video Configuration is set to 1920x1080p, the **Profile** and **GOP Structure** controls will not be selectable; this section will appear as follows:

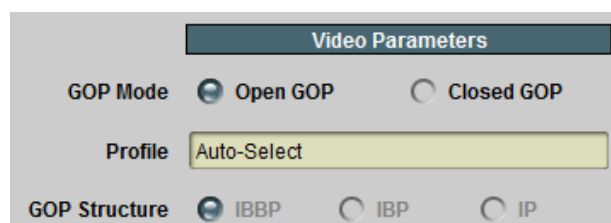

Advanced Tab – VBI/Ancillary Data Insertion

The NOVUS can extract the following data types from the video input and insert them in the compressed video output:


- Closed Captioning
- Active Format Description (AFD)

Closed Captioning

The Closed Captioning controls are only displayed if **Field/Frame Rate** in the Basic Tab – Video Configuration is set to **NTSC**. The appearance of this control is also a function of the **Input Resolution** and **Input Source** parameters, as depicted below.


The Closed Captioning controls are as follows:

- **Enable CC:** check this box to enable Closed-Captioning insertion. Closed Captions are inserted in the video elementary stream, as per ATSC A/72. Both CEA-608 and CEA-708 captions are supported.
- **CC Source:** this controls where the encoder extracts closed captions from. As depicted below, this field may or may not be editable, depending on the input resolution and input source. The options are:
 - **CEA-608 Line 21:** this option can only be used for SD inputs. The encoder will extract all the CEA-608 information from both fields of Line 21, if present.
 - **SMPTE-334 VANC:** this option can only be used for SDI inputs. The encoder will expect closed-captioning information in the VANC. Both CEA-608 and CEA-708 modes are supported (and automatically detected).

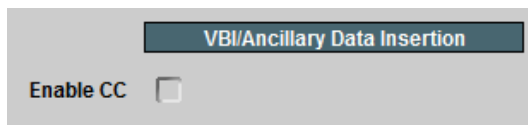


The screenshot shows the 'VBI/Ancillary Data Insertion' section. The 'Enable CC' checkbox is unchecked.

Closed-Captioning Disabled

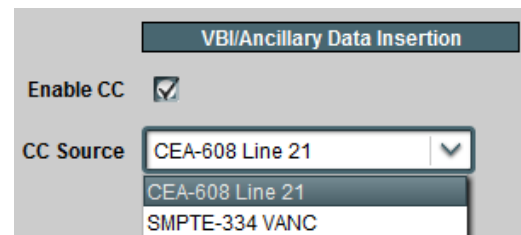


The screenshot shows the 'VBI/Ancillary Data Insertion' section. The 'Enable CC' checkbox is checked. The 'CC Source' dropdown menu is open, showing 'CEA-608 Line 21' as the selected option, with 'CEA-608 Line 21' and 'SMPTE-334 VANC' as available options.

**Input Source: SD-SDI
Input Resolution: SD**

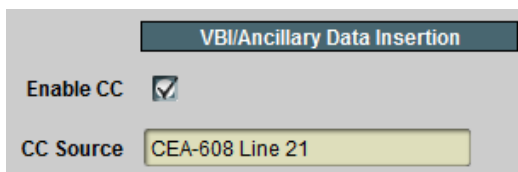

The screenshot shows the 'VBI/Ancillary Data Insertion' section. The 'Enable CC' checkbox is checked. The 'CC Source' dropdown menu is set to 'CEA-608 Line 21'.

**Input Source: Composite
Input Resolution: SD**

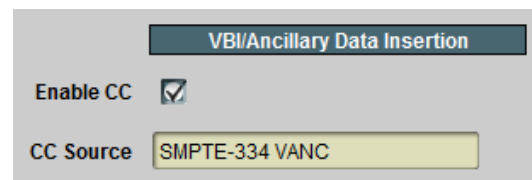

The screenshot shows the 'VBI/Ancillary Data Insertion' section. The 'Enable CC' checkbox is checked. The 'CC Source' dropdown menu is set to 'SMPTE-334 VANC'.

**Input Source: HD-SDI or 3G-SDI
Input Resolution: HD**


Active Format Description

The NOVUS can extract Active Format Description (AFD) information from the incoming video signal and insert it in the compressed bitstream. AFD information can be extracted from the following sources:

- For SDI signals, AFD information can be present in the VANC as per SMPTE-2016-3. This is the primary way of conveying AFD information on a professional video feed.
- For SD signals (either from Composite or SD-SDI sources), AFD information can be synthesized from Wide Screen Signaling (WSS) data present in the VBI (line 20 for NTSC signals, line 23 for PAL signals).
- The NOVUS also has the option of inserting a user-defined AFD code (instead of receiving it from the video input).

The AFD controls are as follows:

- **Enable AFD:** Check this box to enable AFD extraction and insertion. This control is always available. AFD is inserted in the video elementary stream as per ATSC A/72 and ETSI TS 101 154.
- **AFD Source:** This controls where the AFD information is coming from. The options are:
 - **Line 20 WSS/Line 23 WSS:** This option causes the encoder to synthesize AFD information from WSS. It is available only if the input resolution is SD. It will be displayed as Line 20 for NTSC and Line 23 for PAL. For PAL inputs, the conversion follows ETSI TS 101 154 Appendix B.4.
 - **SMPTE-2016-3 VANC:** This option causes the encoder to extract AFD from the VANC. It is only available for SDI inputs.
 - **Manual AFD Selection:** This option allows the user to specify a fixed AFD code to be inserted. Any AFD information received from the input is ignored. This can be used to override the original AFD information, or when the video is being scaled (e.g., when the input is HD and is being converted to SD).
- **AFD Code:** This control is displayed only when AFD Source is set to Manual AFD Selection. It corresponds to the codes listed in SMPTE-2016-1, Table 1.

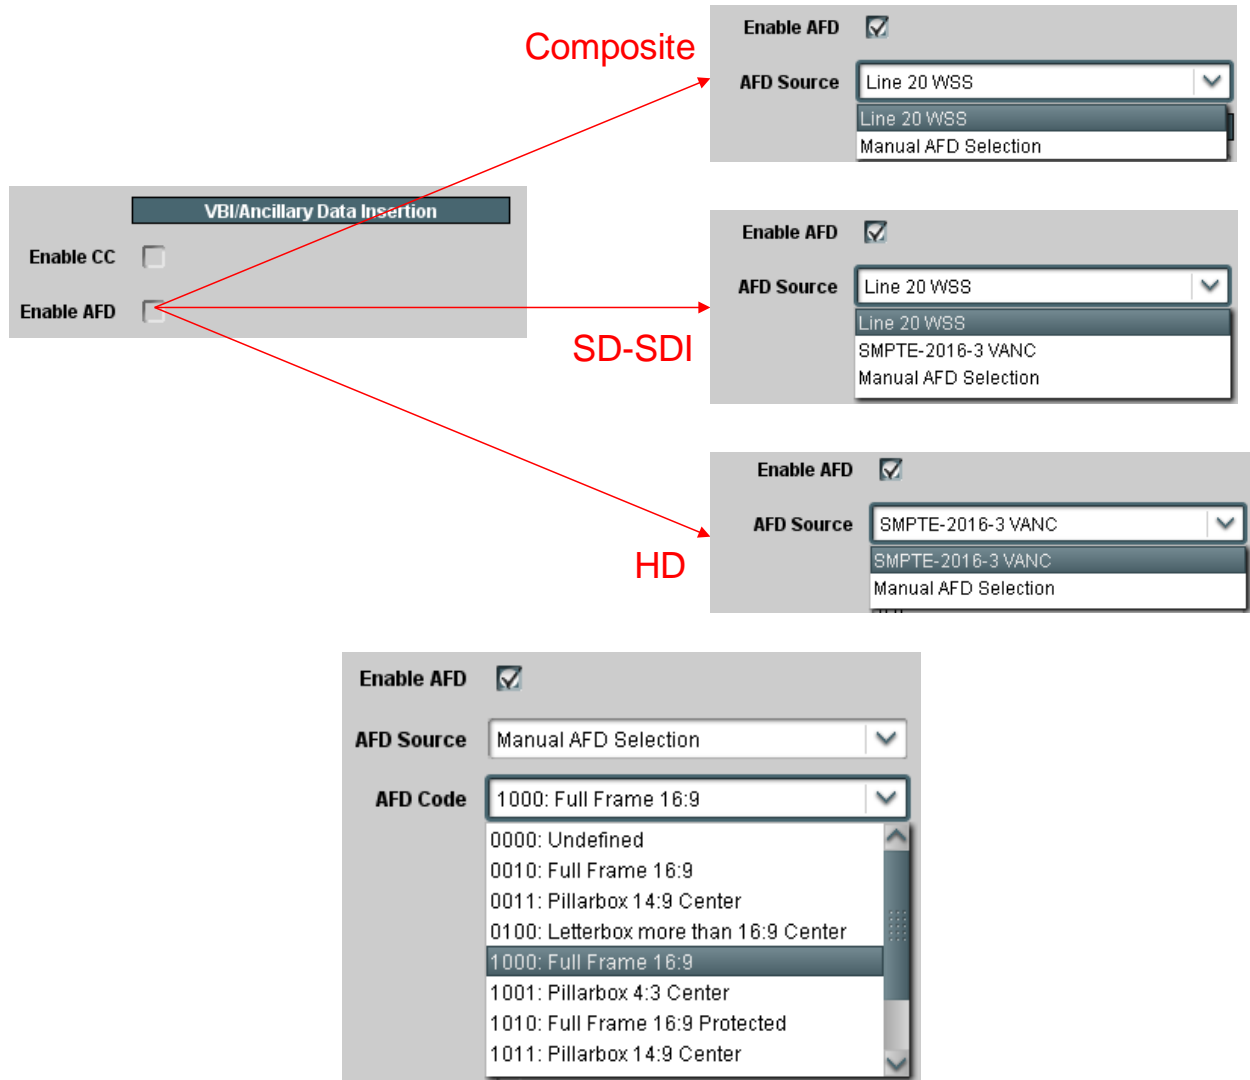

Advanced Tab – Audio Parameters

The Audio Parameters are divided into three subgroups, some of which vary (and may not be present) according to the selections made in the Encoder Basic Configuration Tab. A sample of the Audio Parameters section is depicted below.

Audio Parameters

Audio Gain L (dB) -6.5

Audio Gain R (dB) -6.5

Audio Mute L ☐

Audio Mute R ☐

Audio Type Undefined

CRC ☒ CRC Off ☐ CRC On

Original/Copy ☒ Copy ☐ Original

Copyright ☒ Not Protected ☐ Protected

Emphasis None

Analog Audio Parameters

PMT Information

Audio Encoder Specific Configuration

Analog Audio Parameters

These parameters are only displayed if **Audio Source** in Basic Tab – Audio Configuration is set to **Analog Audio**. The parameters are:

- **Audio Gain L (dB), Audio Gain R (dB):** These controls allow an independent gain adjustment for the left/right audio channels, from -18.0 dB to +18.0 dB, in steps of 0.5 dB.
- **Audio Mute L, Audio Mute R:** These controls allow muting of the left/right audio channels.

PMT Information

The PMT Information section has the following parameters:

- **Audio Type:** determines the audio type in the PMT audio descriptor. This setting has no actual impact on how the audio is encoded; it only affects its description in the PMT. The choices are:
 - **Undefined:** no further information. This is the most common setting.
 - **Clean Effects:** indicates that the audio has no language.
 - **Hearing Impaired:** indicates that the audio is prepared for the hearing impaired.
 - **Visual Impaired Commentary:** indicates that the audio is prepared for the visually impaired viewer.

If the **Audio Encoding** setting in the Basic Tab – Audio Configuration is set to **Dolby Passthrough**, another parameter becomes available in the PMT Information section:

Audio Type Undefined


Dolby PMT Type ☐ DVB ☒ ATSC

- **Dolby PMT Type:** this parameter controls how Dolby AC-3 audio is signaled in the PMT. The two choices are:
 - **DVB:** Dolby Audio is signaled as per ETSI TS 101 154 Appendix C (stream_type 0x06 with the AC-3 Descriptor from EN 300 468 annex D).
 - **ATSC:** Dolby Audio is signaled as per ATSC A/53 Part 3 (stream_type 0x81). However, the NOVUS is currently unable to generate the ATSC AC-3 Descriptor; please contact AdvancedDigital if this is an issue in your network.


If the Output Protocol in the Encoder Connections Tab is set to RTMP, the PMT Information fields will not be displayed as RTMP does not use the Transport Stream container.

Audio Encoder Specific Configuration

The appearance of this control depends on the **Audio Encoding** setting in the Basic Tab – Audio Configuration.

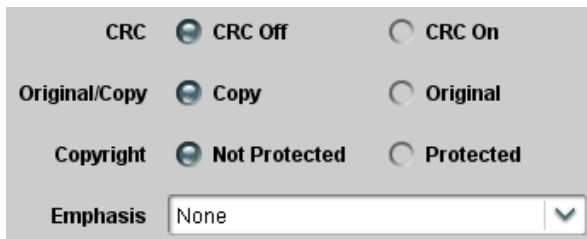

MPEG-1 Layer II Configuration

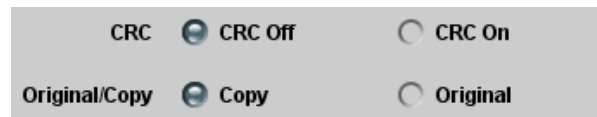

AAC-LC Configuration

The parameters are:

- **CRC:** Enables/Disables CRC insertion in the audio elementary stream. This is normally left disabled (CRC off).
- **Original/Copy:** Controls the state of the Original/Copy flag in the audio elementary stream. This setting does not affect the actual audio encoding.
- **Copyright:** Controls the state of the Copyright flag in the audio elementary stream. This setting does not affect the actual audio encoding.
- **Emphasis:** Controls the state of the Emphasis flags in the audio elementary stream. This setting does not affect the actual audio encoding. The available values are **None**, **50/15 us**, and **ITU-T J.17**.

Advanced Tab – Secondary Audio Parameters

When **Secondary Audio** is set to **Enabled**, the following changes take place:

- Two sets of controls are displayed in the Encoder 1 Advanced Tab, corresponding to the two audio channels. Each set operates independently as described in the previous section.
- No Advanced Audio controls are displayed in the Advanced Tab for Encoder 2.

The example below illustrates the Advanced Audio controls for Encoder 1 when secondary audio is enabled. In this example, Audio Channel 1 is set to MPEG-1 Layer II, from the analog input, and Audio Channel 2 is set to Dolby Passthrough.

Audio Channel 1

Audio Gain L (dB) 0.0

Audio Gain R (dB) 0.0

Audio Mute L ☐

Audio Mute R ☐

Audio Type Undefined

CRC ☒ CRC Off ☐ CRC On

Original/Copy ☒ Copy ☐ Original

Copyright ☒ Not Protected ☐ Protected

Emphasis None

Audio Channel 2

Audio Type Undefined

Dolby PMT Type ☒ DVB ☐ ATSC

Advanced Tab – Mux Parameters

These parameters control the details of the audio/video multiplexing, and the (P)SI tables. If the Output Protocol in the Encoder Connections Tab is set to RTMP, these parameters will not be shown as RTMP does not use the Transport Stream container.

The following Mux Parameters are always available if the Output Protocol is not set to RTMP:

Mux Parameters

PMT PID 0x20

PCR PID 0x101

Video PID 0x100


Audio PID 0x110

Program Number 1

Transport Stream ID 0x1


Generate SDT ☐

- **PMT PID, PCR PID, Video PID, Audio PID:** These parameters control the Packet Identifier (PID) values for the PMT, PCR, Video and Audio. The values can be entered in hexadecimal (prefixed by 0x) or in decimal. Valid values are from 0x20 (32) to 0x1FFE (8190). PMT PID, Video PID and Audio PID must be distinct values. PCR PID can either be the same as the video PID or distinct from the other values as well. The user interface will not accept an invalid entry at any time – it will immediately revert to the previous value. If **Secondary Audio** is enabled, there will be an additional entry for the secondary audio PID. This entry will always be available for Encoder 1. For Encoder 2, the audio PID selections will depend on whether the boxes for **Include Audio Ch1/2** are checked.
- **Program Number:** Enter the desired program number for this encoder channel. Valid program numbers go from 1 to 65535 and are always entered in decimal.
- **Transport Stream ID:** Enter the desired Transport Stream ID for this encoder channel. Values in this field can be entered both in hexadecimal (prefixed by 0x) or in decimal.
- **Generate SDT:** This box is always shown but is not selectable for the HTTP Live Streaming and RTMP protocols. If this box is checked, an SDT will be generated for this encoder channel. Additional SDT parameters become available once this box is checked, as depicted below.

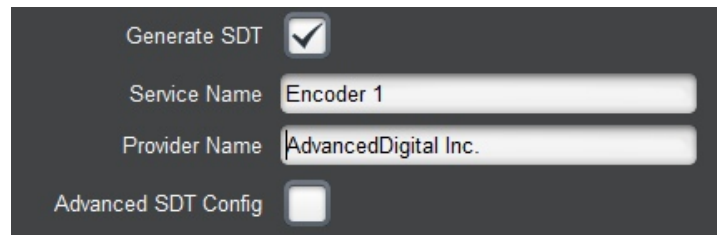


The screenshot shows a configuration panel with a dark background. At the top, 'Generate SDT' is checked with a white checkbox. Below it, 'Service Name' has a text input field containing 'Encoder 1'. 'Provider Name' has a text input field containing 'AdvancedDigital Inc.'. At the bottom, 'Advanced SDT Config' is unchecked with a white checkbox.

- **Service Name:** Enter the desired SDT service name for this encoder channel. The default name is Encoder 1 or Encoder 2.
- **Provider Name:** Enter the desired SDT service provider name. The default is AdvancedDigital Inc.
- **Advanced SDT Config:** By default, the other SDT values are automatically set by the system. If you need to configure them, check this box, and a new set of parameters appears, as shown below.

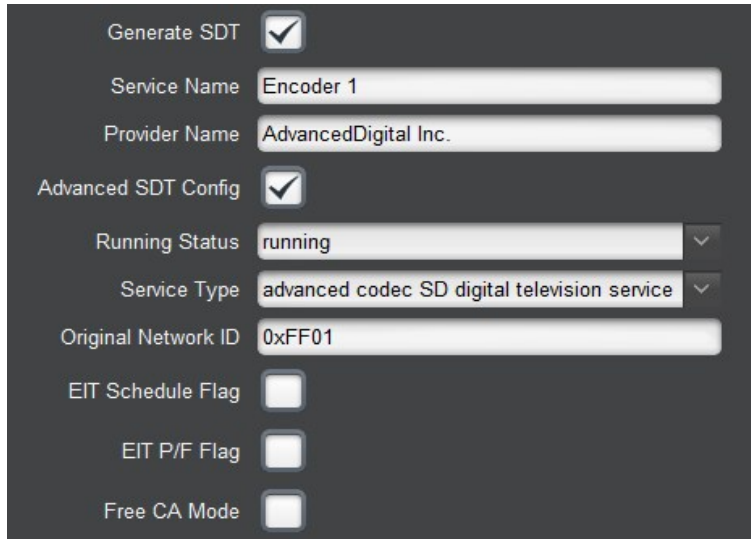

- **Running Status:** Indicates the status of the service. The options are **undefined**, **not running**, **starting**, **pausing**, **running**, and **service off-air**. The value used for this parameter when **Advanced SDT Config** is not enabled is running.
- **Service Type:** Indicates the type of service. The value used for this parameter when **Advanced SDT Config** is not enabled is advanced codec SD digital television service if the encoder is in SD mode, or advanced codec HD digital television service if the encoder is in HD mode. The drop-down list offers a few of the most common choices. If you need to code something other than these choices, select **custom setting** in the drop-down list and a new parameter will become available, as show below.

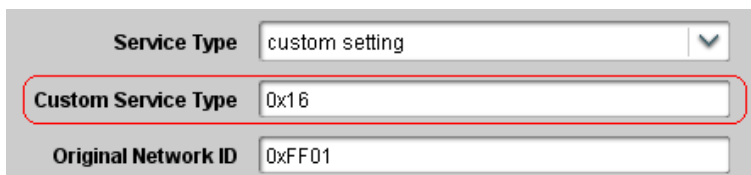

- **Custom Service Type:** Enter the service type. This field accepts both hexadecimal (prefixed by 0x) and decimal values. The valid range is from 0 (0x00) to 255 (0xFF).
- **Original Network ID:** This field contains the Network ID code from which this program originated. This field accepts both hexadecimal (prefixed by 0x) and decimal values. Valid values are from 0 (0x0000) to 65535 (0xFFFF). The default value for this field is 0xFF01, which is in the range of values allocated for video over IP. The complete set of registered Network IDs can be downloaded from this URL:


http://www.dvbservices.com/identifiers/export/original_network_id

- **EIT Schedule Flag:** Check this box to set the flag. This flag indicates that EIT schedule information is present for this service. Since the NOVUS does not generate EITs, the correct setting of this flag is not set. Only set it if you intend to mux an EIT downstream of the NOVUS.


- **EIT P/F Flag:** Check this box to set the EIT present/following flag for this service. Since the NOVUS does not generate EITs, the correct setting of this flag is not set. Only set it if you intend to mux an EIT downstream of the NOVUS.
- **Free CA Mode:** Check this box to set the Free CA Mode flag. If this flag is set, it indicates that one or more components of the service are scrambled. Since the NOVUS does not offer scrambling, the correct setting of this flag is not set. Only set it if you intend to scramble the program downstream from the NOVUS.

Encoder Connections Tab

The Connections Tab is used to create output connections for the encoder. The set of output options offered is a function of whether or not Secondary Audio is enabled:

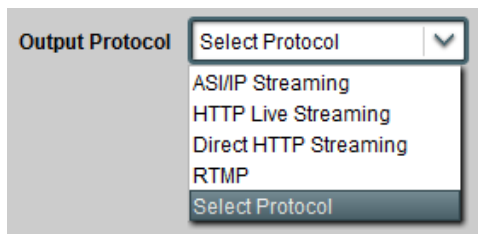

Secondary Audio Disabled

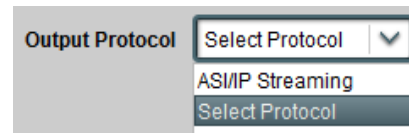

Secondary Audio Enabled

The options are:

- **ASI/IP Streaming:** the output of the encoder is available for connection to ASI Outputs and IP Outputs, as described later in this manual.
- **HTTP Live Streaming:** the output of the encoder is directed to a web server (which can be the internal server in the encoder or an external server), which in turn serves it to web clients using HTTP Live Streaming. If this option is selected, the encoder output is not available to ASI and IP Output ports, and the video bit rate is limited to 15 Mb/s. Moreover, the **GOP Mode** parameter in the Advanced Tab – Video Parameters will be forced to **Closed GOP**. This output option is not available if Secondary Audio is enabled.
- **Direct HTTP Streaming:** the output of the encoder is available to clients over a standard HTTP connection. Clients will open an HTTP connection to the encoder, send a standard HTTP GET request, and receive the bitstream (for as long as they keep the connection open). This output option is not available if Secondary Audio is enabled.
- **RTMP:** the encoder will operate as an RTMP client, connect to a specified RTMP server and publish the stream, similar to the Adobe Flash® Live Media Encoder (FMLE). This output option is not available if Secondary Audio is enabled.

Once an option is selected, the appropriate configuration parameters are displayed.

ASI/IP Streaming

If this option is selected, the standard Output Selection Connection Parameters are presented. These connection parameters are common to all data sources, and are described later in the Destination Selection section in the Connections chapter of this document.

Output Protocol: ASI/IP Streaming


Stream Display: ☒ Stream Names ☐ Stream Addresses

Port	Name	Connect
Ethernet 1	SPTS From Encoder 1	<input checked="" type="checkbox"/>
Ethernet 1	Encoder 1 NULL-padded	<input checked="" type="checkbox"/>
Ethernet 2	MPTS Auto Rate	<input checked="" type="checkbox"/>
Ethernet 2	MPTS Manual Rate	<input checked="" type="checkbox"/>
ASI 1	ASI Output 1	<input type="checkbox"/>
ASI 2	ASI Output 2	<input type="checkbox"/>

**Output Selection
Connection
Parameters**

HTTP Live Streaming

HTTP Live Streaming is a protocol designed to deliver live streaming content to clients on the Internet using a standard unmodified Web Server, and the standard HTTP protocol, as depicted below.

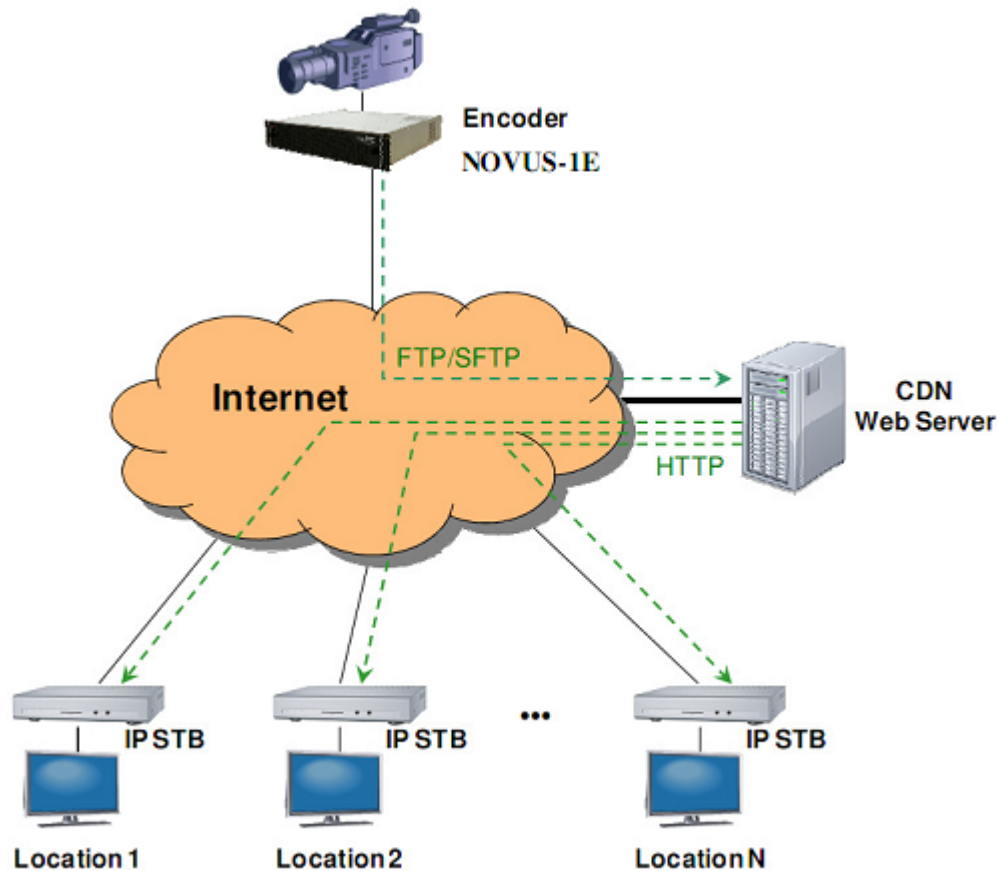

The highlights of the protocol are:

- The encoder segments the bitstream into small files of similar duration, at some suitable points.
- The encoder continuously uploads the files as they are created to a standard web server.
- Every time the encoder uploads a new file, it also updates a special playlist file in the server, which informs the clients of which segments are available.
- The encoder also takes care of deleting old files from the server.
- The clients can connect to the web server at will; they download the playlist file, and start playing the segments as they come.
- A standard unmodified web server can be used.

HTTP Live Streaming is supported in the NOVUS⁶. The content can be uploaded to an external server, or served directly from the unit.

When uploading to an external server, the configurable parameters are:

The screenshot shows a configuration window for HTTP Live Streaming. The 'Output Protocol' is set to 'HTTP Live Streaming'. Under 'Server Location', 'Remote' is selected. Under 'Transfer Protocol', 'FTP' is selected. The 'Server Address' is '10.10.9.48'. The 'Username' is 'encoder'. The 'Password' field is masked with dots. The 'Server Path' is '/var/www/html'. The 'Base File Name' is 'live'. The 'Segment (sec)' is set to 4. Under 'Number of Segments', '3' is selected. 'Extra Server Compatibility' is checked. 'Keep Segments on Server' is unchecked. The 'Program Name' is 'Encoder 1 Program'.

- **Server Location:** Select **Remote** to have the segments uploaded to a remote web server, using FTP or SFTP; select **Local** to use the local server in the device itself.
- **Transfer Protocol:** This configures the protocol to be used between the NOVUS and the web server for uploading the files. The two options are **FTP** and **SFTP** (Secure FTP). FTP exchanges data and password in the clear, while SFTP encrypts both flows.
- **Server Address:** Enter the IP address of the web server here. It needs to be reachable from either one of the NOVUS's Ethernet ports. The NOVUS standalone Encoder is capable of connecting to servers reachable through its control Ethernet ports.
- **Username:** Enter the username to be used when uploading the files to the server.
- **Password:** Enter the password corresponding to the user name, to be used when uploading the files.
- **Server Path:** Enter the absolute server path for the directory where the files should be placed. It is recommended that a separate directory be created for each encoder.
- **Base File Name:** Enter the base file name for the files created in the server. The encoder will create the following files:
 - **basename.m3u:** This is the top playlist file. For the example above, where the base file name is **live**, the playlist file will be **live.m3u**. This file will

⁶ A license is required for this feature, please contact AdvancedDigital.

-
- contain a single bit rate profile. It is created when the encoder starts, and not changed during operation. For backward compatibility with previous versions, a top playlist with a **.m3u** extension and identical contents will also be created.
- **basename_p.m3u:** This is the current playlist file for the encoder profile. It is updated every time a new segment is created.
 - **basename_XXXX.ts:** These will be the bitstream encoded files. XXXX is an increasing count. For the example above, the encoder will create files named **live_1.ts**, **live_2.ts**, **live_3.ts**, **live_4.ts**, and so on. At any given point in time, there will be five or six consecutive files in the configured directory if the encoder is configured to remove older files.
 - **Segment (sec):** Number of seconds per segment. This defines the approximate size (in seconds) for the above bitstream encoded files. The valid range is from 1 to 20 seconds. Note that the clients will experience latency approximately equal to the segment size times the number of segments. The recommended value is 10 seconds. Setting the segment size to less than 3 seconds may cause performance issues with the FTP/SFTP server (especially Windows servers running FileZilla); the result will be a non-zero count of dropped segments.
 - **Number of Segments:** This defines the number of bitstream segments advertised in the playlist. The minimum number, as per the HLS specification, is 3. Some set-top boxes require 4 segments. Apple devices (iPads, iPods, etc.) work well with 3 segments.
 - **Extra Server Compatibility:** Check this box if the encoder has problems renaming files in the server. This is typically required for Windows FTP servers. Linux-based servers do not need this. AdvancedDigital recommends checking this box only if your server requires it.
 - **Keep Segments on Server:** Normally, when a segment falls out of the playlist file, it is automatically deleted by the encoder. If you check this box, the bitstream is left in the server. Clients will still start playing from the first segment in the playlist.
 - **Program Name:** This program name is placed in the playlist file. Whether or not it is shown depends on the client. This is an optional parameter.

Using the settings above, if the directory **/var/www/TV** is published on server **www.example.com** as **http://www.example.com/TV**, the URL for the video will be:

http://www.example.com/TV/live.m3u

When using the built-in server in the NOVUS, the options are:

The screenshot shows a configuration window for the NOVUS encoder. It has a light gray background and several controls:


- Output Protocol:** A dropdown menu set to "HTTP Live Streaming".
- Server Location:** Two radio buttons, "Remote" and "Local". "Local" is selected.
- Segment (sec):** A numeric input field with a value of "4" and up/down arrow buttons.
- Number of Segments:** Two radio buttons, "3" and "4". "3" is selected.
- Program Name:** A text input field containing "Encoder 1 Program".

- **Server Location:** Select **Local** to use the local server in the device itself.
- **Segment (sec):** Number of seconds per segment. This defines the approximate size (in seconds) for the above bitstream encoded files. The valid range is from 1 to 20 seconds. Note that the clients will experience latency approximately equal to the segment size times the number of segments. Given the limited amount of memory storage in the local encoder server, at higher bit rates the segment size will be limited. The NOVUS has 20 Mbytes of storage per encoder.
- **Number of Segments:** This defines the number of bitstream segments advertised in the playlist. The minimum number, as per the HLS specification, is 3. Some set-top boxes require 4 segments. Apple devices (iPads, iPods, etc.) work well with 3 segments.
- **Program Name:** This program name is placed in the playlist file. Whether or not it is shown depends on the client. This is an optional parameter. If entered, it will be shown as part of the encoder link in the web page generated by the NOVUS.

In local server mode, the access URLs for the content are:

`http://xxx.xxx.xxx.xxx/HLS/encoder1.m3u`
`http://xxx.xxx.xxx.xxx/HLS/encoder2.m3u`

where `xxx.xxx.xxx.xxx` is the IP Address of the NOVUS Ethernet port. The NOVUS HLS streams are available through both streaming Ethernet ports. In addition to the streaming Ethernet ports, HLS content can also be accessed from the control port. Also note that if you use a browser to go to the encoder IP address (i.e., just go to `http://xxx.xxx.xxx.xxx`), there will be a link for the HLS page, as depicted below:

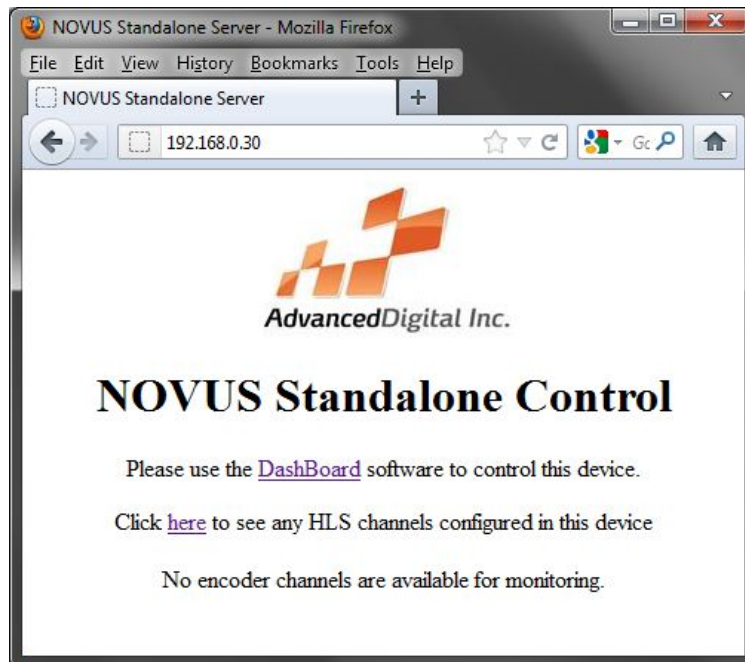

HLS Implementation Notes


- When HTTP Live Streaming is selected, the **GOP Mode** control is set to **Closed GOP** and is not selectable. This is done to ensure that each segment is self-contained.
- The maximum video bit rate allowed in HLS mode is 15 Mb/s.
- The maximum aggregate performance of the built-in HLS server in the NOVUS is between **20 and 30 Mb/s** (total bit rate to all clients), and is somewhat dependent on network conditions. The built-in server is intended to serve only a small handful of clients and performance is **not guaranteed** at the capacity limits; if you need to scale, please use a remote server.
- If you are streaming to Apple devices such as iPhones, iPads or iPods, you must also select the following:
 - **Audio Encoding:** Select **AAC-LC**.
 - **Output Resolution:** If you are streaming to older Apple devices, select one of the resolutions ending in **/15p** (e.g., 320x240/15p). If your input is PAL, these resolutions will be shown ending in **/12.5p**. Newer devices may be able to support higher resolutions.⁷

Direct HTTP Streaming

Direct HTTP Streaming is an output mode whereby clients open a standard HTTP connection to the NOVUS and issue a standard HTTP GET request. The NOVUS will send the appropriate HTTP response followed by the encoder bitstream; the bitstream will be transmitted for as long as the client maintains the connection. Since HTTP runs on top of the TCP protocol, it is possible for the NOVUS to deliver content over the Internet using this mode. However, it has the following limitations:

- The NOVUS has to send one independent copy of the bitstream to each client. There is a limit of 5 clients or 20 Mb/s per Ethernet port in this mode.
- The TCP protocol is capable of flow control; if the client is not fast enough, or if the network between the NOVUS and the client is not fast enough, the protocol will attempt to throttle the encoder, which is not possible. The NOVUS will buffer a small amount of bitstream in this case, but if the overall performance of the client/network link combination is insufficient to support the configured encoder data rate, the NOVUS will drop transport packets.

Direct HTTP Streaming has one single parameter:

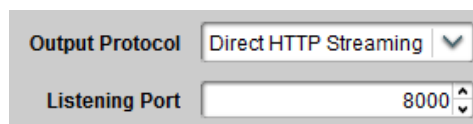

The image shows a configuration window with two fields. The first field is labeled "Output Protocol" and has a dropdown menu with "Direct HTTP Streaming" selected. The second field is labeled "Listening Port" and has a text box containing the number "8000".

⁷ Newer iPods/iPhones may be able to play higher resolutions and frame rates.

-
- **Listening Port:** Use this to select the TCP port to be used by the NOVUS to listen to HTTP connections. Please note that the NOVUS will not accept the values 22, 23 and 80⁸, 1935 and 5253 for this parameter as these ports may be internally used by the NOVUS. The listening ports for Encoders 1 and 2 can be set independently (and can be set to the same value if desired).

The URL for accessing the bitstream will be:

http://encoder_ip:port/encoder1 (access to encoder1)
or
http://encoder_ip:port/encoder2 (access to encoder2)

Where **encoder_ip** is the IP address of either one of the NOVUS Ethernet ports (configured in the Network Tab) and **port** is the Listening Port configured above. For example, if one of the IP addresses of the NOVUS is set to 10.10.9.80, and the Listening Port is set to 8000 (as shown above), the URL for Encoder 1 will be:

http://10.10.9.80:8000/encoder1

The NOVUS standalone encoder, when set in this mode, can also serve bitstream through the management Ethernet ports.

Please note that none of the common web browsers (Explorer, Firefox, etc) are capable of directly playing this URL; what these browsers will do is download the bitstream to a file. If you wish to see video playback on a web page, please review the “Playing Video on a Web Page” section later in this document.

RTMP

The NOVUS can operate as an RTMP client, and publish a real-time, live bitstream to an RTMP server. RTMP clients (such as the Adobe® Flash® Player) can connect to the server and play the live stream. The NOVUS can generally connect to the same servers as the Adobe Flash Live Media Encoder (FMLE).

An RTMP server publishing point is defined by the following:

- An RTMP URL, of the form:

rtmp[t][e][s]://servername/app

- A stream name

The first part of the URL defines the protocol, as follows:

- **rtmp:** standard RTMP with no security

⁸ The NOVUS has an internal Web Server running on port 80.

- **rtmpt**: RTMP tunneled over HTTP
- **rtmpe**: encrypted RTMP using proprietary security
- **rtmps**: encrypted RTMP over SSL
- **rtmpte**: encrypted RTMP using proprietary security, tunneled over HTTP
- **rtmpts**: encrypted RTMP over SSL, tunneled over HTTP

The **servername** field is the host name or IP address of the RTMP server to be contacted. The **app** field is the application in the server that should receive the data being transmitted. Note that, depending on the service, the **app** field may contain a complete path or even a set of parameters.

The RTMP configurable parameters are:

The screenshot shows a configuration window for RTMP. It includes the following fields and options:

- Output Protocol**: A dropdown menu set to "RTMP".
- RTMP Protocol**: A dropdown menu set to "rtmp".
- Primary Server**: A text input field containing "server.domain.com".
- Backup Server**: A text input field containing "backup.domain.com".
- Port Selection**: Two radio buttons, "Use Default" (selected) and "Specific Port".
- Authentication**: Two radio buttons, "Yes" and "No" (selected).
- App**: A text input field containing "app/parameter".
- Server URL**: A text field displaying the constructed URL "rtmp://server.domain.com/app/parameter".
- Stream**: A text input field containing "stream_name".
- Connect**: Two radio buttons, "Yes" (selected) and "No".

- **RTMP Protocol**: Select the protocol variant, as discussed above.
- **Primary Server**: Enter the host name or IP address of the primary (or single) RTMP server to be contacted. If you want to use host names instead of IP addresses, make sure to configure at least one DNS server. DNS servers may be configured in the Network Configuration DNS Tab. DNS servers can also be configured in the **Error! Reference source not found.** or obtained by DHCP.
- **Backup Server**: If you have a backup RTMP server, configure it here; otherwise, this field can be left empty. The encoder will only attempt to contact the backup RTMP server if it cannot establish a connection with the primary server.
- **Port Selection**: If your RTMP server is using the default TCP ports for the protocol variant, select **Use Default**. If your server is using a non-standard port, select **Specific Port**. When **Specific Port** is selected, an additional field is displayed:

Backup Server: backup.domain.com

Port Selection: ☐ Use Default ☒ Specific Port

Port: 1935

Authentication: ☐ Yes ☒ No

- **Port:** This field is only displayed if **Port Selection** is set to **Specific Port**. Configure a non-standard TCP port here.
- **Authentication:** Some RTMP servers require username/password authentication for access. If your server does not require authentication, select **No**, otherwise select **Yes**. If you select **Yes**, additional fields are presented:

Port Selection: ☒ Use Default ☐ Specific Port

Authentication: ☒ Yes ☐ No

Username: streamer

Password: ●●●●●●●●

App: app/parameter

- **Username:** Enter the username to be used for authentication.
- **Password:** Enter the password to be used for authentication.
- **App:** Enter the application name in the server, as discussed above. Consult your CDN or server documentation to find out what should be entered in this field.
- **Server URL:** This field is automatically updated as you configure the RTMP parameters. It displays the full RTMP URL for the primary server. The backup server URL is similar.
- **Stream:** Enter the stream name. Consult your server documentation or CDN to find out what should be entered here. Some servers allow arbitrary stream names, while others use this field for authentication and thus require specific names.
- **Connect:** This parameter controls whether or not the encoder should actually establish a connection with the server. If you set this parameter to **No**, the encoder will run but no data will be transmitted. This is useful to pre-configure a session, and turn it on later when it comes the time to broadcast.

Notes:

- The maximum aggregate RTMP performance for the NOVUS is **12 Mb/s**. If the unit has two encoder channels, this limit applies to the sum of their video bit rates. For example, if one encoder channel is configured for RTMP at 8 Mb/s, the other can only be configured for RTMP at 4 Mb/s or less. The limit does not apply to encoder channels configured for UDP/RTP/ASI streaming.
- Using one of the encrypted variants of the protocol (**rtmpe**, **rtmps**, **rtmpte**, or **rtmpts**) will also have a performance impact and will reduce the maximum usable rate.

-
- Performing a firmware update while the encoder is running RTMP at high bit rates may cause service interruptions to the RTMP stream. If you need to update the firmware, we recommend that you do so during a maintenance window.

The Apply/Cancel Buttons

The **Apply/Cancel** buttons are available at the bottom of the **Basic**, **Advanced**, and **Connection** screens. These are not separate buttons – they are multiple instances of the same buttons, repeated on each screen for convenience. If no changes have been made to the settings, the **Apply/Cancel** buttons are grayed out; once any changes are made, they become available. Changes do not take effect until the **Apply** button is pressed. If you make changes but decide not to apply them, click on the **Cancel** button and the user interface reverts to where it was before. Once you click on the **Apply** button, the changes are implemented.




In general, most changes will cause the encoder channel to stop and start again, causing a brief (2-second) interruption to the stream. Changes to the following parameters are implemented on-the-fly, without stopping the encoder:

- Audio Source in Basic Tab – Audio Configuration
- Language Code in Basic Tab – Audio Configuration
- Any CC/AFD configurations made in Advanced Tab – VBI/Ancillary Data Insertion
- Audio Gain L/R in Analog Audio Parameters
- Audio Mute L/R in Analog Audio Parameters
- Audio Type and Dolby PMT Type in PMT Information
- Transport Stream ID in Advanced Tab – Mux Parameters
- Enable SDT and all the SDT parameters in Advanced Tab – Mux Parameters
- Any connections made in the ASI/IP Streaming selection
- Secondary Audio PID changes in Encoder 1 when Secondary Audio is enabled.

Encoder Statistics Tab

The Encoder Statistics Tab is divided into four lower tabs, as indicated below:

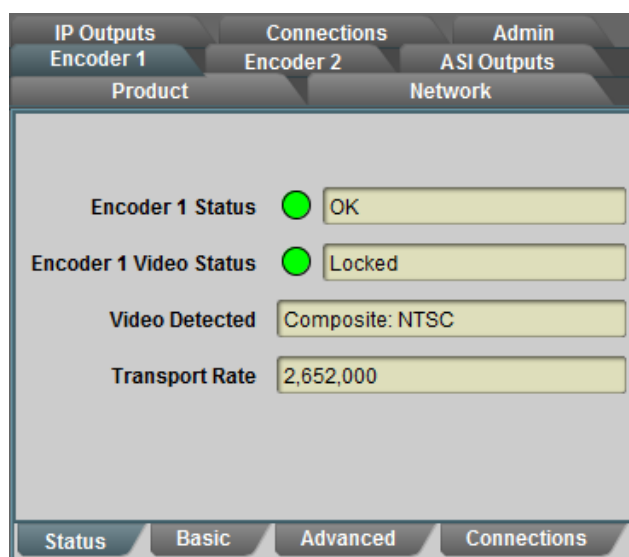

The **Basic**, **Advanced** and **Connections** tabs are direct equivalents of their configuration counterparts. They present the current value of each of the configuration parameters. When the **Apply/Cancel** buttons are grayed out, the contents of these tabs exactly match their configuration counterparts. When the **Apply/Cancel** buttons are active, configuration parameters have been changed. The current (running) encoder configuration can still be inspected in the statistics tabs, prior to clicking on the **Apply** button.

The **Status** Tab provides a summary of the current status of the encoder. The variables displayed in this tab vary according to the encoder configuration, but the following three basic parameters are always displayed:

- **Encoder 1/2 Status:** This gives the overall encoder status. Its values are:
 - **OK:** The encoder is running normally.
 - **Stopped:** The encoder has been manually stopped (see **Encoder State** in Basic Tab – General Configuration).
 - **Error:** The encoder should be running but it is not. This status will be briefly shown when the encoder is starting. The possible causes for this are:
 - The encoder has no input (check **Encoder 1/2 Video Status**)
 - There is a mismatch between the video input signal and the encoder configuration. For example, the input is 1080i and the encoder is configured for 720p.
- **Encoder 1/2 Video Status:** This indicates whether or not the video input front-end is locked. This status is also reflected in the rear I/O panel LED next to the video input. The possible values are:
 - **Locked:** The video input front-end is locked.
 - **Unlocked:** The video input front-end is unlocked.

- **Video Detected:** If there is any recognizable video signal at the encoder video input, this field will indicate what type of signal the encoder is detecting. This detection is independent of the video input settings and is intended to aid the operator in making the correct selection. If a video signal is detected, the text in this field will either start with the word **Composite** (if an analog composite video signal is detected), or **SDI** (if a digital SDI signal is detected). If no recognizable video signal is detected, this field will indicate **No signal**. For the detected video signals, the encoder will provide further information on the type of signal, as follows:
 - For **Composite** signals, the encoder will further report the encoding system, as follows:
 - Systems with 59.94 fields/sec: **NTSC, NTSC 4.43, PAL-M**
 - Systems with 50 fields/sec: **PAL B/D/G/H/I/N, PAL-Nc, SECAM**
 - For **SDI** signals, the encoder will indicate additional information, as follows:
 - For Standard Definition signals, this field will report **SDI: SD**.
 - For High Definition signals, this field will report resolution, frame/field rate, and whether the signal is progressive or interlaced. Examples:
 - **SDI: 1920x1080i59.94**
 - **SDI: 1280x720p50**
- For High Definition signals whose resolution is not 1920x1080 or 1280x720, the encoder will report the input as **SDI: unknown**. Encoding of such signals is not supported by the EN460.
- **Transport Rate:** This indicates the overall transport rate, including NULL packets, coming out of the encoder subsystem. If you are connecting this encoder to an IP Output or ASI port in manual rate mode, the configured bit rate must be at least this value. If you are connecting this encoder to an IP Output with padding disabled, the actual rate will be lower than this value as the NULL packets will be stripped from it.

If Closed Captions are enabled, the encoder reports whether or not it is receiving them:


The image shows a screenshot of an encoder's status interface. It contains several rows of status indicators and text fields. The 'Encoder 1 Status' row shows a green circle and the text 'OK'. The 'Encoder 1 Video Status' row shows a green circle and the text 'Locked'. The 'Video Detected' row shows the text 'Composite: NTSC'. The 'Closed Captions' row is highlighted with a red rectangular border and shows the text 'Present'. The 'Transport Rate' row shows the text '2,652,000'.

Encoder 1 Status	OK
Encoder 1 Video Status	Locked
Video Detected	Composite: NTSC
Closed Captions	Present
Transport Rate	2,652,000

- **Closed Captions:** This reports Closed Caption insertion. This field will report **Present** or **Not Present**. If Closed Captions are reported as **Not Present**, the possible reasons are:
 - If the caption source is EIA-608 Line 21, it means that the encoder cannot find a valid closed caption waveform on that line.
 - If the caption source is SMPTE-334 VANC, it means that the encoder is either not receiving closed caption messages, or it is receiving EIA-708 messages without a caption field.

Note that it is possible for the encoder to be receiving closed caption data that is empty (without actual captions). These will be reported as **Present**.

If AFD insertion is enabled, the encoder reports whether or not it is receiving them, and what AFD code is being inserted:

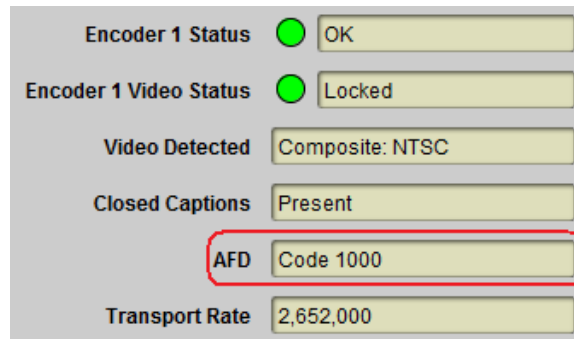


The image shows a software window with the following fields and values:

Encoder 1 Status	OK
Encoder 1 Video Status	Locked
Video Detected	Composite: NTSC
Closed Captions	Present
AFD	Code 1000
Transport Rate	2,652,000

The 'AFD' field and its value 'Code 1000' are highlighted with a red rectangular border.

- **AFD:** This reports AFD insertion. This field will report either **Not Present** (if no AFD is being received) or **Code XXXX**, if AFD is being received; XXXX is the current AFD code being inserted. If AFD Source is set to Manual AFD Selection, this field will report the selected manual code.

If the input is SDI, the encoder reports the detected type of SDI signal:

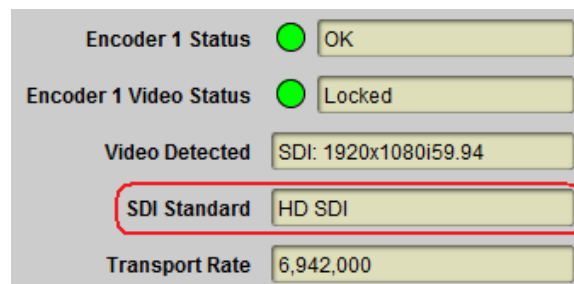

The image shows a software window with the following fields and values:

Encoder 1 Status	OK
Encoder 1 Video Status	Locked
Video Detected	SDI: 1920x1080i59.94
SDI Standard	HD SDI
Transport Rate	6,942,000

The 'SDI Standard' field and its value 'HD SDI' are highlighted with a red rectangular border.

- **SDI Standard:** this indicator reports the detected SDI signal. Possible values are **unlocked**, **SD SDI**, **HD SDI** and **3G SDI**. This is useful to resolve SDI signal mismatch issues (for example, when the input signal is SD SDI and the encoder is configured for HD).

If the input is SDI and the **Audio Source** parameter in Basic Tab – Audio Configuration is set to **SDI Embedded Audio**, two more indicators are shown:

Encoder 1 Status	●	OK
Encoder 1 Video Status	●	Locked
Video Detected	SDI: 1920x1080i59.94	
Encoder 1 Embedded Audio	●	Present
Encoder 1 Audio Status	●	OK
SDI Standard	HD SDI	
Transport Rate	6,942,000	

- **Encoder 1/2 Embedded Audio:** This indicator flags whether or not embedded audio is actually present on the selected Group/Channel combination (see Basic Tab – Audio Configuration). The following values are presented:
 - ● **Present:** Embedded audio is present in the selected Group/Combination.
 - ● **Not Present:** The SDI input has no lock, it is not possible to determine whether embedded audio is present or not.
 - ● **Not Present:** Embedded audio is not present in the selected Group/Channel combination. Check the source settings, or select a different Group/Channel combination.
- **Encoder 1/2 Audio Status:** This indicator flags any errors in the embedded audio and will have the following values:
 - ● **OK:** No errors detected.
 - ● **Not Present:** Embedded audio is not present – errors cannot be detected. This status will be issued when there is no SDI lock, or when there is no embedded audio.
 - ● **Error:** Embedded audio errors are being detected. If this indicator is red, audio is corrupted or glitching. The possible causes for this are:
 - Corrupted embedded audio in the input – checksum errors
 - Audio sampling rate mismatch
 - The channel is configured for Dolby Passthrough, and the data present in the selected Group/Channel is not Dolby AC-3

If Dolby Passthrough is configured, one additional indicator is shown:

Encoder 1 Status	● OK
Encoder 1 Video Status	● Locked
Video Detected	SDI: 1920x1080i59.94
Encoder 1 Embedded Audio	● Present
Encoder 1 Audio Status	● OK
Encoder 1 Passthrough	Dolby AC-3, 448 kb/s
SDI Standard	HD SDI
Transport Rate	7,173,000

- Encoder 1/2 Passthrough:** This indicator contains the status of the Dolby AC-3 Passthrough function. It may contain the following values:
 - Dolby AC-3, xxx kb/s:** this means that the data in the selected group/pair has been correctly identified as Dolby AC-3; its bit rate is reported here.
 - Unknown Format:** this means that data is present in the selected group/pair, but it is not Dolby AC-3.
 - Not Present:** this means that there is no data in the selected group/pair.

If **Secondary Audio** is **Enabled**, then the status of both audio channels will show in the Encoder 1 Status tab. The actual indicators displayed will depend on the individual settings of each audio channel. The picture below shows an example where both audio channels are embedded Dolby AC-3 Passthrough.

Encoder 1 Status	● OK	
Encoder 1 Video Status	● Locked	
Video Detected	SDI: 1920x1080i59.94	
Encoder Embedded Audio 1	● Present	Audio 1 Indicators
Encoder Audio 1 Status	● OK	
Encoder Passthrough 1	Dolby AC-3, 448 kb/s	
Encoder Embedded Audio 2	● Present	Audio 2 Indicators
Encoder Audio 2 Status	● OK	
Encoder Passthrough 2	Dolby AC-3, 448 kb/s	
SDI Standard	HD SDI	
Transport Rate	7,643,000	

HTTP Live Streaming is selected in the Encoder Connections Tab, four more indicators are added to the status area:

Encoder 1 Status	● OK
Encoder 1 Video Status	● Locked
Video Detected	Composite: NTSC
Closed Captions	Present
Transport Rate	2,586,000
IP Output Rate	2,312,977
Segments Transferred	17
HTTP Dropped Segments	0
HTTP Transfer Errors	0

- **IP Output Rate:** this indicator reports the average transfer rate into the server, in bits/second, averaged over the last segment.
- **Segments Transferred:** this indicator reports the number of bitstream segments successfully transferred so far.
- **HTTP Dropped Segments:** this indicator reports the number of segments dropped. A segment will be dropped if the previous segment has not been completely transferred when it becomes ready. A non-zero count here indicates that there is a performance problem between the encoder and the server – either in the network (not enough bandwidth) or in the server (not enough CPU power/disk bandwidth). If the segment size is small (3 seconds or less), increasing the segment size may improve the situation.
- **HTTP Transfer Errors:** this indicator reports the number of errors encountered while transferring segments. These may be network errors, or may be configuration errors. The exact error description will be shown in the configuration area, in the area on top of the **Apply** button. One example is shown below, where the server is not responding (incorrect IP address).

Output Protocol Select Protocol ▼

HTTP Streamer: couldn't connect to host

Apply Cancel

If Direct HTTP Streaming is selected in the Encoder Connections Tab, three indicators are added to the status area:

Encoder 1 Status	● OK
Encoder 1 Video Status	● Locked
Video Detected	Composite: NTSC
Closed Captions	Present
Transport Rate	2,586,000
IP Output Rate	4,737,336
Connections	2
Dropped Packets	0




- **IP Output Rate:** This indicator reports the aggregate average bit rate to all connected clients (so it can be higher than the transport rate).
- **Connections:** This indicator reports the number of clients currently connected to this encoder.
- **Dropped Packets:** This indicator reports the number of transport packets dropped over the current connections. Once a connection terminates, the dropped packet count for that connection is reset.

If **RTMP** is selected in the Encoder Connections Tab, five indicators are added to the status area:

Encoder 1 Status	● OK
Encoder 1 Video Status	● Locked
Video Detected	SDI: 1280x720p60
SDI Standard	HD SDI
Transport Rate	6,980,000
IP Output Rate	6,173,960
Encoder 1 RTMP Status	● Connected
Server Connection	Backup
Video Buffer %	2
Audio Buffer %	0
Dropped Packets	0

- **IP Output Rate:** this field reports the average bit rate transferred to the server. It will be lower than the transport rate due to the lower container overhead used by RTMP. It is possible for the IP Output Rate to be less than the intrinsic bit rate of the encoder for

short periods of time, depending on server and network conditions. The encoder will buffer the bitstream and attempt to “catch up” in these cases. If it cannot, audio/video bitstream data may be dropped.

- **Encoder RTMP Status:** This indicator reports the state of the RTMP connection to the server. The possible states are:
 -  **Connected:** The encoder has established a connection with the RTMP server and is transferring data.
 -  **Waiting for Encoder:** The encoder is not attempting to connect to the RTMP server. The reasons are:
 - The encoding core is not running (i.e., the encoder is not generating bitstream). This can be because the encoder is explicitly stopped (**Encoder State** set to **Stopped** in Basic Tab – General Configuration) or it has no valid input.
 - The RTMP output is configured not to connect to the server (**Connect** set to **No** in the **RTMP** configuration section).
 -  **Not Connected:** The encoder is running, but it is unable to connect to the RTMP server. Possible reasons are:
 - The encoder cannot contact the server.
 - The RTMP parameters are incorrect.

Check the **Error! Reference source not found.** for more details.


- **Server Connection:** RTMP can be optionally configured with a primary and a backup server. If the primary server cannot be contacted, the encoder will attempt to connect to the backup server. This field indicates which server (**Primary** or **Backup**) the encoder is currently connected or attempting to connect.
- **Video Buffer %, Audio Buffer %:** The encoder has separate buffers for audio and video. These buffers are used to temporarily store the bitstream if there is no enough network and/or server bandwidth. However, if this situation persists, the buffers start to fill up. These indicators report the current state of the buffers. If they overflow, data is dropped. Ideally, these buffers should stay empty (close to 0%).
- **Dropped Packets:** If the buffers overflow, data is dropped. The encoder will drop entire access units (an audio block or a video frame). This indicator has a count of the number of access units dropped for the current connection. This count resets when a new connection is established.

ASI Outputs Tab

The NOVUS has 2 ASI output ports that can be independently configured. This tab is used to configure and manage them.

ASI Ports: Configuration Tab

The default appearance of the Configuration tab is:

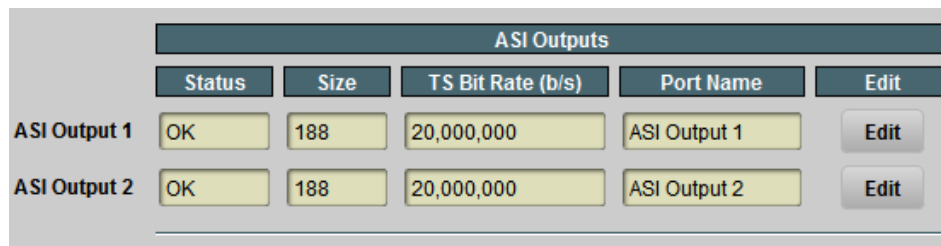

	Status	Size	TS Bit Rate (b/s)	Port Name	Edit
ASI Output 1	OK	188	20,000,000	ASI Output 1	Edit
ASI Output 2	OK	188	20,000,000	ASI Output 2	Edit

The **ASI Outputs** table contains the current configuration of the ports, as follows:

- **Status:** Indicates the port status. It can contain the following values:
 - **OK:** Port is operating normally.
 - **Unlocked:** Port is unlocked. This means that the port is in Automatic Bit Rate mode and it has no input.
 - **Overflow:** Transmit overflow. This means that the ASI Output is in Manual mode, and the configured bit rate is insufficient to carry the bitstreams connected to it. This situation will raise an alarm as packets are being dropped.
- **Size:** Indicates the configured transport packet size, in bytes.
- **TS Bit Rate (b/s):** This reports the actual transport stream bit rate, in bits/second.
- **Port Name:** This reports the user-configured Port Name.
- **Edit Button:** Clicking on this button allows configuration of the port. The ASI Output Configuration screen appears, with the settings for the selected port.

To configure an individual port, click on the **Edit** button for that port. The following configuration interface opens:

ASI Output 1 Configuration

ASI Output Parameters

Port Name: ASI Output 1

Packet Size: ☒ 188 ☐ 204

ASI Rate: ☒ Manual ☐ Automatic

Bit Rate: 20000000

Input Selection Connection Parameters

Port	Name	Connect
Encoder 1	Encoder 1	<input type="checkbox"/>
Encoder 2	Encoder 2	<input type="checkbox"/>
TPG 1	TPG 1	<input type="checkbox"/>
TPG 2	TPG 2	<input type="checkbox"/>

Apply

Cancel

The configuration screen can be divided into two parts:

- ASI Output Parameters
- Input Selection Connection Parameters

The Connection Parameters are common to all outputs, and are described in the Connection section, later in this document. The ASI Output Parameters are:


- **Port Name:** All NOVUS encoders and outputs can be assigned a user-defined **Port Name**. This name is used to identify the port later when making connections. Use any descriptive name suitable for your application, or accept the default.
- **Packet Size:** Select between 188 and 204 bytes.
- **ASI Rate:** The following two modes are available:
 - **Manual:** In this mode, the ASI output bit rate is set to the value entered in the **Bit Rate** field. The ASI output will maintain this rate at all times, as follows:
 - If there is no connection to the ASI port, or if the input connected to the ASI port is not active, the ASI port will transmit NULL packets.
 - If the connected input bit rate is lower than the rate entered in the **Bit Rate** field, the ASI port will add NULL packets as required to pad it to the desired value. PCR packets will be re-stamped as required.

- If the connected input bit rate is higher than the rate entered in the **Bit Rate** field, the ASI port will attempt to remove NULL packets from the connected bitstream in order to achieve the desired value. PCR packets will be re-stamped as required. If there are not enough NULL packets to be deleted, packets will be dropped, and an alarm will be raised. This alarm will be indicated in the Dashboard™ **Card State** field, in the front Status LED, and in the ASI Statistics page.
- **Automatic:** If this mode is selected, the **Bit Rate** field disappears. The ASI output will exactly match the rate of the connected bitstreams. However, if the connected ports have no data, or if there is no connection to the ASI port, there will be no output, and any connected downstream ASI device will indicate loss of sync. The ASI Statistics page will indicate this state, as well as the rear I/O panel indicator LED. Note that an alarm will only be raised if there is at least one connection to the ASI output.
- **Bit Rate:** This field is only available if the **ASI Rate** mode is set to **Manual**. Enter the desired ASI output bit rate here, in bits/second. The minimum value is 64,000 and the maximum value is 213,000,000.

Once the port is configured, click on the **Apply** button, and the configuration takes effect.

ASI Ports: Statistics Tab

The Statistics Tab for the ASI Ports provides a quick visual summary status for the ports. A sample, corresponding to the table example of the previous section, is depicted below.

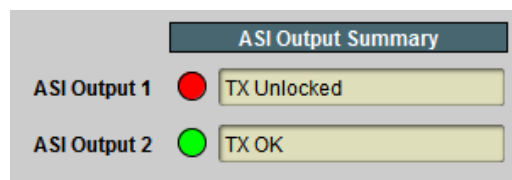

Each of the ASI Port indicators can have the following values:

- **TX OK:** The port is operating normally in transmit mode (ASI Output).
- **TX Overflow:** The connected bit rate is excessive. The Dashboard™ Card State will be red and the Status LED in the front of the NOVUS will also be red. To correct this problem, either reduce the connected bit rate, or increase the ASI output bit rate, or configure the port in Automatic mode. **If this alarm is active, data is being dropped.**
- **TX Unlocked:** The port is in automatic bit rate, and there is no data rate coming to it. Any downstream ASI receivers will lose lock. Dashboard™ Card State and the Status LED will be red if there is a connection to this port.


IP Outputs Tab

IP Outputs receive data from connected inputs, format this data for transmission over UDP/IP, and send it with very precise timing over the Ethernet ports. The NOVUS supports up to 4 transport stream outputs per Ethernet port. IP Outputs have the following specifications:

- Formats supported:
 - MPEG-2 Transport Packets over UDP/IP
 - MPEG-2 Transport Packets over RTP/UDP/IP
- Number of MPEG-2 Transport Packets per UDP datagram: fixed at 7.
- Addressing support: unicast, multicast and broadcast.
- Advanced control over the IP header fields available.
- SMPTE 2022 FEC available⁹. The NOVUS supports one FEC session per Ethernet port.

IP Outputs: Configuration Tab

IP output stream can be created, configured, and removed using this configuration area. Before any streams are created, the Configuration Tab appears as depicted below:

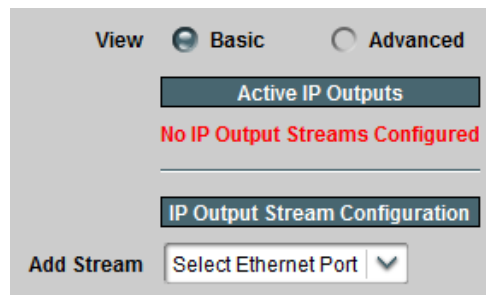

To create an IP Output stream, first select the desired Ethernet port in the **Add Stream** drop-down box. Once that selection is made, the IP Output Stream Configuration is displayed, as depicted below (Basic View). The configuration screen has two areas:

- **IP Output Parameters:** these are the parameters specific to the IP Output configuration. The set of parameters available for configuration depends on the **View** selection. In the **Basic** view, suitable default values are entered for the advanced parameters.
- **Input Selection Connection Parameters:** these allow a connection to be made to the output stream.

The Connection Parameters are common to all outputs, and will be described in the Connection section, later in this document.

⁹ Previously known as Pro-MPEG FEC COP3.

IP Output Stream Configuration

Add Stream: Ethernet Port 1

Enabled: ☒ Yes ☐ No

UDP Port: 1024

Destination Address: 225.1.1.1

Stream Name: Port 1 Stream 1

NULL Padding: ☒ Disabled ☐ Enabled - Automatic Rate ☐ Enabled - Manual Rate

IP Output Parameters

Input Connections

Port	Name	Connect
Encoder 1	Encoder 1	<input type="checkbox"/>
Encoder 2	Encoder 2	<input type="checkbox"/>
TPG 1	TPG 1	<input type="checkbox"/>
TPG 2	TPG 2	<input type="checkbox"/>

Input Selection Connection Parameters

The Basic View configuration parameters are as follows:

- **Enabled:** This allows the output stream to be enabled or disabled. If it is disabled, no packet transmission takes place. This feature is provided for testing purposes (i.e., temporarily disable an output for fault-finding). Most users will leave the stream enabled.
- **UDP Port:** selects the UDP port to transmit to. Valid values are between 1 and 65535. Note that, in traditional IP networks, UDP ports between 1 and 1023 are reserved for administrative uses. AdvancedDigital recommends the use of UDP ports 1024 and higher. The NOVUS, however, will accept any legal value. Note that if the port is configured for RTP (see the Advanced View discussion later in this section), the UDP port must be an even number, and the NOVUS user interface will enforce this restriction – odd numbers will be automatically rounded up.
- **Destination Address:** selects the IP address to transmit to. Any unicast or multicast address can be entered here, with the exception of the loopback range (127.0.0.0 to 127.255.255.255). The NOVUS will also accept the broadcast IP address of 255.255.255.255, and will transmit the packets as Ethernet broadcasts. Use of broadcasts, however, is strongly discouraged.
- **Stream Name:** All NOVUS input and output ports can be assigned a user-defined name. This name is used to identify the stream later when making connections. Use any descriptive name suitable for your application, or accept the default.

-
- **NULL Padding:** This setting controls whether or not NULL packets are transmitted, making the stream completely CBR. IP networks are inherently VBR, and do not require NULL packets (which carry no information). However, the decoders may need them. The following is a good set of rules for deciding whether or not to send NULL packets:
 - If all your decoders are consumer IP set-top boxes or PCs running software decoders, NULL packets can be disabled.
 - If your decoders include professional IRDs, NULL packets must be enabled. The great majority of professional IRDs will not work without them.
 - If you are generating an MPTS (routing both encoders to the stream), enable NULL packets. An MPTS without NULL packets is technically illegal as per ISO/IEC 13818-1, but some systems support it.
 - If you are not sure about what kind of decoder will be receiving the stream, enable NULL packets.

This control offers the following options:

- **Disabled:** NULL packets are disabled and will not be transmitted. This will cause the stream to be somewhat VBR, even if the encoder is set to CBR mode.
- **Enabled – Automatic Rate:** This setting enables NULL packets, but the bit rate is automatically set by the NOVUS to the minimum suitable value. This is the recommended setting. If you later reconfigure an encoder connected to this stream, the rate will be automatically adjusted.
- **Enabled – Manual Rate:** This setting allows you to specify the overall stream bit rate. If you specify the bit rate, it must be high enough to support the connected encoders (i.e., it must be at least equal to the sum of the encoder **Transport Rate**, found in each encoder **Status** tab). Specifying a rate that is not high enough will cause the IP Output to drop packets. Note that if this option is selected, the IP Output will be transmitting continuously at the selected bit rate, regardless of connections or the state of the encoders. If there is no connection to the IP Output, it will transmit only NULL packets; if there are connections and the encoders are stopped, it will transmit NULL packets plus (P)SI tables.

If the Advanced View is selected, four more parameters are available for configuration:

View ☐ Basic ☒ Advanced

IP Output Stream Configuration

Add Stream Ethernet Port 1

Enabled ☒ Yes ☐ No

UDP Port 1024

Destination Address 225.1.1.1

Stream Name Port 1 Stream 1

TOS 0

TTL 128

DF Bit ☒ Set ☐ Not Set

RTP ☐

Advanced Parameters

- **TOS:** This parameter allows the configuration of the Type-Of-Service (TOS) byte in the IP header (also known as the Differentiated Services – DS – field). Valid values are between 0 and 255. Configuring this is only useful if the downstream router is configured to honor the field.
- **TTL:** This parameter allows the configuration of the Time-To-Live (TTL) byte in the IP header. Valid values are between 0 and 255. If not explicitly configured, it defaults to 128. This field controls how many hops the packet can traverse before it is dropped by a router. The default value of 128 is suitable for virtually all applications.
- **DF Bit:** This parameter allows the configuration of the Do-not-Fragment (DF) bit in the IP header. The NOVUS will never produce fragmented packets, and with the UDP payload set to 7 transport packets, the IP packets are guaranteed to fit inside the Ethernet MTU. This control is provided for compatibility with legacy switches/routers. Some legacy equipment may exhibit performance problems if this bit is not set. This is not an issue with current network equipment.
- **RTP:** If this box is checked, the NOVUS will include RTP (Real Time Protocol) headers in the output flow. If it is not checked, the transport stream will be sent over UDP/IP without any additional headers. Note that RTP requires the use of even UDP port numbers; when this box is checked, the user interface will enforce this restriction. The NOVUS will not generate RTCP packets.

If the **RTP** box is checked, an additional control to enable SMPTE 2022 FEC may be displayed if a FEC session is available for configuration. The NOVUS only supports one FEC session per Ethernet port; once FEC is enabled on a given stream, this option will not be offered for the other streams in the same port. This is depicted below:

TOS

TTL

DF Bit ☒ Set ☐ Not Set

RTP ☒

SMPTE 2022 FEC ☐

- **SMPTE 2022 FEC:** Check this box to enable transmission of SMPTE 2022 FEC packets for this stream.

Once the **SMPTE 2022 FEC** box is checked, additional parameters become available for configuration:

RTP ☒

SMPTE 2022 FEC ☒

FEC Mode ☒ Column Only ☐ Row and Column

Columns

Rows

FEC Overhead 25 %

- **FEC Mode:** If you select **Column Only**, the NOVUS will send a single FEC flow, corresponding to the column protection data, using a UDP port number corresponding to the media UDP port number plus 2. If you select **Row and Column**, the NOVUS will send two FEC flows, the first corresponding to the column protection data, and the second corresponding to the row protection data. The row protection data will be sent using a UDP port number corresponding to the media UDP port number plus 4. Note that not all receivers support Row and Column mode; such receivers will only use the FEC Column data and discard the FEC Row data.
- **Columns:** Number of columns in the FEC matrix. This variable must be between 1 and 20 if **FEC Mode** is set to **Column Only**, and between 4 and 20 if it is set to **Row and Column**.
- **Rows:** Number of rows in the FEC matrix. This variable must be between 4 and 20.
- **FEC Overhead:** This field is updated as configuration is entered, and contains the overhead for the selected FEC configuration. Note that not all parameter changes cause the overhead to change. The FEC overhead is the sum of a Column overhead and a Row overhead (which is zero if **FEC Mode** is **Column Only**). The overhead is a function of the settings, as follows:

-
- **Increasing** the number of columns **decreases** the Row overhead (if enabled) and **does not change** the Column overhead.
 - **Increasing** the number of rows **does not change** the Row overhead and **decreases** the Column overhead.
 - **Decreasing** the number of rows and columns has the opposite effect as the previous items.

The following constraints apply to the FEC function:

- The number of rows must be between 4 and 20.
- The number of columns must be between 1 and 20 for Column Only mode, or between 4 and 20 in Row and Column mode.
- The size of the FEC matrix (product of the number of rows and the number of columns) must not exceed 100.

The user interface will not allow invalid configurations to be entered, and will automatically make parameter adjustments as required. Examples:

- If you select Row and Column, and the number of columns is less than 4, it will be automatically adjusted to 4.
- If your number of rows is 10, and you set the number of columns to 20, the number of rows will be automatically reduced to 5.

Once the configuration information is filled in, click on the **Apply** button to make it active. If there are no errors, the stream will be created, and the configuration area disappears. If any errors are detected, they will be displayed at the top of the **Apply** button.

The following configuration-related errors are flagged:

- **Error: UDP Port/Address conflict with Port X/Y:** you have configured two IP Output streams with the same destination IP Address and UDP port, on the same Ethernet interface. Please review your settings. Note that ports with FEC enabled will use either two or three UDP ports (depending on the FEC settings) – these are checked as well.
- **Maximum number of streams exceeded on this port:** you will receive this message if you attempt to create more than 4 IP outputs on a given Ethernet port.
- **Error: No SMPTE 2022 FEC License Available:** the SMPTE 2022 function requires licensing. Please contact AdvancedDigital to obtain a license.

If the configuration is successful, the output stream will be added to the Active IP Outputs table.

Active IP Outputs Table

Once the output is created, it is added to the **Active IP Outputs** table, which has **Basic** and **Advanced** views. This table provides a summary of the configuration and status of the output stream. An example of this table, in the Basic view, is depicted below

View		Active IP Outputs						
<input checked="" type="radio"/> Basic		<input type="radio"/> Advanced						
Stream	Enabled	TS	UDP	Destination	Stream	Edit	Delete	
		Bit Rate(b/s)	Port	Address	Name	Stream	Stream	
Stream 1/1	Yes	2,463,000	1024	225.1.1.1	SPTS From Encoder 1	Edit	Delete	
Stream 1/2	Yes	2,963,000	1025	225.1.1.2	Encoder 1 NULL-padded	Edit	Delete	
Stream 2/1	Yes	5,926,000	1024	225.1.2.1	MPTS Auto Rate	Edit	Delete	
Stream 2/2	Yes	6,000,000	1025	225.1.2.2	MPTS Manual Rate	Edit	Delete	

The Basic view includes the following:

- **Enabled:** The configured value of this parameter.
- **TS Bit Rate (b/s):** This column provides the current bit rate of the output transport stream. This does not include UDP and IP overhead.
- **UDP Port:** The configured value of this parameter.
- **Destination Address:** The configured value of this parameter.
- **Stream Name:** The configured stream name.
- **Edit Stream:** If you click on this button, you can modify all the parameters for this output. The configuration area will re-open with the current output settings.
- **Delete Stream:** If you click on this button, the stream is deleted and removed from the table.

When the Advanced view is selected, additional fields appear in the table, as depicted below:

View		Active IP Outputs												
<input checked="" type="radio"/> Basic		<input type="radio"/> Advanced												
Stream	Enabled	TS	Null	UDP	Destination	TOS	TTL	DF	RTP	FEC	Destination	Stream	Edit	Delete
		Bit Rate(b/s)	Padding	Port	Address						MAC	Name	Stream	Stream
Stream 1/1	Yes	2,463,000	No	1024	225.1.1.1	0	128	Set	Yes	1X4 C	01005e010101	SPTS From Encoder 1	Edit	Delete
Stream 1/2	Yes	2,963,000	Auto	1025	225.1.1.2	0	128	Set	No	Off	01005e010102	Encoder 1 NULL-padded	Edit	Delete
Stream 2/1	Yes	5,926,000	Auto	1024	225.1.2.1	0	128	Set	Yes	4X10 R-C	01005e010201	MPTS Auto Rate	Edit	Delete
Stream 2/2	Yes	6,000,000	Manual	1025	225.1.2.2	0	128	Set	No	Off	01005e010202	MPTS Manual Rate	Edit	Delete

The Advanced view includes all items in the Basic view plus the following:

- **Null Padding:** The configured value of this parameter (shown as **No**, **Auto**, or **Manual**).
- **TOS:** The configured value of this parameter.

-
- **TTL:** The configured value of this parameter.
 - **DF:** The configured value of this parameter.
 - **RTP:** The configured value of this parameter.
 - **FEC:** Summary of the FEC configuration. If FEC is disabled, this field will indicate it as **Off**. If FEC is enabled, this field will indicate the FEC matrix size as Columns \times Rows, and the protection mode as **C** for Column Only or **R-C** for Row and Column. In the example above, Stream 1/1 has Column Only FEC with 1 Column and 4 Rows, and Stream 2/1 has Row and Column FEC with 4 Columns and 10 Rows.
 - **Destination MAC:** The destination MAC address for this IP Output. For multicast destination addresses, this is derived from the destination IP address using the rules from RFC 1112. For unicast destination addresses, this is obtained using the ARP protocol. If this entry is the word **Unknown**, the NOVUS has failed to obtain a destination MAC address. The IP Output is **not** streaming. A more detailed description of the unicast MAC address algorithms used in the NOVUS is presented below.

Managing Unicast MAC Addresses

When the NOVUS is configured with a unicast destination address, it needs to obtain a corresponding MAC address (corresponding to either the final destination, if it is in the same subnet, or to the default gateway). These MAC addresses are obtained using the ARP protocol. The NOVUS uses a custom MAC address management algorithm, designed specifically for MPEG operation.


When an IP Output stream with a unicast destination address is created, the NOVUS immediately starts attempting to obtain a MAC address for it, using standard ARP requests. These requests are issued every two seconds until answered. No packets will be transmitted on that IP Output until a MAC address can be obtained. Note that this process will happen even if the stream is configured to be in the disabled state.

Once a MAC address is obtained, the NOVUS will cache it for about 5 minutes, as it is usual for IP devices. Unlike other IP devices, the NOVUS will keep on using the MAC address until a response is received, to avoid stream interruptions. If no response is received at that time, the NOVUS will raise a yellow alarm. This alarm can be seen in the IP Output Statistics tab, described in detail below.

The current state of the NOVUS current streaming ARP cache is available in the Advanced View of the Active IP Outputs table, described above.

IP Outputs: Statistics Tab

The Statistics tab for the IP output ports contains a summary of each stream status. There are two sub-tabs: one for Ethernet 1, and another for Ethernet 2. The tab is depicted below:

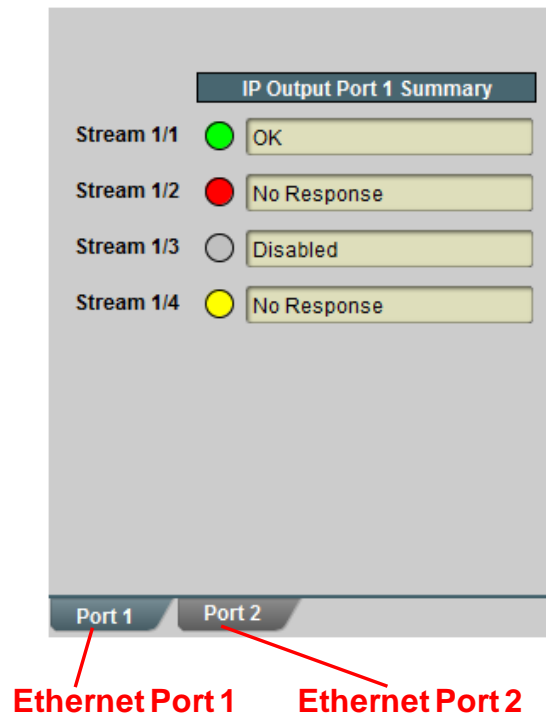

The indicators can have the following values:


- **OK:** The IP Output is operating normally (either streaming or ready to stream).
- **No Response:** The IP Output is configured for unicast operation, but it does not have a destination MAC address. If there is a connection to this output, Dashboard™ Card State and the Status LED will be red.
- **Overflow:** The IP Output is configured for NULL Padding with a manual rate, and the connected bitstream(s) exceed that configured manual rate. If this alarm is asserted, *packets are being dropped*. The Dashboard™ Card State and the Status LED will be red.
- **No Response:** The IP Output is configured for unicast operation, and the destination stopped responding to ARP. The IP Output is using an old cached MAC address. If there is a connection to this output, the Dashboard™ Card State will be yellow (but packets are being transmitted).
- **Disabled:** The IP Output has been disabled (by setting **Enable** to **No**).

Connections Tab

The Connections allows the creation, deletion, and management of input-output connections. The Statistics tab includes all connected input/output status indicators and an overall summary status indicator, which allows the operator to immediately pinpoint errors.

Connections Configuration Tab

The Connections configuration tab is depicted below. The message “No Connections” will be displayed if there are no configured input/output connections in the NOVUS. If the NOVUS has two encoder channels installed, there will be two lower tabs, to switch between the Connections configuration interface and the MPTS configuration/status interface.

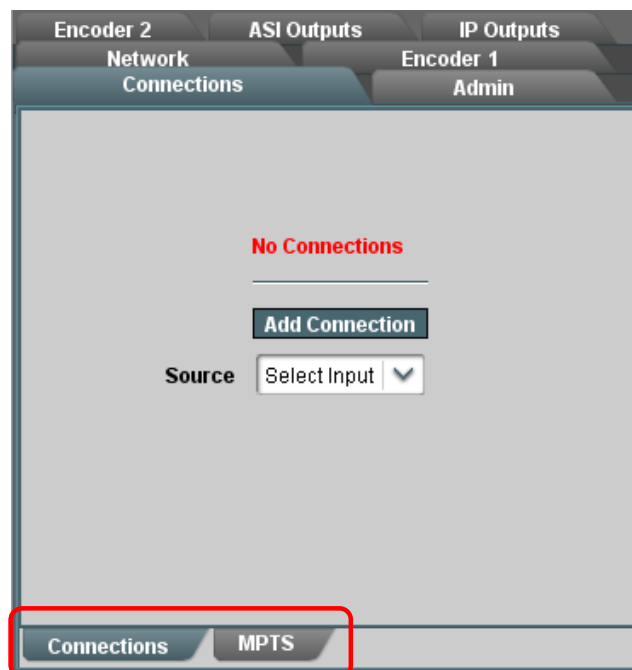

Present only if two encoder channels are installed


To establish a connection, simply select a source and a destination, and then click on Apply.

Source Selection

There are four sources in the NOVUS:

- Up to two Encoder channels (described in the Encoder 1, Encoder 2 Tabs section)
- Two Test Packet Generators (describe in the Admin Test Packet Generator Tab section)


The connection process starts by selecting one of these data sources, using the **Source** drop-down menu:

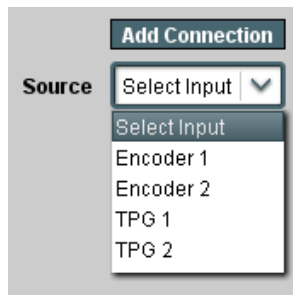


Once a source is selected, a list of available destinations is presented.

Destination Selection


The list of available destinations always includes all the defined IP Output ports, as well as the two ASI ports. This interface is also available if you select ASI/IP Streaming in the Encoder Connections Tab, and in the Admin Test Packet Generator Tab. If **Stream Display** is set to **Stream Names**, the user-defined names are presented. This is displayed below.

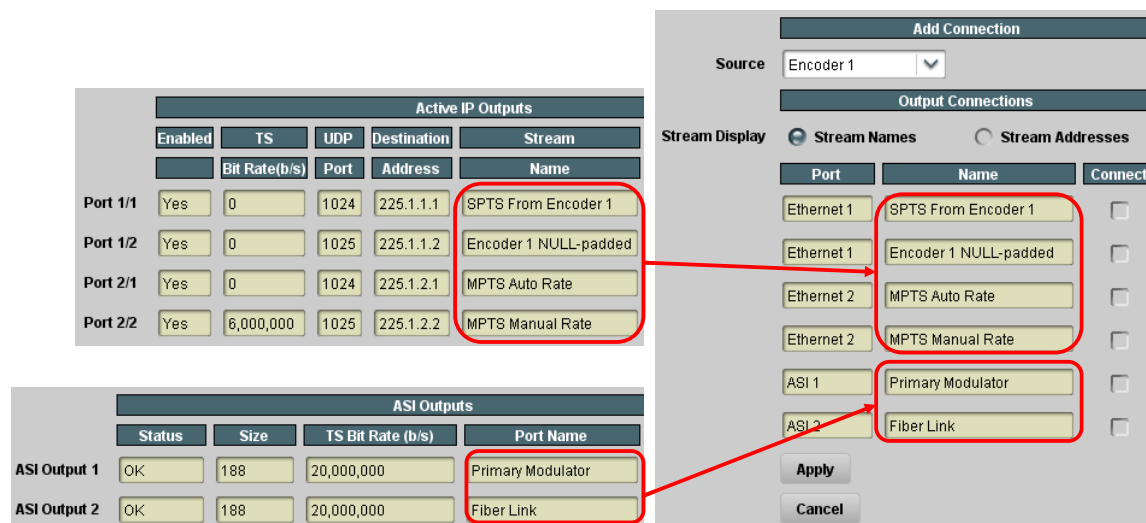

If you would prefer to make the output selection by Destination Address and UDP Port, set **Stream Display** to **Stream Addresses**; this option is illustrated below.

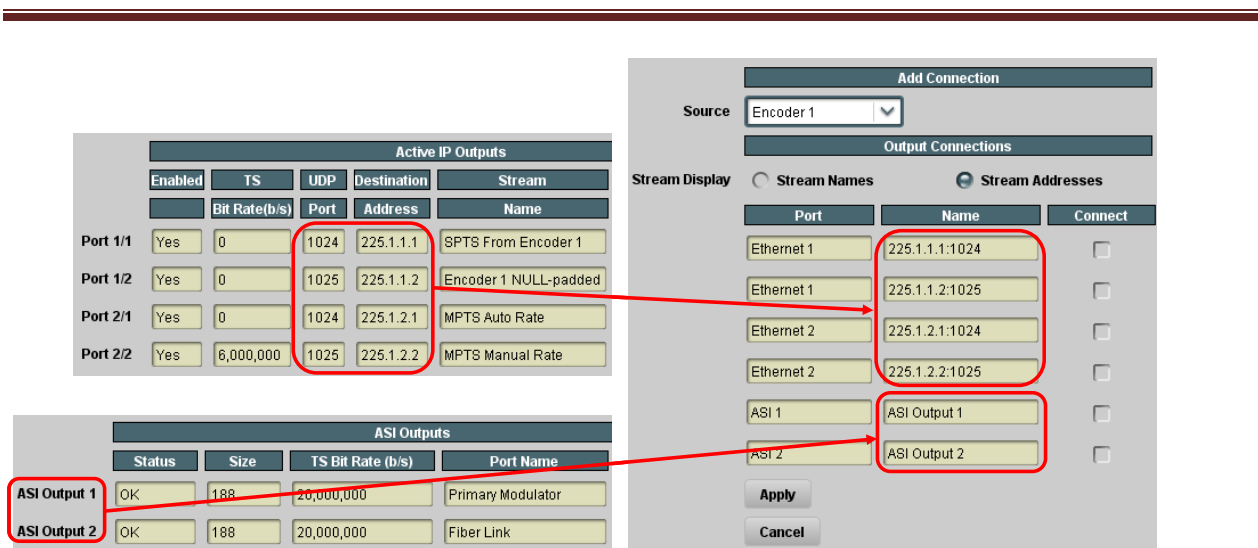


To make the connections, simply check the **Connect** box in front of the input you wish to use. You can connect any source to as many outputs as you wish. Conversely, unchecking the box disconnects that particular source-destination pair. Two examples are shown below:

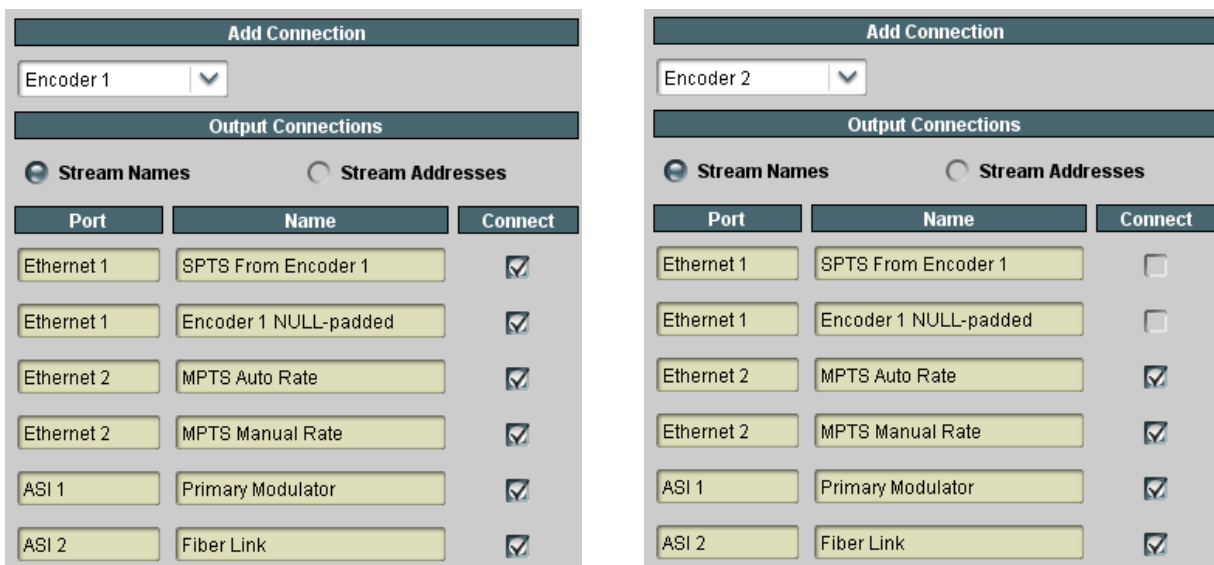

Source Selection in the Output Ports

When configuring an output (ASI or IP), connections can be immediately made as well, in that output's configuration interface (see ASI Ports: Configuration Tab and IP Outputs: Configuration Tab). The selection parameters are depicted below. The user-defined names for the Encoders (and Test Packet Generators) are displayed in the user interface to facilitate identification. To make the connection, just click on the corresponding checkbox under **Connect**. Note that if an encoder channel is not available (either because it is not installed or because it has been configured for HTTP Live Streaming), it will not show in the list.

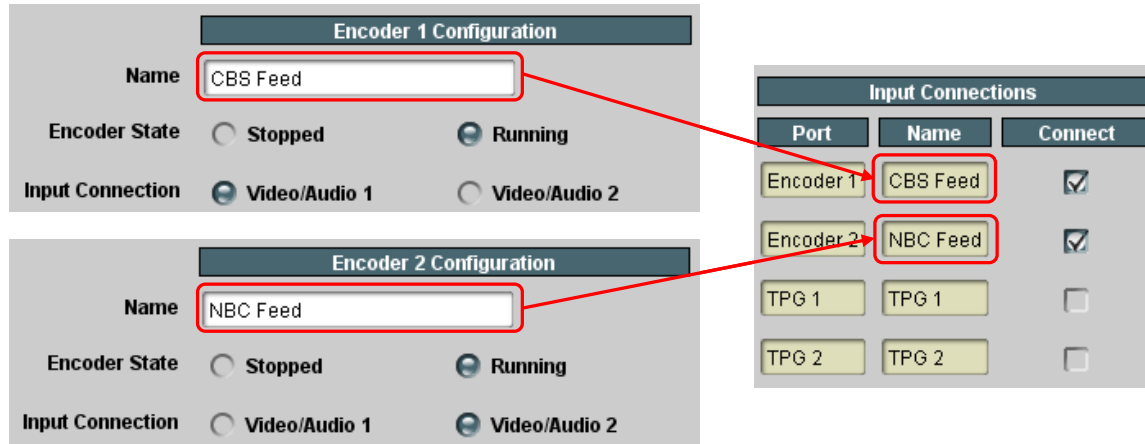

The Established Connections Table

As connections are established (either in the Connections tab, or as part of the source or output configuration), they are added to the Current Connections table. Regardless of how they got added, the connections can be managed using the functions in this table. A sample is depicted below.

The following columns are available in this table:

- **Source Port:** this column indicates the physical port of the connection. The possible values are **Encoder 1**, **Encoder 2**, **TPG 1** and **TPG 2**.
- **Source Name:** this column contains the user-defined name for the source.
- **Output Port:** this column indicates the physical output port for the connection. The possible values are **Ethernet 1**, **Ethernet 2**, **ASI 1** and **ASI 2**.
- **Output Name:** If the **Stream Display** control at the top of the table is set to **Stream Names**, this column will have the user-defined name for the output. If it is set to **Stream Addresses**, it will have the destination IP address and UDP port for IP Outputs, and the values **ASI Output 1** and **ASI Output 2** for the ASI ports.
- **Delete:** if you click on this button, the corresponding connection will be deleted.

Established Connections				
Stream Display		<input checked="" type="radio"/> Stream Names <input type="radio"/> Stream Addresses		
Source Port	Source Name	Output Port	Output Name	Connection
Encoder 1	CBS Feed	Ethernet 1	SPTS From Encoder 1	Delete
Encoder 1	CBS Feed	Ethernet 1	Encoder 1 NULL-padded	Delete
Encoder 1	CBS Feed	Ethernet 2	MPTS Auto Rate	Delete
Encoder 2	NBC Feed	Ethernet 2	MPTS Auto Rate	Delete
Encoder 1	CBS Feed	Ethernet 2	MPTS Manual Rate	Delete
Encoder 2	NBC Feed	Ethernet 2	MPTS Manual Rate	Delete
Encoder 1	CBS Feed	ASI 1	Primary Modulator	Delete
Encoder 2	NBC Feed	ASI 1	Primary Modulator	Delete
Encoder 1	CBS Feed	ASI 2	Fiber Link	Delete
Encoder 2	NBC Feed	ASI 2	Fiber Link	Delete

Connection Statistics Tab

The Connection Statistics Tab presents the combined status of all the established connections, in one table. It includes the Source Port, Source Name, Output Port and Output Name fields to identify the connections, and the rows are in the same order as the table in the Configuration Tab. The Statistics tab contains two additional fields, the **Source Status** and the **Output Status**. Since these are color-coded, it is simple to quickly identify any problems. If any of the **Source Status** or **Output Status** indicators are red, the Dashboard™ Card State will be red as well, and the Status LED in the front of the NOVUS will also be red.

The meaning of the indicators is as follows:

- **OK:** The stream is operating normally. If it is an encoder, it means that it is operating normally; if it is an output, it means that it is either transmitting or ready to transmit.
- **Warn:** The stream is configured but disabled. Simply enabling the stream may clear this situation.
- **Error:** The stream is configured but has detected a problem. If it is an encoder, it is not running. If this is an output, it normally means that the output is either unable to send (e.g., an IP output configured for unicast but unable to find the destination MAC address) or dropping packets (e.g., an oversubscribed ASI or IP output in manual rate mode). ASI Outputs with Automatic Rate will be in this state if they do not have data to transmit.

A sample of the Connection Statistics Tab is depicted below.

Established Connections					
Source Port	Source Name	Source Status	Output Port	Output Name	Output Status
Encoder 1	CBS Feed	OK	Ethernet 1	SPTS From Encoder 1	Warn
Encoder 1	CBS Feed	OK	Ethernet 1	Encoder 1 NULL-padded	OK
Encoder 1	CBS Feed	OK	Ethernet 2	MPTS Auto Rate	OK
Encoder 2	NBC Feed	OK	Ethernet 2	MPTS Auto Rate	OK
Encoder 1	CBS Feed	OK	Ethernet 2	MPTS Manual Rate	Error
Encoder 2	NBC Feed	OK	Ethernet 2	MPTS Manual Rate	Error
Encoder 1	CBS Feed	OK	ASI 1	Primary Modulator	OK
Encoder 2	NBC Feed	OK	ASI 1	Primary Modulator	OK
Encoder 1	CBS Feed	OK	ASI 2	Fiber Link	OK
Encoder 2	NBC Feed	OK	ASI 2	Fiber Link	OK

MPTS Configuration Tab

If two encoder channels are installed in the NOVUS, the MPTS Configuration Tab is available. This tab contains information specific to muxing the two encoders into one Multi-Program Transport Stream (MPTS).

MPTS Parameters

MPTS Transport Stream ID

0x1

MPTS Original Network ID

0xFF01

MPTS Configuration Parameters

MPTS PID/Program Allocation

PID Display

Hexadecimal

Decimal

	Program	Video	Audio	PCR	PMT	SDT
Encoder 1	1	0x100	0x110	0x101	0x20	No
Encoder 2	2	0x120	0x130	0x121	0x40	No

As indicated above, the MPTS Configuration Tab is divided into two distinct areas:

- The MPTS Configuration Parameters, which allow the setting of two MPTS-specific parameters.
- The MPTS PID/Program Allocation, which reports on the actual PIDs and Program numbers used in the MPTS.

MPTS Configuration Parameters

Whenever possible, the MPTS uses the same parameters as configured in the individual encoders. However, there are two parameters that need to be independently set, as follows:

- **MPTS Transport Stream ID:** This field sets the Transport Stream ID for the MPTS formed by multiplexing the two encoders. This field accepts both hexadecimal (starting with 0x) and decimal entries. Valid values are from 0 (0x0) to 65535 (0xFFFF).
- **MPTS Original Network ID:** This field set the Original Network ID to be reported in the MPTS SDT (if enabled). For a discussion of how to set the Original Network ID, please see the SDT description in Advanced Tab – Mux Parameters in the Encoder chapter.

MPTS Transport Stream ID	<input type="text" value="4"/>
MPTS Original Network ID	<input type="text" value="0xFF01"/>

Note that this window does not have an **Apply** button; changes take effect immediately and on-the-fly.

MPTS PID/Program Allocation

Since the PIDs and Program Numbers can be set arbitrarily in each encoder, it is possible to select the same values for one or more of these parameters between Encoder 1 and Encoder 2. However, when the bitstream from the encoders is multiplexed into one MPTS, these values have to be distinct.

When building the MPTS, the NOVUS will use the configured values for each encoder if at all possible. However, if there are any conflicts, the following rules are employed:

1. The PID/Program allocations made for Encoder 1 are used unchanged in the MPTS.
2. If any PIDs configured for Encoder 2 conflict with those from Encoder 1, the Encoder 2 PIDs are remapped to the closest free value. Note that this remapping only happens for the MPTS; ports carrying the bitstream for Encoder 2 only will use the configured values.
3. If the program number is the same for Encoder 1 and Encoder 2, the program number for Encoder 2 in the MPTS will be that of Encoder 1 plus 1. For example, if both encoders are configured to be program 4, Encoder 1 will be program 4 in the MPTS, and Encoder 2 will be program 5 in the MPTS. Both encoders will still be program 4 in their individual SPTS.
4. The MPTS will have an SDT if either Encoder 1 and/or Encoder 2 have the SDT enabled. If only one encoder has the SDT enabled, the MPTS SDT will have only one entry, for that encoder.

The MPTS PID/Program Allocation area reports the actual PIDs and Program Numbers being used in the MPTS. It also reports whether or not the individual SDTs are enabled per encoder.

PID Display ☒ Hexadecimal ☐ Decimal

	Program	Video	Audio	PCR	PMT	SDT
Encoder 1	1	0x100	0x110	0x101	0x20	No
Encoder 2	2	0x120	0x131	0x121	0x40	Yes

The **PID Display** control determines whether PIDs are displayed in Hexadecimal or Decimal.

PID Display ☐ Hexadecimal ☒ Decimal

	Program	Video	Audio	PCR	PMT	SDT
Encoder 1	1	256	272	257	32	No
Encoder 2	2	288	305	289	64	Yes


MPTS Statistics Tab

The MPTS Statistics Tab has the exact same information as the MPTS Configuration Tab. PIDs are displayed in Decimal or Hexadecimal depending on the setting in the configuration tab.

MPTS Parameters						
MPTS Transport Stream ID	4					
MPTS Original Network ID	0xFF01					
	Program	Video	Audio	PCR	PMT	SDT
Encoder 1	1	256	272	257	32	No
Encoder 2	2	288	305	289	64	Yes

Admin Tab

The Admin tab contains a number of general administrative functions, each on its own tab. The general layout is shown below:

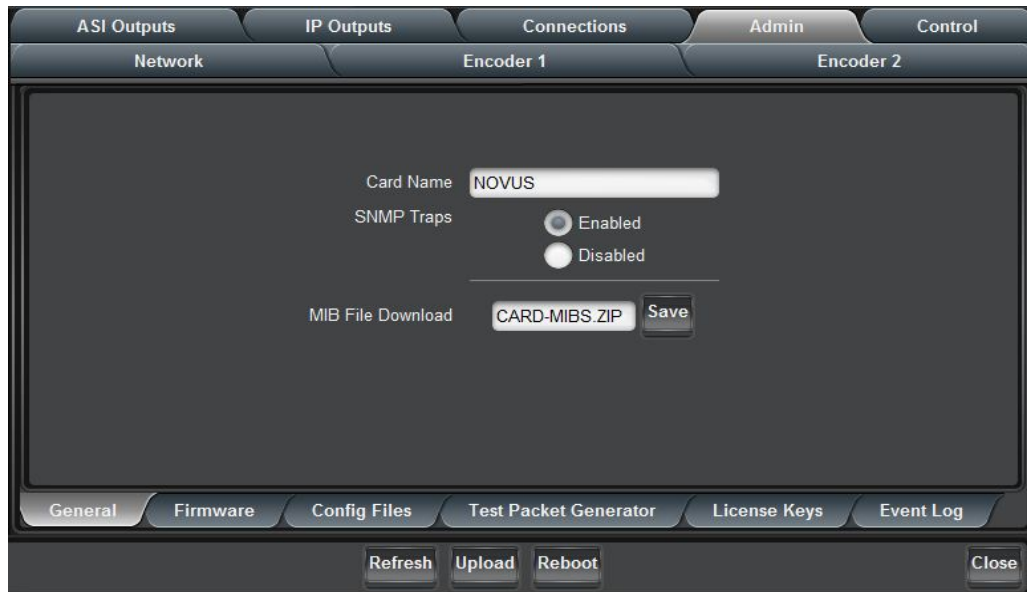

The Admin tabs are:

- **General:** Manages a number of general encoder parameters; provides an SNMP MIB download.
- **Firmware:** Manages firmware images.
- **Config Files:** The NOVUS has the ability to store multiple configurations, and it has a number of pre-set configurations as well. These are managed in this tab.
- **Test Packet Generator:** Manages the Test Packet Generators.
- **License Keys:** Contains the current licensing state of the NOVUS, and allows for new license keys to be entered.
- **Event Log:** The NOVUS contains a non-volatile event log. It can be inspected and downloaded from this tab.

The Admin Statistics tabs are simplified read-only versions of the corresponding Admin Configuration tabs. They will not be explicitly described here.


Admin General Tab

The Admin General Tab includes the following parameters:

- **Card Name:** This field defaults to “NOVUS” but can be set to any descriptive name. The name provided here will also appear in the Dashboard™ Tree View.

-
- **SNMP Traps:** This allows SNMP traps to be enabled or disabled. Note that this setting does not take effect immediately – it will become active the next time the NOVUS is rebooted.
 - **MIB File Download:** The NOVUS provides an up-to-date copy of its MIBs. If you click on the **Save** button, a zip file with the relevant MIBs will be downloaded to your computer. This zip file contains the NOVUS MIBs, as well as the Ross Video and openGear MIBs required to compile the NOVUS MIBs.

The Admin General Tab is depicted below:

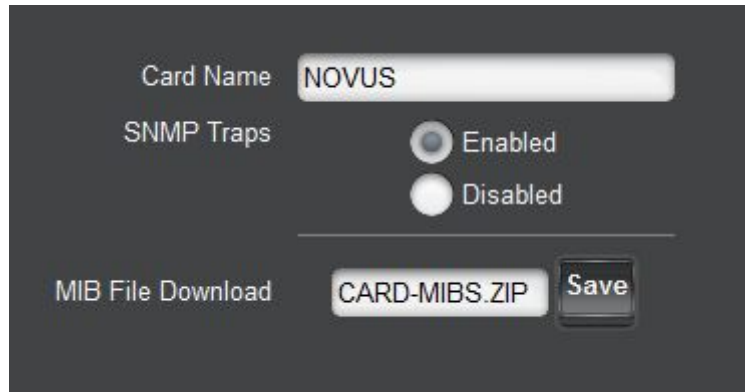

Card Name: NOVUS

SNMP Traps: ☒ Enabled ☐ Disabled

MIB File Download: CARD-MIBS.ZIP [Save]

Admin Firmware Tab

The NOVUS can hold up to three distinct firmware images: a **Factory** image, and two upgrade images, called **Image 1** and **Image 2**. The Factory image can never be overwritten, and will always be available as a fall-back in case of problems or failed updates. Image 1 and Image 2 can be updated at will. Since the NOVUS offers two upgrade images, it is always possible to fall back to the previous image if there are any problems with the current one. The NOVUS will also automatically fall back to the factory image if it detects a corrupted firmware image. Finally, the push buttons on the front of the NOVUS allow for a forced override to the factory image, as described in the Front Panel Default Switch section.

NOVUS firmware is easily updated. Once you obtained the upgrade image from AdvancedDigital, place it anywhere in your computer and click on the **Upload** button, as shown below. A dialog box allows you to select the upgrade file. For more detail, consult the **Dashboard User Manual**, chapter 6, section **Upgrading Device Software**. The Dashboard manual can be downloaded from:

<http://www.opengear.tv/n/?p=94>

Note that uploading firmware to the NOVUS does not affect its operation in any way and does not introduce any glitches in the inputs/outputs, except when running **RTMP** at high bit rate. If you are running **RTMP** at high bit rate, uploading firmware to the NOVUS may cause momentary stream interruptions.



The fields in the Firmware Image Management tab are:

- **Factory Image, Image 1, and Image 2:** These contain version and release date information for the corresponding firmware images. If no image is present, this field will indicate **No Image**.
- **Upload Location:** This field contains the location where the image upload will go. The NOVUS automatically chooses a location that will not overwrite the currently running image.
- **Boot Location:** This field indicates which image will be used in the next boot. If an image is successfully uploaded through Dashboard, this automatically changes to point to that image. It can also be manually changed.
- **Auto-Reboot After Update:** This field controls whether or not the NOVUS will automatically reboot after a successful firmware upload through Dashboard. By default, the NOVUS will **not** reboot after an update. You can upload the firmware at any time, and reboot later during a maintenance window.


Admin Config Files Tab

As you make configuration changes to the NOVUS, they are automatically persisted in non-volatile storage. If the encoder is rebooted or power-cycled, it will come back in the same configuration.

In addition to automatic configuration persistency, the NOVUS also offers the ability to save up to 5 complete configurations, load them, and even export them. This can be used to quickly configure it for different scenarios, or for saving configuration “checkpoints” as a complex configuration is built. Since configurations can be exported, they can be archived outside the encoder as well.

Finally, the NOVUS also offers 5 pre-saved configuration templates for some common scenarios.

The layout of the Admin Config Files tab is shown below.

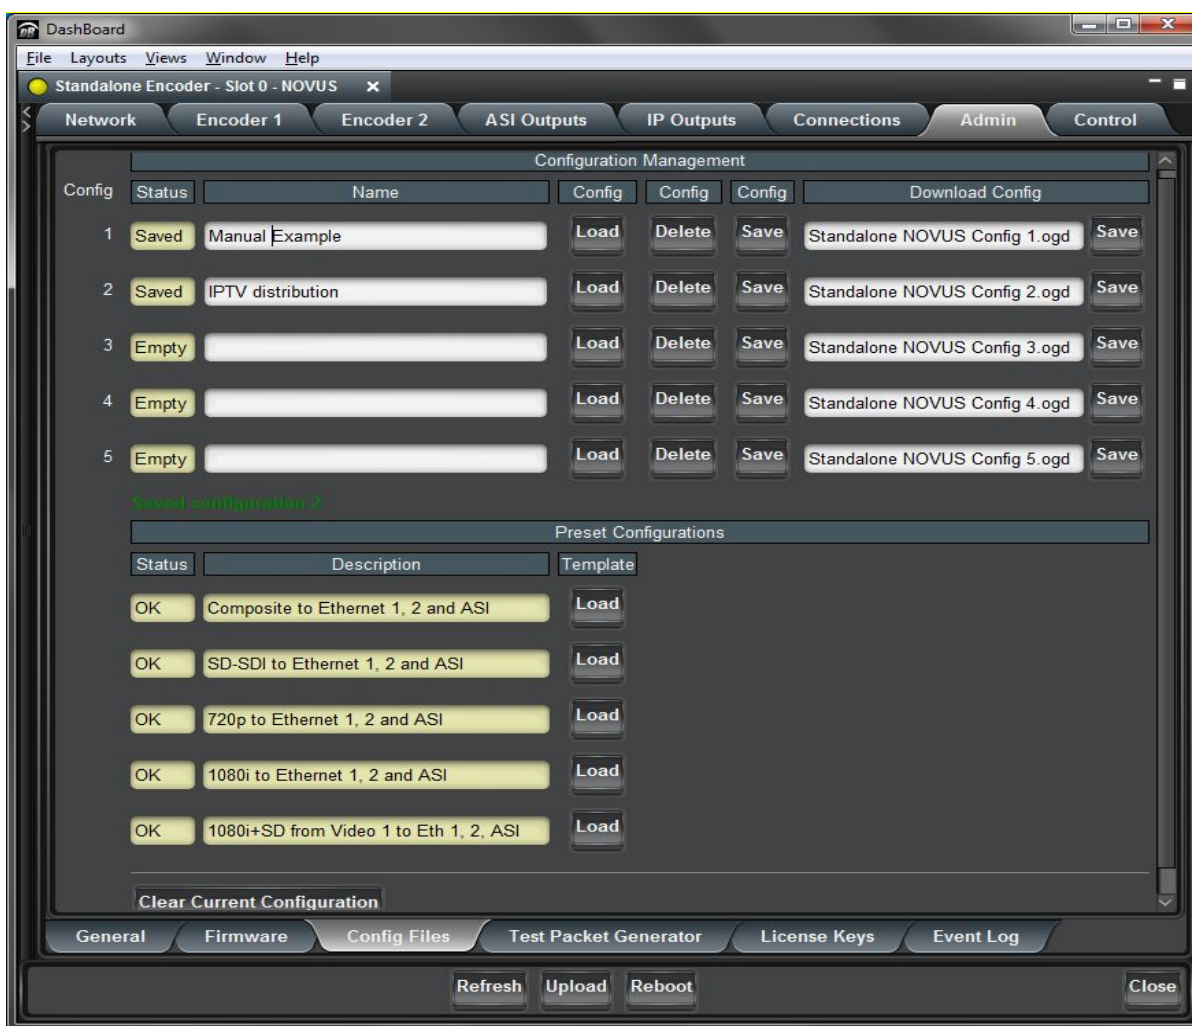

User-Saved Configurations

The fields in the user-saved configuration are:

- **Status:** This indicates whether there is a saved configuration on that particular slot. It will contain the words **Saved** or **Empty**.
- **Name:** This is an optional name for the configuration. It is not required but highly advisable. The name can be edited at any time (even when there is no saved configuration).
- **Config Load Button:** If you click on this button, the corresponding configuration is loaded in the NOVUS. It will replace the currently-running configuration. Dashboard™ will take a few seconds to reload (longer if you are accessing over a wide-area network), but the actual configuration in the NOVUS is virtually instantaneous. The Status Message Area will indicate the result of the operation.
- **Config Delete Button:** If you click on this button, the corresponding configuration and its description are deleted.
- **Config Save Button:** If you click on this button, the current NOVUS configuration is saved on the corresponding slot, possibly replacing the configuration saved there if it is not empty.
- **Download Config:** If you click on the **Save** button, the corresponding file is downloaded to your computer. This feature is provided to allow configuration backups.

If you save a configuration to your computer, and later wish to restore it to the NOVUS, use the following procedure:

Click on Views/Basic_Tree_View. Right-click on “Slot 0: NOVUS”, and select **Restore Configuration**. Follow the prompts and navigate to the file you wish to restore.

Pre-defined Templates

The NOVUS offers 5 pre-defined configuration templates, as indicated below.

Status	Description	Template
OK	Composite to Ethernet 1, 2 and ASI	Load
OK	SD-SDI to Ethernet 1, 2 and ASI	Load
OK	720p to Ethernet 1, 2 and ASI	Load
OK	1080i to Ethernet 1, 2 and ASI	Load
OK	1080i+SD from Video 1 to Eth 1, 2, ASI	Load

To load a template, just click on the **Load** button next to it. The pre-defined templates are;

-
- **Composite to Ethernet 1, 2 and ASI:** This template configures both encoders to run from composite inputs (Encoder 1 from Video 1, Encoder 2 from Video 2). Encoders are routed to individual multicasts on both Ethernet ports, and as an MPTS to both ASI Ports.
 - **SD-SDI to Ethernet 1, 2 and ASI:** This template configures both encoders to run from SD-SDI inputs (Encoder 1 from Video 1, Encoder 2 from Video 2). Encoders are routed to individual multicasts on both Ethernet ports, and as an MPTS to both ASI Ports.
 - **720p to Ethernet 1, 2 and ASI:** This template configures both encoders to run from HD-SDI 720p inputs (Encoder 1 from Video 1, Encoder 2 from Video 2). Encoders are routed to individual multicasts on both Ethernet ports, and as an MPTS to both ASI Ports.
 - **1080i to Ethernet 1, 2 and ASI:** This template configures both encoders to run from HD-SDI 1080i inputs (Encoder 1 from Video 1, Encoder 2 from Video 2). Encoders are routed to individual multicasts on both Ethernet ports, and as an MPTS to both ASI Ports.
 - **1080i + SD from Video 1 to Eth 1, 2, ASI:** This template configures both encoders to run from an HD-SDI 1080i input connected to Video 1. Encoder 1 runs at full resolution, Encoder 2 downscales the content to SD. Encoders are routed to individual multicasts on both Ethernet ports, and as an MPTS to both ASI Ports.

Clear Current Configuration Button

The **Clear Current Configuration** button clears all the configured ports and streams as follows:

- All ASI Ports are set to manual configuration, 20 Mb/s, 188-byte packets.
- All Encoders are stopped and configured with a default set of parameters.
- All IP Outputs are deleted.
- All Connections are removed.
- The Test Packet Generators are disabled.

The button does not affect the following areas:

- The settings in the **Network** tab are not changed.
- The settings in the **Admin General** tab are not changed.
- Saved configurations are not modified in any way.

Dashboard™ will take a few seconds to reload (longer if you are accessing over a wide-area network), but the actual configuration in the NOVUS is virtually instantaneous. The Status Message Area will indicate the result of the operation.

Admin Test Packet Generator Tab

The NOVUS includes two Test Packet Generators (TPG) that are capable of generating a configurable constant bit rate sequence of MPEG-2 Transport Packets with very strict timing. The TPGs are considered a source (input), and are available to be connected to any output. The user interface for the TPGs includes a current status table, which reports the current configuration of the generators.

Test Packet Generators				
	Mode	PID	Bit Rate (b/s)	Port Name
TPG 1	Disabled	0x80	0	TPG 1
TPG 2	Disabled	0x81	0	TPG 2

To configure one of the TPGs, click on the **Edit** button on its row. The following configuration parameters are displayed:

TPG 1 Configuration

Port Name

TPG 1

Mode

☒ Disabled
 ☐ NULL Packets
 ☐ Ramp48 Packets
 ☐ PCR Packets

PID

0x80

Bit Rate

64000

Output Connections

Stream Display

☒ Stream Names
 ☐ Stream Addresses

Port	Name	Connect
Ethernet 1	SPTS From Encoder 1	<input type="checkbox"/>
Ethernet 1	Encoder 1 NULL-padded	<input type="checkbox"/>
Ethernet 2	MPTS Auto Rate	<input type="checkbox"/>
Ethernet 2	MPTS Manual Rate	<input type="checkbox"/>
ASI 1	Primary Modulator	<input type="checkbox"/>
ASI 2	Fiber Link	<input type="checkbox"/>

Apply

Cancel

The configuration interface is divided into two areas:

- **TPG Configuration Parameters**, described in this section.
- **Output Selection Connection Parameters**, described in the Destination Selection section of the Connections Tab chapter.

The TPG Configuration Parameters are:

- **Port Name:** All NOVUS ports have a user-defined name, to facilitate routing. Enter any suitable name.
- **Mode:** controls the type of MPEG-2 transport packets generated. The options are:

-
- **Disabled:** TPG is disabled. No packets are being generated.
 - **NULL Packets:** TPG is generating NULL packets. If you select this option, the **PID** parameter becomes read-only with the value 1FFF.
 - **Ramp48 Packets:** TPG is generating packets with a “Ramp48 Payload”. A “Ramp48 Payload” is composed of the bytes 0x48, 0x49, 0x4A, ..., 0xFF. Generated packets have the Payload bit set, no Adaptation Field, and a valid Continuity Counter field. On request, AdvancedDigital can supply a test program for Windows or Linux that receives the Ramp48 packets and checks them.
 - **PCR Packets:** TPG is generating packets with a valid PCR field (stamped corresponding to the packet’s departure time at the configured bit rate). The packets have a small payload with random data, so the Continuity Counter field is valid and counting.
 - **PID:** controls the PID of the generated packets. This field accepts both decimal and hexadecimal values (prefixed with 0x).
 - **Bit Rate (bps):** controls the bit rate of the generated packets. The minimum value is 64,000 bps and the maximum value is 213,000,000 bps.

Admin License Keys Tab

The NOVUS has a number of optional licensable features. The Admin License Keys Tab is used to manage these features. Using this tab, you can see how many licenses you have for each optional feature, and how many you are currently using.

The NOVUS has the concept of a temporary license. If you want to try out a certain feature, contact AdvancedDigital. You will receive, free of charge, a license key that enables that feature for a specific period of running time (license time does not “count” when the encoder is off).

The Admin License Keys Tab includes a License Status table, and a configuration area, as shown below. The table rows are license counts, and the columns correspond to different licensable features. The rows are:

- **Permanent Licenses:** This is the number of non-expiring licenses for each feature.
- **Temporary Licenses:** This is the number of temporary licenses for each feature. Once the license period expires, they are removed.
- **Total Licenses:** This is the total number of licenses for each feature. It is simply the sum of the permanent and temporary licenses.
- **Used Licenses:** This is the number of licenses in use for each feature by the current encoder configuration.

If you have temporary licenses, the **Time Remaining** field indicates how long until they expire. If you do not have temporary licenses, this field has the message “No active temporary licenses”.

The table columns correspond to the licensable features, as follows:

- **AAC-LC Pairs:** The NOVUS requires one license per instance of AAC-LC stereo encoding.
- **SD Instances, HD/1080i Instances, HD/1080p Instances:** The maximum output resolution for the NOVUS is subject to licensing. Note that if the encoder has a license for a particular resolution, that license is good for any lower resolution as well.
- **OTT Protocols:** OTT (Over-The-Top) Protocols are HTTP Live Streaming and RTMP. Licenses in this column are applicable to both protocols. Each instance of either protocol requires a license.
- **SMPTE 2022 FEC:** This enables FEC for the encoder. This is not a counted feature; if FEC is enabled, the corresponding number is 1; if it is disabled, the corresponding number is 0. The Used Licenses field will be set to 1 if there is at least one FEC instance in use.

Feature	License Status					
	AAC-LC Pairs	SD Instances	HD/1080i Instances	HD/1080p Instances	OTT Protocols	SMPTE 2022 FEC
Permanent Licenses	2	0	1	2	2	1
Temporary Licenses	0	3	2	0	0	0
Total Licenses	2	3	3	2	2	1
Used Licenses	2	0	1	1	1	0
Time Remaining	3 days, 23 hours					
	License Key Installed OK					
License Key	<input type="text"/>					
	<button>Apply License Key</button>					
Serial Number	ac83f00013b8					

If you want to request a license key from AdvancedDigital, you will need to provide the NOVUS serial number. It can be found in the Product Tab and in the Admin License Key Tab as well. Once you receive the key from AdvancedDigital, enter it in the **License Key** field shown above, and click on the **Apply License Key** button. If the key is accepted, you will see the message *License Key Installed OK*, as illustrated above. If there are any problems, you will see an error message in the same location. The following are the possible error messages:

- **Invalid key: missing characters:** the key you entered is too short. Double-check that you entered all the characters.
- **Invalid/Corrupted Key:** the key you entered has the correct number of characters, but it is invalid. Double check what you entered.
- **Serial number mismatch: this key is for serial xxxxxxxxxxxx:** NOVUS license keys are specific to an encoder. You entered a valid license key, but it is intended for a different encoder, whose serial number is displayed in the message. You must use this key on the correct encoder.

-
- ***This key has already been applied:*** License keys can only be applied once. This is a valid key for this encoder, but you have already applied it, and its features are already available.

Admin Event Log Tab

The NOVUS includes an Event Log in non-volatile storage. This event log can be used for fault-finding, and to check for error conditions. The following information is included in each NOVUS event in the log:

- **Date:** The calendar date in which the event occurred.
- **Time:** The time at which the event occurred.
- **Severity:** The severity of the event. The NOVUS defines three severity levels:
 - **Error:** These are events that affect the operation of the device. For example, an ASI Input losing lock or an IP Input no longer receiving packets. An error will impact service until addressed.
 - **Warning:** These are events that may produce visible glitches, but they do not have a continuous service impact. Examples of warnings are automatic redundancy switches and ARP renewal failures.
 - **Info:** These are informational events. All configuration actions are logged with this severity. When an error is cleared (for example, an ASI Input regains lock), the event is logged with this severity as well.
- **Subsystem:** The subsystem affected by the event. This may be a port, a stream, or the encoder itself.
- **Event:** This is a textual description of the event.

The NOVUS does not have a battery-backed real-time clock. It depends on an external Network Time Protocol (NTP) server to obtain current date and time. By default, the NOVUS will initialize its internal time-of-day clock to January 1, 2010, GMT. If the NOVUS is NTP-synchronized, it will then accept time from NTP-server and set its time-of-day clock accordingly.

In order to configure the NOVUS for NTP, open its CONTROL Tab on Dashboard™ and enter the IP address of an available NTP server:

Device Name: Standalone Encoder

Control Interface Configuration

IP Configuration: ☒ Static IP ☐ DHCP

IP Address: 192.168.0.30

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.0.227

DNS Server: 192.168.0.2

NTP Server: 192.168.0.1


Apply

Cancel

If your NOVUS has access to the Internet, you can point it to one of the public NTP servers for your region. You can find more details on this link:

<http://psp2.ntp.org/bin/view/Servers/WebHome>

The full Admin Event Log tab is displayed below:

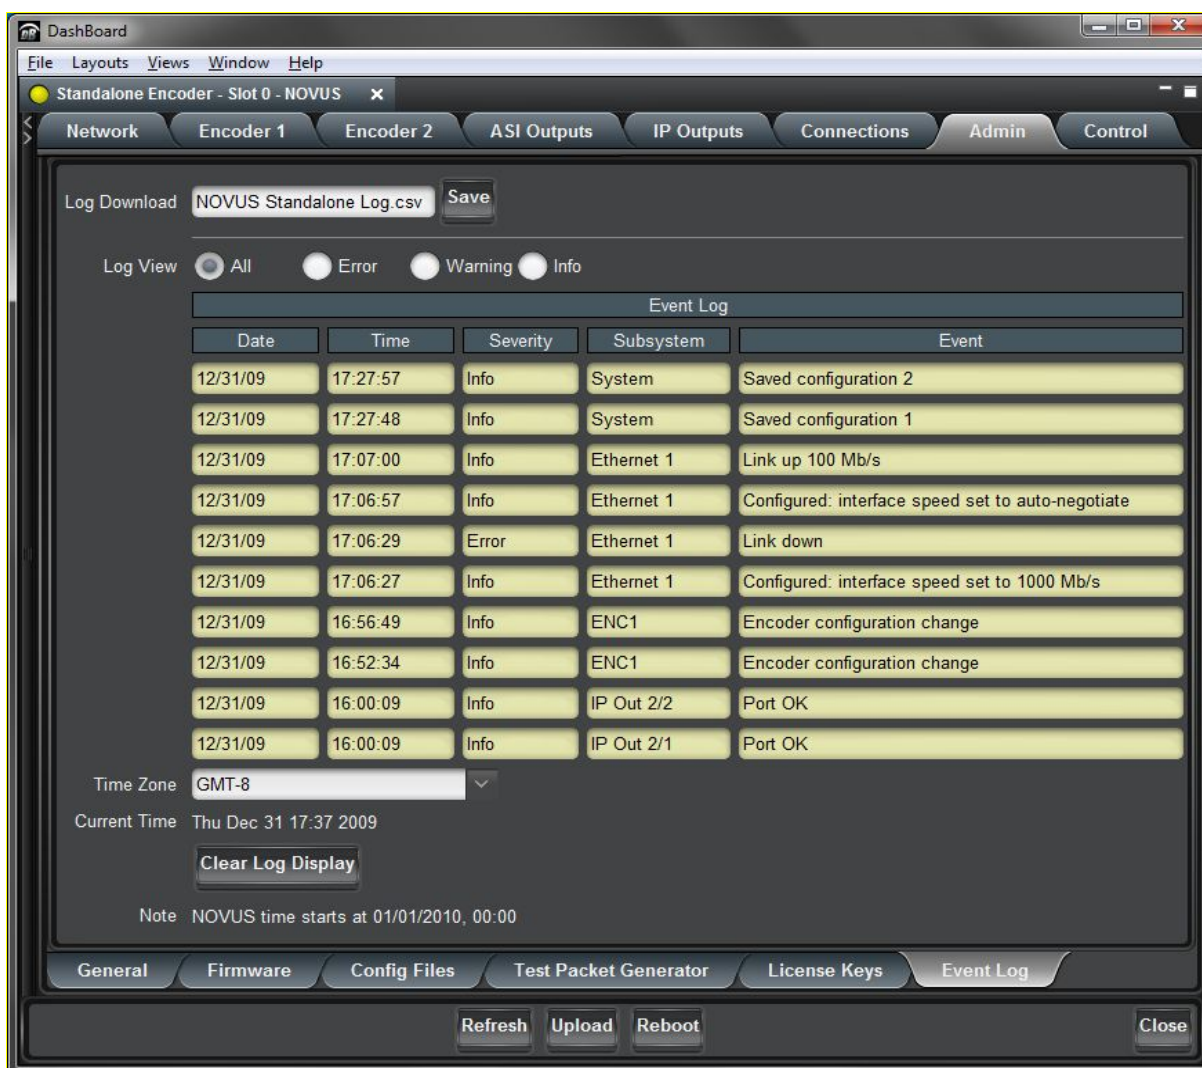

The fields are:

- **Log Download:** The user interface only displays the last 10 events of each type. If you would like to see the whole event log, it can be downloaded to your computer by clicking on the **Save** button. The log will be in CSV format, and it can be opened by any utility that can read text files; ideally, you should use a spreadsheet program such as Microsoft Excel or similar so it is presented in tabular format. The log will be in chronological order, oldest entry to newest.
- **Log View:** The user interface can display the last 10 events. You can choose to see the last 10 events of any kind by selecting **All**, or you can restrict the view only to **Info**, **Warning**, or **Error**.
- **Event Log:** This table presents the last 10 events of the selected type.
- **Time Zone:** To simplify the correlation of the events with your local time, you can set your time zone using this drop-down menu. Note that the NOVUS presents a simplified list, with standard GMT offsets. Note that standard GMT offsets do not change back and

forth with Daylight Savings; you will need to make this adjustment manually if it is relevant to you.

- **Current Time:** This field indicates the NOVUS view of what the current date and time is. If your NOVUS is not NTP-synchronized, this is useful to figure out “how long ago did this event happen”.
- **Clear Log Display:** If you click on this button, it clears all log views. This is useful to quickly identify any new events after the unit has been set up. Note that this action does not clear the logs stored in non-volatile memory.

The NOVUS will store up to about 400 kbytes of logs in non-volatile memory. When that limit is reached, the oldest half of the stored logs will be deleted to make space for new logs.

Control Tab

The Control Tab is used to configure the management Ethernet ports in the NOVUS. This includes both the IP information, as well as the SNMP parameters.

The NOVUS has two physical management (control) Ethernet ports. However, from a logical standpoint, they are a single port with a single IP address; the two connections are provided for control redundancy. If one port loses link, the unit can still be controlled from the other. If you do not need control redundancy, you can leave one of the ports disconnected. The unit will automatically and dynamically select the control port as follows:

- If only one port has link, that port will be used for control.
- If both ports have link, but at different speeds, the port with the highest speed will be used for control.
- If both ports have link at the same speed, Port 1 will be used for control.

Both ports support operation at 10, 100 and 1000 Mb/s, both half-duplex and full-duplex, with auto-negotiation and auto-crossover detection.

The Control Tab has two bottom tabs:

- **Control Port** is used to configure the IP parameters of the control port.
- **SNMP** is used to configure the SNMP parameters for the unit.

Control Port Configuration Tab

The control configuration window is depicted below:

The screenshot shows a web-based configuration interface for a device named "Standalone Encoder". The "Control Interface Configuration" tab is selected. Under "IP Configuration", the "Static IP" radio button is chosen. The fields are filled with the following values: IP Address (192.168.0.30), Subnet Mask (255.255.255.0), Default Gateway (192.168.0.227), DNS Server (192.168.0.2), and NTP Server (192.168.0.1). At the bottom are "Apply" and "Cancel" buttons.

Field	Value
Device Name	Standalone Encoder
Control Interface Configuration	Static IP
IP Configuration	Static IP
IP Address	192.168.0.30
Subnet Mask	255.255.255.0
Default Gateway	192.168.0.227
DNS Server	192.168.0.2
NTP Server	192.168.0.1

The configuration parameters are:



- **Device Name:** This field controls the top-level name of the device in the Dashboard tree. It defaults to “Standalone Encoder”. Changes to this field take effect immediately.
- **IP Configuration:** This field selects the control port IP configuration mode, as follows:
 - **Static IP:** This option selects a static IP address, specified by the IP Address, Subnet Mask, Default Gateway and DNS Server fields.
 - **DHCP:** This option selects control port IP address configuration by DHCP. If this option is selected, the IP Address, Subnet Mask, Default Gateway and DNS Server fields are not shown.
- **IP Address:** This field is only shown if **IP Configuration** is set to **Static IP**. Enter the desired control port IP address.
- **Subnet Mask:** This field is only shown if **IP Configuration** is set to **Static IP**. Enter the desired control port subnet mask.
- **Default Gateway:** This field is only shown if **IP Configuration** is set to **Static IP**. Enter the desired control port default gateway.
- **DNS Server:** This field is only shown if **IP Configuration** is set to **Static IP**. Enter the desired DNS Server IP address. Note that DNS is only used for RTMP output. This field can be left at 0.0.0.0 if RTMP is not used. If you wish to configure more than one DNS server, you can enter them in the Network Configuration DNS Tab. If you configure DNS servers here and in the Network Configuration, the server specified here will be contacted first.
- **NTP Server:** If you want the unit to be NTP-synchronized (for logging purposes), enter the IP address of an accessible NTP server in this field. If you do not need NTP, you can leave this field at 0.0.0.0. If your NOVUS has access to the Internet through the control port, you can point it to one of the public NTP servers for your region. You can find more details on this link:

<http://psp2.ntp.org/bin/view/Servers/WebHome>

- **Apply/Cancel:** Use these buttons to apply or cancel the changes to the control port IP configuration. Note that if you change the IP address, DashBoard may lose contact with the NOVUS. The IP Address, Subnet Mask and Default Gateway entries will be checked for consistency and will be rejected if invalid.

Control Port Statistics Tab

The Control Port statistics screen is depicted below. It contains the current settings for the control port. If you have configured the unit for DHCP, it will include the current IP Address, Subnet Mask, Default Gateway and the first DNS server obtained from the DHCP server. It also includes the link state for the individual control Ethernet ports.

Device Name	Standalone Encoder
Control Interface Configuration	
IP Configuration	Static IP
IP Address	192.168.0.30
Subnet Mask	255.255.255.0
Default Gateway	192.168.0.227
DNS Server	192.168.0.2
NTP Server	192.168.0.1
Control 1 Link	 Link OK
Control 1 Speed	100 Mb/s Full Duplex
Control 2 Link	 No Link
Control 2 Speed	No Link

SNMP Configuration Tab

The NOVUS includes a built-in SNMP agent with support for SNMP V1 and V2C. It will respond to SNMP transactions only on the control port, for security reasons. This tab includes the parameters for the SNMP configuration. Changes to these parameters take effect immediately.

SNMP Configuration	
Read Community	public
Write Community	private
System Contact	Contact Not Set
System Location	Location Not Set
Trap Destinations	
Trap Destination 1	0.0.0.0
Trap Destination 2	0.0.0.0
Trap Destination 3	0.0.0.0
Trap Destination 4	0.0.0.0
Trap Destination 5	0.0.0.0

The SNMP parameters are as follows:

- **Read Community:** this is the SNMP Read-Only community string.
- **Write Community:** this is the SNMP Read-Write community string.
- **System Contact:** this configures the value for the MIB-II System variable System Contact. Whatever value entered here is returned for SNMP queries to that variable.
- **System Location:** this configures the value for the MIB-II System variable System Location. Whatever value entered here is returned for SNMP queries to that variable.
- **Trap Destinations:** the NOVUS supports up to 5 trap destinations. Enter the desired IP addresses here. Note that the NOVUS will only generate SNMP V2C traps.

SNMP Statistics Tab

The SNMP statistics tab displays the current SNMP configuration.

	SNMP Configuration
Read Community	public
Write Community	private
System Contact	Contact Not Set
System Location	Location Not Set
	Trap Destinations
Trap Destination 1	0.0.0.0
Trap Destination 2	0.0.0.0
Trap Destination 3	0.0.0.0
Trap Destination 4	0.0.0.0
Trap Destination 5	0.0.0.0

Playing Video on a Web Page

In general, there are two ways of playing video on a web page:

- Using a web-browser plug-in
or
- Using the HTML5 **<VIDEO>** tag, for browsers that support it

Unfortunately, the HTML5 standard did not actually specify what type of audio/video encoding and container was to be supported. Therefore, even though the current versions of all major browsers support the **<VIDEO>** tag, there is no single format that will work on all browsers. Moreover, since the NOVUS is an encoder designed primarily for the broadcast market, it uses the transport stream container, which is not supported natively by any browser¹⁰. Therefore, it is not possible to use the HTML5 **<VIDEO>** tag with content generated by the NOVUS.

In order to play the bitstream coming from the NOVUS in a web page, a plug-in with the appropriate audio, video and container support must be installed in the web browser. The Open-Source VideoLAN player includes appropriate plugging that will work with the bitstream coming from the NOVUS. The VideoLAN player can be downloaded from:

<http://www.videolan.org/vlc/>


There are two types of plug-ins:

- ActiveX controls, used by Internet Explorer
- “Mozilla” (Netscape) style plug-ins, used by most other browsers (Firefox, Chrome, Safari)

When installing the VideoLAN player, make sure to select the appropriate plug-ins for the browsers you intend to use. The figure below indicates the choices to be made during the VideoLAN installation in order to get the plug-ins installed on a Windows PC. If multiple browser support is required, both types of plug-ins can be selected (but at least one “Mozilla-style” browser must be already installed).

We recommend VideoLAN version 2.0.1 or later. Earlier versions had stability problems with the Mozilla plug-in and did not support HTTP Live Streaming.

¹⁰ A number of browsers support the MP4 container format, but this container does not support real-time encoded video.

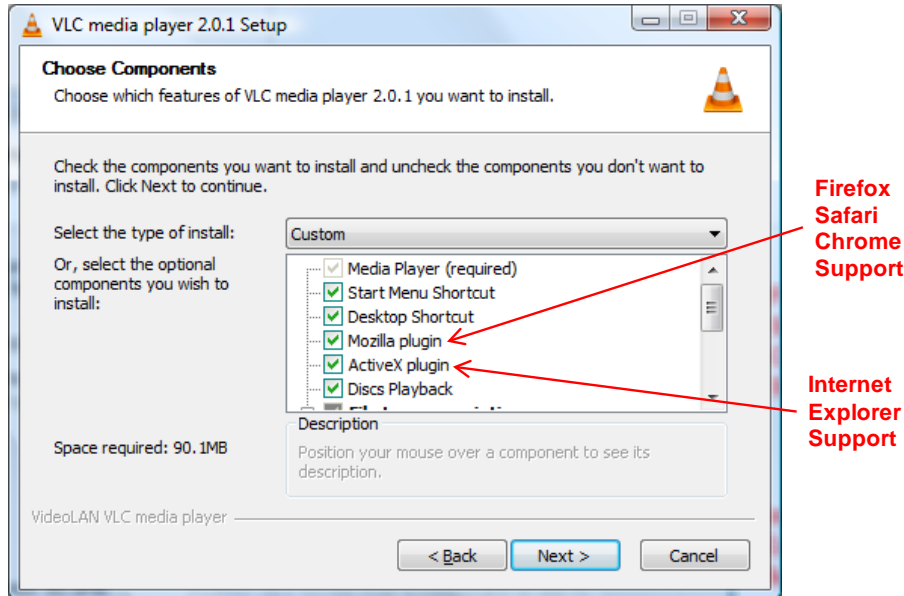

Web Pages Served by the NOVUS

The NOVUS automatically generates web pages that will display the video being encoded, depending on the output mode of the encoder channels (please refer to the Encoder Connections Tab section). The pages will be available for the following output protocols:

- ASI/IP Streaming, as long as IP Outputs with multicast destination IP addresses have been defined.
- Direct HTTP Streaming.
- HTTP Live Streaming, when configured to use the local server.

The web pages generated by the NOVUS assume that the VideoLAN plug-in has been installed to provide playback services.



Direct HTTP Streaming and HTTP Live Streaming pages are also available from the control port.

To get started, simply point a web browser to the IP address of the desired NOVUS Ethernet port:

`http://encoder_ip`

The NOVUS will respond with a Web page with the appropriate links to access the streams, depending on the current configuration. Note that the pages served by each Ethernet port may be different; for example, if the encoders are set to ASI/IP streaming, and no IP Outputs are defined for a given Ethernet port, the web page served from it will indicate that there are no streams available.


The next page shows a few examples of how these web pages look like, depending on the encoder settings.

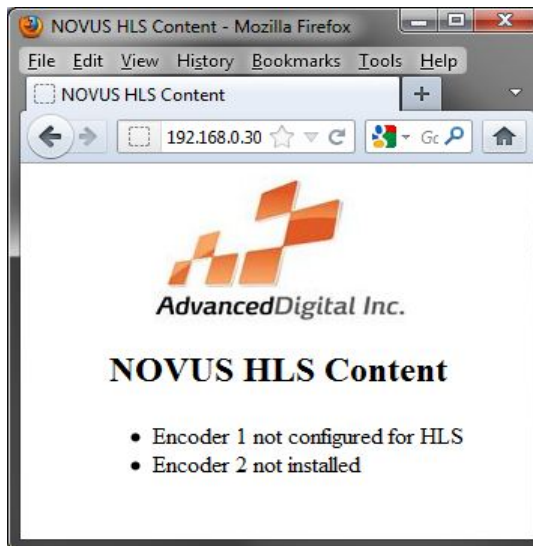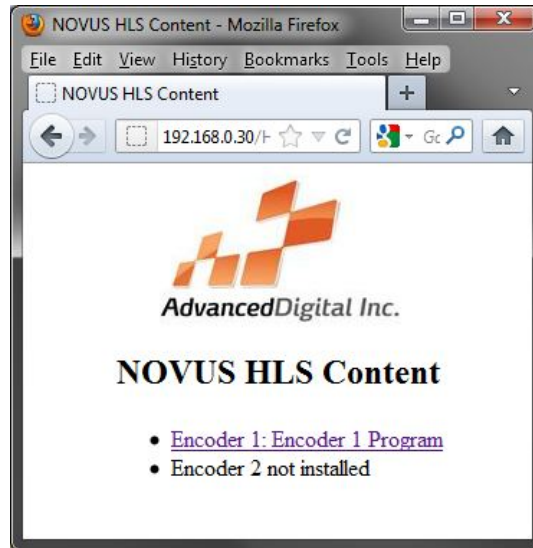

Multicast Streaming

If an encoder is connected to IP Output ports configured for multicast streaming (i.e., with a destination IP address in the range of 224.0.0.0 to 239.255.255.255), the NOVUS will generate a web page for that output in the relevant Ethernet port. Note that the video will only actually play if the network between the client and the encoder supports multicast. This will typically be the case if the encoder and the client are in the same subnetwork, but may not work across routers unless they have multicast support enabled, and will definitely not work across the Internet.


The relevant pages are shown below. Both UDP and RTP are supported.

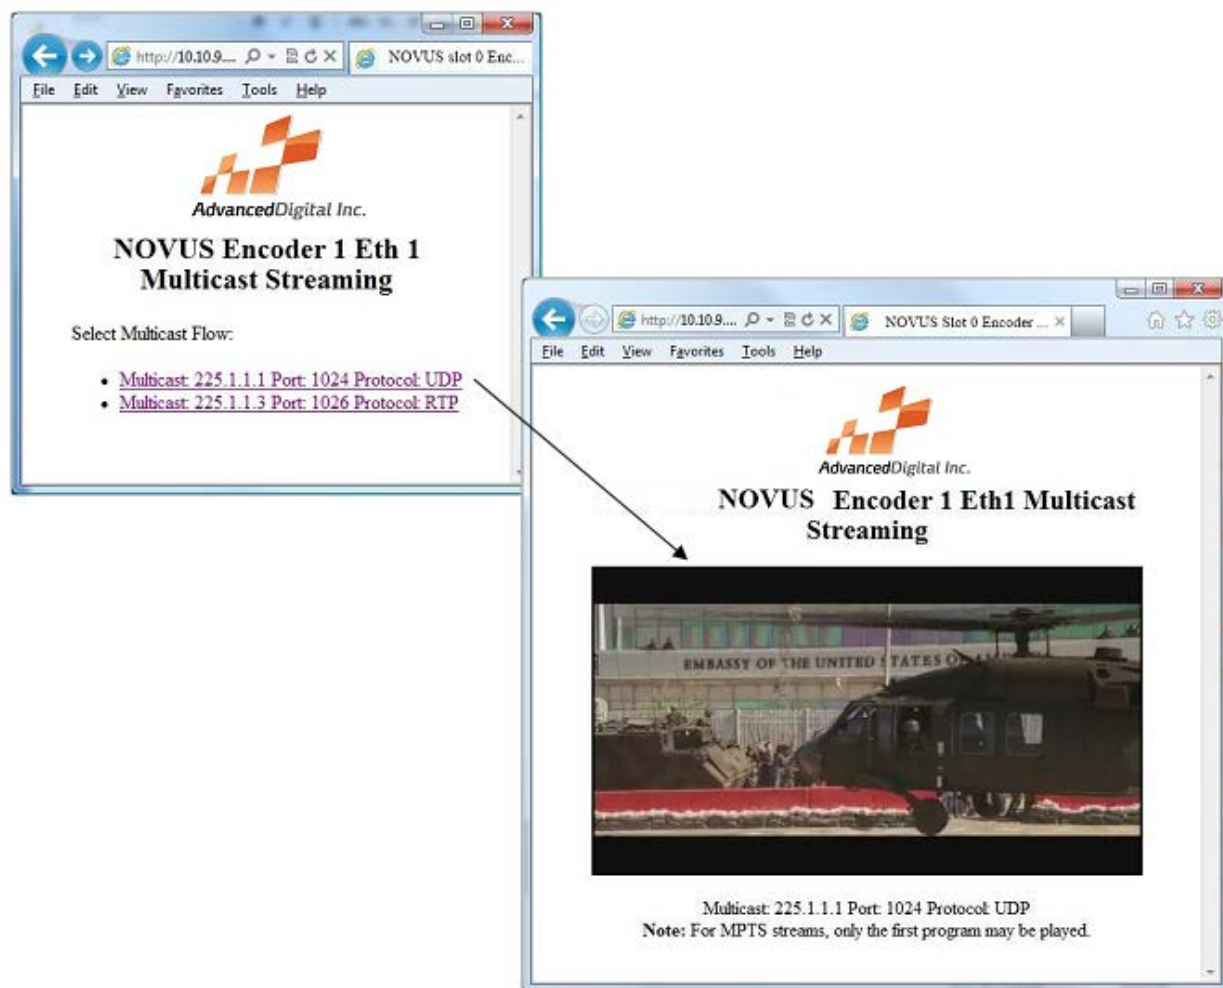

If you configure an MPTS stream (i.e., both encoders routed to the same IP Output), the page will be available for both encoders, but the plug-in will only play the first channel (Encoder 1). Also, the plug-in will only play the first audio PID, even if secondary audio is configured.

HTTP Live Streaming


All the web pages accessible from the Ethernet ports and the Control port of the NOVUS include a link for the built-in HTTP Live Streaming server page:

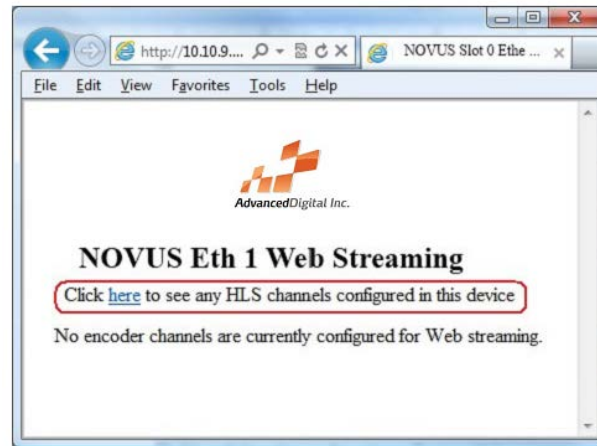

If the IP address of the port being accessed is **xxx.xxx.xxx.xxx**, the available local HLS channels can also be accessed through this direct link:

`http://xxx.xxx.xxx.xxx/HLS/`

The page accessed through this link will display a list of available local HLS channels, with the value configured for **Program Name** as the label:

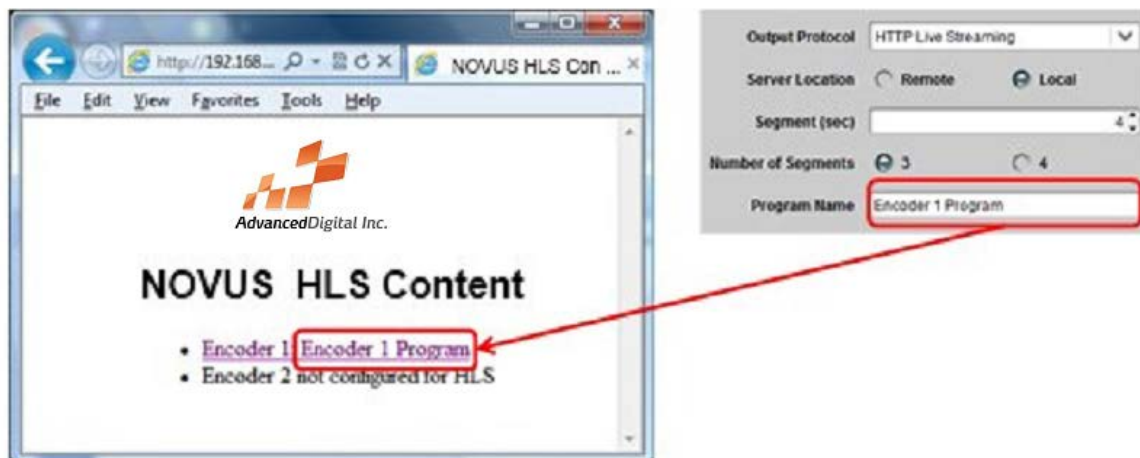


Note that HLS channels configured for remote servers will not be listed in this page, as the NOVUS has no way of knowing the actual link to these channels.

Clicking on the link will cause the content to play. For Apple devices (iPods, iPads, iPhones, etc.), this will launch the built-in media player; for PCs running Windows (and possibly Linux), if the VLC plug-in is installed, the video will play in the web page.

Direct HTTP Streaming

If an encoder channel is configured for Direct HTTP Streaming, the selection happens as depicted below. Unlike multicast, Direct HTTP Streaming will work over the Internet as long as the path from the encoder to the client has sufficient bandwidth. Direct HTTP Streaming is always available on both Ethernet ports.

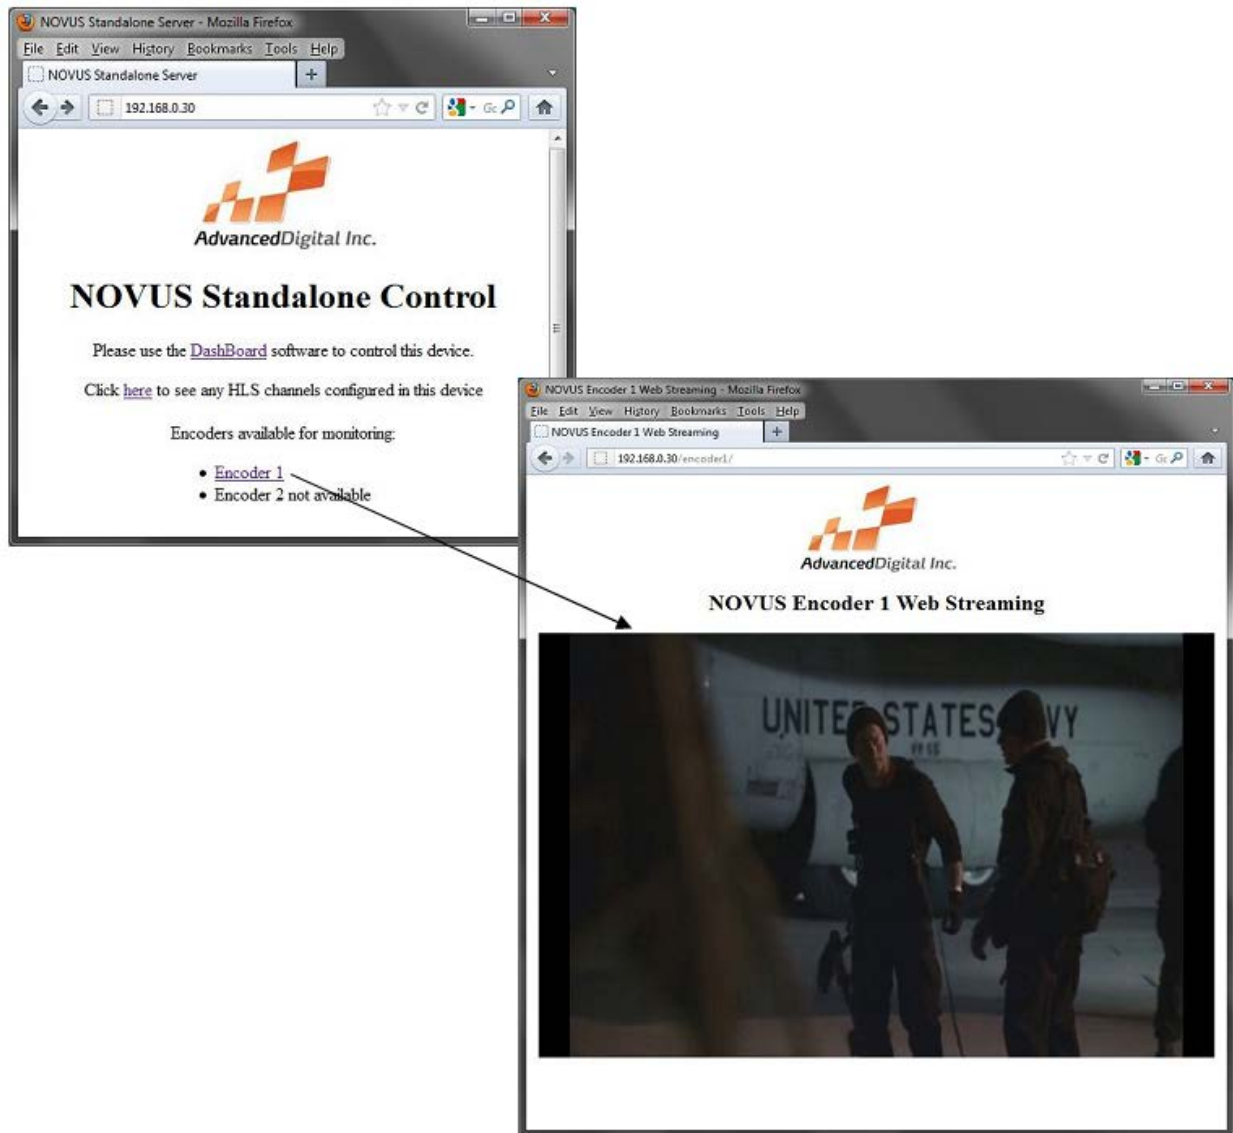

If the NOVUS is required to support clients on remote networks, make sure that a Default Gateway is entered in the corresponding Ethernet port configuration (see the Network Configuration Tab section). When replying to a request, the NOVUS will always use the Ethernet port where it received the request from.

Using a Firewall between the NOVUS and the Internet

Since both Direct HTTP Streaming and HTTP Live Streaming work over the Internet, in some situations it may be desirable to do so (for example, to allow for remote monitoring).

AdvancedDigital believes it is safe to connect the NOVUS Ethernet ports directly to the Internet with a public IP address; however, this may not be desirable. It is possible to place a port-forwarding firewall between the NOVUS and the Internet; the web pages and the streaming will still work as long as the firewall is configured **not** to remap the Direct HTTP Streaming **Listening Port** (see the Direct HTTP Streaming configuration section). For example, if the Listening Port is configured to be 8000, the firewall must be configured to remap external port 8000 to internal port 8000. The reason for this requirement is that the plug-in needs to know the listening port, and that value is passed to it by the automatically-generated pages from the NOVUS.

AdvancedDigital **does not** recommend connecting the Control Ports of the NOVUS directly to the Internet. There is insufficient protection on the openGear and SNMP v2 protocols supported on that port. The Control Ports should only be connected to protected management networks.

Web Browser Support

The web pages generated by the NOVUS are known to work with the VideoLAN plug-in version 2.0.1 to 2.0.5 and the following web browsers (Windows):

- Internet Explorer versions 9.0.2 – 9.0.13
- Mozilla Firefox versions 7.0 – 19.0
- Google Chrome versions 14.0.835.186 – 24.0.1312.57
- Apple Safari 5.1 – 5.1.7

Other browsers and operating systems may work, as long as the VideoLAN plug-in is installed.